4TH PRINT APRIL 2022



Sega Amusements International Limited.
42 Barwell Business Park, Leatherhead Road, Chessington, Surrey, KT9 2NY. United Kingdom.
Telephone: +44 (0) 208 391 8090
mailbox@sega.co.uk segaarcade.com

© SEGA

Errors and omissions excepted (E&OE)

DAYTONA CHAMPIONSHIP USA

OWNER'S MANUA

SEGA®
OWNER'S MANUAL





IMPORTANT

- Before using this product, read this manual carefully to understand the contents herein stated.
- After reading this manual, be sure to keep it near the product or in a convenient place for easy reference when necessary.

INTRODUCTION

This manual is intended to provide detailed descriptions together with all necessary information covering the general operation of electronic assemblies, electromechanical, servicing control, spare parts, etc. for the product, "DAYTONA CHAMPIONSHIP USA".

This manual is intended for the owners and personnel managers in charge of operation of this product. Operate the product after carefully reading and sufficiently understanding the instructions.

In the unlikely event that the product does not function correctly, DO NOT allow anyone other than a technician to touch the internal system. Turn off the power to the machine (making sure to unplug the electrical cord from the outlet) and contact the office listed below or the point-of-purchase for this product.

Use of this product is unlikely to cause physical injuries or damage to property. However, points that require special attention are indicated by bold text, the words "STOP", "IMPORTANT", or "CAUTION", as well the symbols below.



Indicates important information that, if ignored, may result in the mishandling of the product and cause faulty operation or damage to the product.

⚠ WARNING ⚠ CAUTION

Indicates a warning or caution that, if ignored, may result in the mishandling of the product and cause faulty operation or damage to the product.

Sega Amusements International Limited.

42 Barwell Business Park, Leatherhead Road, Chessington, Surrey, KT9 2NY. United Kingdom.

European Sales: +44 (0) 208 391 8090

email: mailbox@sega.co.uk Web: <u>sales@segarcade.com</u>

Play It! Amusements, inc.

870 Lively Blvd, Wood Dale, IL. 60191, USA

General: +00 (1) 847-364-9787
Parts/Spares: +00 (1) 224-265-4287
Tech Support: +00 (1) 224-265-4283

Sega Total Solutions

42 Barwell Business Park, Leatherhead Road, Chessington, Surrey, KT9 2NY. United Kingdom.

Part Sales: +44 (0) 208 391 8060

Definition of 'Site Maintenance Personnel or Other Qualified Individuals

MARNING

Servicing and maintenance work of the contents herein stated should be performed by the SERVICEMAN stipulated as per IEC Standard. Those who do not have technical expertise and knowledge other than the SERVICEMAN are not allowed to perform the work herein stated. Executing aforementioned work by such non-technical personnel can cause serious accidents that may endanger life.

Parts replacement, maintenance inspections and troubleshooting should be carried out by site maintenance personnel or other qualified professionals. This manual includes directions for potentially dangerous procedures which should only be carried out by professionals with the appropriate specialised knowledge.

The site maintenance personnel or other qualified professionals mentioned in this manual are defined as follows:

Site maintenance personnel:

Individuals with experience in maintaining amusement equipment, vending machines, etc., working under the supervision of the owner/operator of this product to maintain machines within amusement facilities or similar premises by carrying out everyday procedures such as assembly, maintenance inspections, and replacement of units/expendable parts.

Activities to be carried out by site maintenance personnel:

Amusement equipment/vending machine assembly, maintenance inspection and replacement of units/expendable parts.

Other qualified professionals:

Persons employed by amusement equipment manufacturers, or involved in design, production, testing or maintenance of amusement equipment. The individual should have either graduated from technical school or hold similar qualifications in electrical/electronics/mechanical engineering.

Activities to be carried out by other qualified professionals:

Amusement equipment/vending machine assembly, repair/adjustment of electrical/electronic/mechanical parts.

SPECIFICATIONS

Installed Dimensions & Specifications per Cabinet

Machine Dimensions: 1.07m (42.1in.) [Width] x 1.67m (65.7in.) [Depth]

Machine Height: 2.25m (88.5in.)

Machine Weight: 245kg Approx (540lbs)

Installed Rating: AC240V - 1.6A

AC120V - 2.5A

313W

Waste of Electrical and Electronic Equipment (WEEE) Statement

The WEEE (Waste of Electrical and Electronic Equipment) directive places an obligation on all EU based manufacturers and importers of Electrical and Electronic Equipment (EEE) to ensure waste equipment is disposed of in accordance with the directive at the end of their useful life.

The symbol shown below will be placed on all products manufactured from 13th August 2005, which indicates this product must NOT be disposed of with other normal waste. Upon purchasing any EEE from SEGA Amusements International Ltd. The user accepts responsibility to dispose of their waste equipment by arranging to return it to a designated UK collection point (AATF) or an Approved Exporter (AE) for the correct recycling of waste electrical and electronic equipment.

For more information on Approved Authorised Treatment Facilities (AATF) within the UK please consult the government website www.gov.uk

For users outside of the UK EEE should be disposed of in accordance with the local policy on the recycling of Waste Electrical and Electronic Equipment.

Battery Recycling Statement

The EC Directive on Batteries and Accumulators (2006/66/EC) aims to minimise the impact of batteries on the environment and encourage the recovery of the materials they contain. To achieve increased collection and recycling of waste batteries, the Directive places 'producer responsibility' obligations on manufacturers and importers of portable, industrial and automotive batteries.

The symbol shown below will be on all equipment fitted with batteries from 26th September 2008 and indicates they must NOT be disposed of with other normal waste. Instead, it is the user's responsibility to dispose of used batteries by arranging to return them to a designated collection point for the correct recycling.

For more information about where you can send your waste batteries for recycling, contact your local authority office.



REGISTERED IN ENGLAND REGISTERED NO. 1711515

REGISTERED OFFICE: BLOCK C 42 BARWELL BUSINESS PARK, CHESSINGTON, SURREY KT9 2NY

BEFORE USING THE PRODUCT, BE SURE TO READ THE FOLLOWING:

To maintain safety:

To ensure the safe operation of this product, be sure to read the following before usage: The following instructions are intended for the users, operators and the personnel in charge of the operation of the product. After carefully reading and sufficiently understanding the warning displays and cautions, handle the product appropriately. Be sure to keep this manual close to the product or in a convenient place for future reference.

Herein, explanations which require special attention are enclosed with dual lines. Depending on the potentially hazardous degrees, the terms of DANGER, WARNING, CAUTION, etc. are used. Be sure to understand the contents of the displays before reading the text.



Indicates that mishandling the product by disregarding this pictograph will cause severe injury or death.



Indicates that mishandling the product by disregarding this warning will cause a potentially hazardous situation which can result in death or serious injury.



Indicates that mishandling the product by disregarding this caution will cause a slight hazardous situation which can result in personal injury and/or material damage.

For the safe usage of the product, the following pictographs are used:



Indicates "HANDLE WITH CARE." In order to protect the human body and equipment, this display is attached to places where the instruction manual should be referred to.



Indicates a "protective earth terminal." Before operating the equipment, be sure to connect it to the ground (this step may be omitted for products in which a power cable with earth is used).

- Perform work in accordance with the instructions herein stated
 Instructions for work are explained by paying attention to the aspect of accident prevention.
 Failing to perform work as per the instructions can cause accidents. In the case where only those who have technical expertise should perform the work to avoid hazardous situation, the instructions herein state that the site maintenance personnel should perform such work
- Be sure to turn off the power before working on the machine

 To prevent an electric shock, be sure to turn off the power and unplug the power cable before carrying out any work that requires direct contact with the interior of the product. If the work is to be performed in the power-on status, the instruction manual herein always states to that effect
- Be sure to ground the earth terminal (this is not required in the case where a power cable with earth is used)

 This product is equipped with the earth terminal. When installing the product, connect the earth terminal to the "accurately grounded indoor earth terminal" by using an earth wire. Unless the product is grounded appropriately, the user can be subject to an electric shock. After performing repair, etc. for the control equipment, ensure that the earth wire is firmly connected to the control equipment
- Ensure that the power supply used is equipped with an earth leakage breaker Using a power supply which is not equipped with the earth leakage breaker can cause a fire when earth leakage occurs
- Be sure to use fuses which meet the specified rating (only for the machines which use fuses)

Using fuses exceeding the specified rating can cause a fire and an electric shock

 Specification changes (removal of equipment, conversions and additions) not designated by SEGA are not allowed

The parts of the product include warning labels for safety, covers for personal protection, etc. It is very hazardous to operate the product by removing parts and/or modifying the circuits. Should doors, lids and protective parts be damaged or lost, refrain from operating the product, and contact where the product was purchased from or the office herein stated. SEGA shall not be held responsible for any accidents or compensation for damage to a third party resulting from the specifications not designated by SEGA

Ensure that the product meets the requirements of appropriate electrical specifications

Before installing the product, check for electrical specifications. SEGA products have a nameplate on which the electrical specifications are described. Ensure that the product is compatible with the power supply voltage and frequency requirements of the location. Using any electrical specifications different from the designated specifications can cause a fire and an electric shock

 Install and operate the product in places where appropriate lighting is available, allowing warning labels to be clearly read

To ensure safety for the customers, labels and printed instructions describing potentially hazardous situations are applied to places where accidents can be caused. Ensure that where the product is operated has sufficient lighting allowing the warnings to be read. If any label is peeled off, apply it again immediately. Please place an order with where the product was purchased from or the office herein stated

 When handling the monitor, be very careful (applies only to products with monitors)

Some of the monitor parts are subject to high tension voltage. Even after turning off the power, some portions are still subject to high tension voltage. Monitor repair and replacement should be performed only by those technical personnel who have knowledge of electricity and technical expertise

- Be sure to adjust the monitor properly (applies only to products with monitors)

 Do not operate the product leaving on-screen flickering or blurring as it is. Using the product with the monitor not properly adjusted may cause dizziness or a headache to an operator, a player, or customer
- When transporting or reselling this product, be sure to attach this manual to the product
- * In the case where commercially available monitors and printers are used in this product, only the contents relating to this product are explained herein. Some commercially available equipment has functions and reactions not stated in this manual. Read this manual together with the specific instruction manual of such equipment

* Descriptions herein contained may be subject to improvement changes without notice

* The contents described herein are fully prepared with due care. However, should any question arise or errors be found, please contact SEGA

INSPECTIONS IMMEDIATELY AFTER TRANSPORTING THE PRODUCT TO THE LOCATION

Normally, at the time of shipment, SEGA products are in a status allowing for usage immediately

after transporting to the location. Nevertheless, an irregular situation may occur during transportation. Before turning on the power, check the following points to ensure that the product has been transported in a satisfactory status:

Are there any dented portions or defects (cuts, etc.) on the external surfaces of the cabinet?

Are castors and adjusters damaged?

Do the power supply voltage and frequency requirements meet with those of the location?

Are all wiring connectors correctly and securely connected? Unless connected in the correct way, connector connections can not be made accurately. Do not insert connectors forcibly.

Do power cables have cuts and dents?

Are all accessories available?

Can all doors and lids be opened with the accessory keys? Can doors and lids be firmly closed?

TABLE OF CONTENTS

INTRODUCTION		
1	HANDLING PRECAUTIONS	1
2	PRECAUTIONS REGARDING INSTALLATION LOCATION	4
	2-1 LIMITATIONS OF USAGE	5
	2-2 OPERATION AREA	6
	2-3 OPERATION AREA - MULTIPLE CABINETS	7
3	PRECAUTIONS REGARDING PRODUCT OPERATION	9
	3-1 BEFORE OPERATION	9
	3-2 DURING OPERATION (PAYING ATTENTION TO CUSTOMERS)	12
4	PARTS DESCRIPTION	14
5	ACCESSORIES	15
6	ASSEMBLY AND INSTALLATION	17
	6-1 UNPACKING THE CABINETS	20
	6-2 JOINING THE CABINETS	22
	6-3 INSTALLING THE BILLBOARD	25
	6-4 INSTALLING MULTIPLE CABINETS	27
	6-5 LINKING THE CABINETS (COMMUNICATION)	28
	6-6 APPLYING POWER	29
7	PRECAUTIONS WHEN MOVING	32
	7-1 MOVING THE MACHINE	33
8	GAME DESCRIPTION	35
9	EXPLANATION OF TEST AND DATA DISPLAY	46
	9-1 SWITCH UNIT	47
	9-2 TEST MODE	48
10	VIDEO DISPLAY	69
	10-1 GENERAL DESCRIPTION	69
	10-2 CLEANING THE SCREEN	70
	10-3 ADJUSTMENT METHOD	71
11	CONTROL UNITS	75
	11-1 CONTROLLER - EXPLODED DIAGRAM	77
	11-2 BRAKE AND ACCELERATOR UNIT	78
	11-3 ADJUSTING/REPLACING THE VOLUME POT	80
	11-4 GREASING	81
	11-5 SHIFT LEVER	82

12	COIN HANDLING	84
	12-1 CLEANING THE COIN SELECTOR	84
	12-2 FAULT FINDING	87
	12-3 ADJUSTING THE PRICE OF PLAY (EXCEL)	88
13	LAMPS AND LIGHTING	89
	13-1 COIN DOOR LAMP	89
	13-2 FOOTWELL LIGHTING	90
	13-3 INNER PANEL LIGHTING	92
	13-4 SEAT RING LIGHTING	94
	13-5 BILLBOARD LIGHTING	95
	13-6 UNDER SEAT LIGHTING	97
14	PERIODIC INSPECTION	98
	14-1 GREASING	100
15	TROUBLESHOOTING & ERROR CODES	101
16	GAME BOARD	106
	16-1 HOW TO REMOVE GAME BOARD	107
	16-2 GAME BOARD CONNECTORS	109
17	DESIGN RELATED PARTS	110
18	PARTS LIST	112
19	WIRE COLOUR CODE TABLE	140
20	SCHEMATIC DIAGRAMS	141

1 HANDLING PRECAUTIONS

When installing or inspecting the machine, be very careful of the following points and pay attention to ensure that the player can enjoy the game safely.

Non-compliance with the following points or inappropriate handling running counter to the cautionary matters herein stated can cause personal injury or damage to the machine.

MARNING

- Before performing work, be sure to turn the power off. Performing the work without turning the power off can cause an electric shock or short circuit. In the case that work should be performed in the status of power on, this Manual always states to that effect
- To avoid an electric shock or short circuit, do not plug in or unplug quickly
- To avoid an electric shock, do not plug in or unplug with a wet hand
- Do not expose power cords or earth wires on the surface, (floor, passage, etc.). If exposed, the power cords and earth wires are susceptible to damage.
 Damaged cords and wires can cause an electric shock or short circuit
- To avoid causing a fire or an electric shock, do not put things on or damage the power cords
- During/after installing the product, do not unnecessarily pull the power cord. If damaged, the power cord can cause a fire or an electric shock
- In case the power cord is damaged, ask for a replacement through where the product was purchased from or the office herein stated. Using the cord as is damaged can cause fire, an electric shock or leakage
- Be sure to perform grounding appropriately. Inappropriate grounding can cause an electric shock
- Be sure to use fuses meeting the specified rating. Using fuses exceeding the specified rating can cause a fire or an electric shock
- Be sure that connections such as IC BD are made properly. Insufficient insertion can cause an electric shock
- Specification changes, removal of equipment, conversion and/or addition, not designated by SEGA are not permitted:
 - Failure to observe this may cause a fire or an electric shock. Non-compliance
 with this instruction can have a bad influence upon physical conditions of the
 players or the onlookers, or result in injury during play
 - SEGA shall not be held responsible for damage, compensation for damage to a third party, caused by specification changes not designated by SEGA
- Do not perform any work or change parts not listed in this manual. Doing so may lead to an accident. If you need to perform any work not listed in this manual, request work from the office indicated in this manual or the point of purchase, or inquires for details
- Be sure to perform periodic maintenance inspections herein stated



- For the IC board circuit inspections, only the logic tester is allowed. The use of a multiple-purpose tester is not permitted, take care in this regard
- Static electricity from your body may damage some electronics devices on the IC board. Before handling the IC board, touch a grounded metallic surface so that the static electricity can be discharged
- Some parts are not designed and manufactured specifically for this game machine. The manufacturers may discontinue or change the specifications of such general-purpose parts. If this is the case, SEGA cannot repair or replace a failed game machine whether or not a warranty period has expired

CONCERNING THE STICKER DISPLAY

This SEGA product has stickers attached describing the product manufacture No. (Serial No.) and Electrical Specifications. It also has a Sticker describing where to contact for repair and for purchasing parts.

When inquiring about or asking for repairs, mention the Serial No. and Name of Machine indicated on the Sticker.


The Serial Number indicates the product register. Identical machines could have different parts depending on the date of production. Also, improvements and modifications might have been made after the publication of this Manual. In order to ensure you order the correct parts, mention the Serial No. when contacting the applicable places.

CONCERNING WARNING DISPLAYS

This SEGA product has warning displays on stickers, labels and/or printed instructions adhered/attached to or incorporated in the places where a potentially hazardous situation could arise. The warning displays are intended for accident prevention for customers and for avoiding hazardous situations relating to maintenance and servicing work.

Some portions of the cabinet contain high voltage and may cause accidents if touched. When performing maintenance, be very careful of the warning displays. It is especially important that any complex repair and replacement work not mentioned herein should be performed by those technical personnel who have knowledge of electricity and technical expertise.

In order to prevent accidents, caution any customer ignoring the warnings to cease and desist immediately.

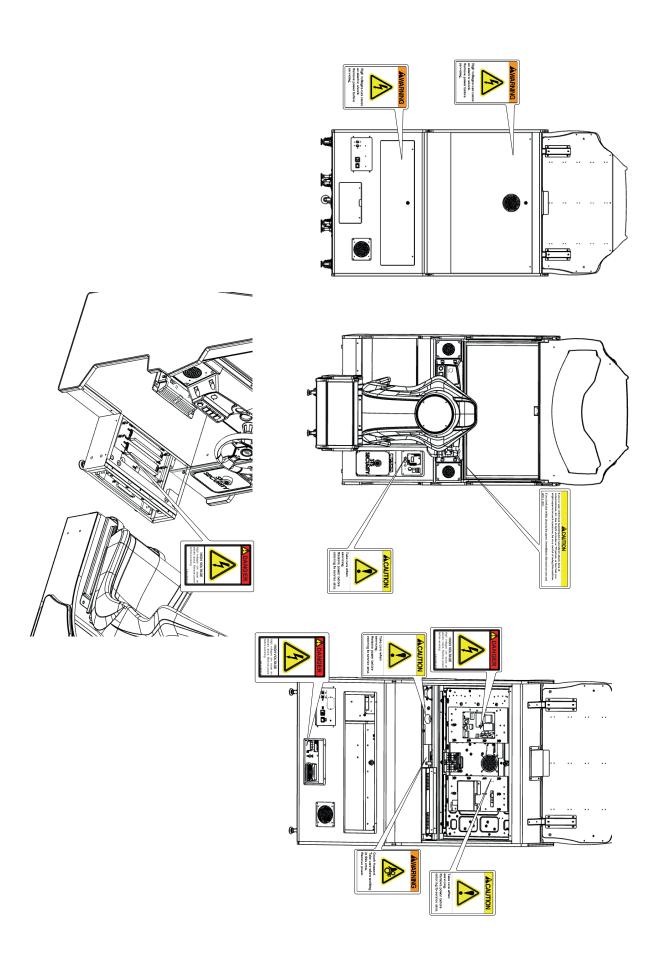

2 PRECAUTIONS REGARDING INSTALLATION LOCATION

⚠ WARNING

This product is an indoor game machine. Do not install it outside. Even indoors, avoid installing in places mentioned below so as not to cause a fire, electric shock, injury and/or malfunction:

- Places subject to rain, water leakage, or places subject to high humidity in the proximity of an indoor swimming pool and/or shower, etc.
- Places subject to direct sunlight, or places subject to high temperatures in the proximity of heating units, etc.
- Places filled with inflammable gas or vicinity of highly inflammable/volatile chemicals or hazardous matter
- Dusty places/areas
- Sloped surfaces
- Places subject to any type of violent impact
- Vicinity of anti-disaster facilities such as fire exits and fire extinguishers
- The operating (ambient) temperature range is not from 5°C to 30°C
- Places near water or spray from water such as a jet wash or swimming pool

2-1 LIMITATIONS OF USAGE

MARNING

- Be sure to check the Electrical Specifications. Ensure that this product
 is compatible with the location's power supply, voltage, and frequency
 requirements. A plate describing Electrical Specifications is attached to the
 product. Non-compliance with the Electrical Specifications can cause a fire
 and electric shock
- This product requires a breaker and earth mechanism as part of the location facilities. Using the product without these can cause a fire and electric shock
- Ensure that the indoor wiring for the power supply is rated at 15 A or higher (AC single phase 100 V ~ 120 V area), and 7 A or higher (AC 220 V ~ 240 V area).
 Non-compliance with the Electrical Specifications can cause a fire and electric shock
- Be sure that the ring main has a rating of 32A (AC220V ~ 240V area)
- Be sure to use an independent power supply equipped with an earth leakage breaker. Using a power supply without an earth leakage breaker can cause an outbreak of fire if a power surge occurs
- Putting many loads on one electrical outlet can cause generation of heat and a fire resulting from overload
- When using an extension cord, ensure that the cord is rated at 15 A or higher (AC 100 V ~ 120 V area) and 7 A or higher (AC 220 V ~ 240 V area). Using a cord rated lower than the specified rating can cause a fire and electric shock

2-2 OPERATION AREA


MARNING

- For the operation of a single machine, secure a minimum area of 2.1m (82.6in)
 (W) x 2.3m (90.5in) (D). If the machine rolls during play it could lead to serious injury. You must secure an area equal to or greater than the space specified in this document
- Be sure to provide sufficient space specified in this Manual. Do not allow objects to block the ventilation ports. Doing so can cause generation of heat and fire
- SEGA shall not be held responsible for damage or compensation for damage to a third party, resulting from the failure to observe this instruction
- If the machine does not fit through the entryway to the installation location, do
 not disassemble it without first consulting the instructions. If the machine still
 does not fit through the entryway after following the procedures in this Manual,
 contact your retailer or the office listed in this Manual

STOP IMPORTANT

To install this product, the entrance must be at least 1.07 m in width and 1.5 m in height.

Secure an area of no less than 2.1m (82.6in) x 2.3m (90.5in) for operation, taking into consideration the safety of the players and spectators of this game.

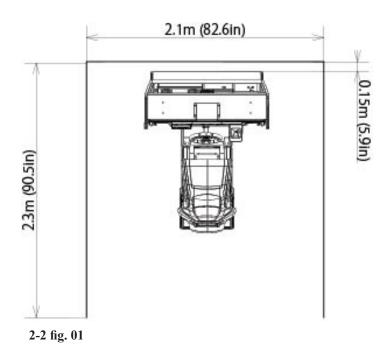

2-3 OPERATION AREA - MULTIPLE CABINETS

STOP IMPORTANT


Secure an area of no less than 3.3m (129in) x 2.3m (90.5in) for operation of the TWIN cabinet, taking into consideration the safety of the players and spectators of this game.

To install this product, the entrance must be at least 1.05 m in width and 1.5m in height.


When installing multiple cabinets, make sure the rules are followed below.


- 1. Keep a distance of no greater than 5mm (3/16in) between each Monitor Cabinet.
- 2. Keep a distance of a minimum of 0.5m either side of the end cabinets.
- 3. Keep a minimum distance of 0.15m at the rear of the cabinet for ventilation.

Two cabinet formation. (Twin)

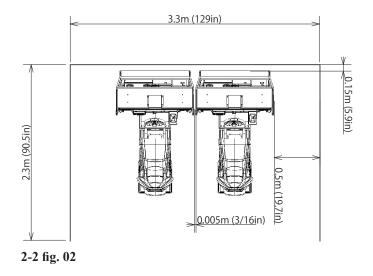

Four cabinet formation.

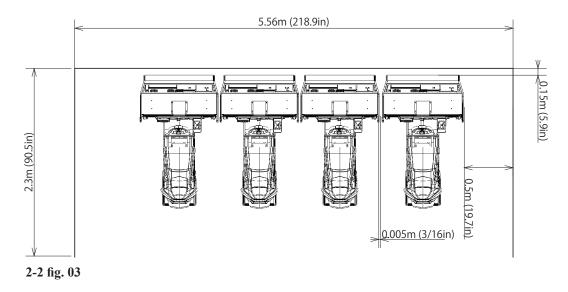

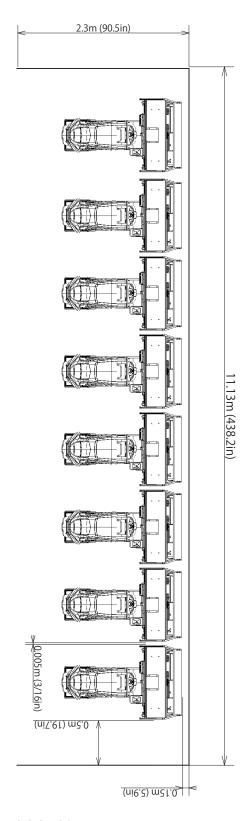

2-2 fig. 04

PRECAUTIONS REGARDING PRODUCT OPERATION


To avoid injury and trouble, be sure to pay attention to the behavior of visitors and players.

3-1 BEFORE OPERATION

⚠ WARNING

In order to avoid accidents, check the following before starting the operation:

- To ensure maximum safety for the players and customers, ensure that where the product is operated has sufficient lighting to allow any warnings to be read. Operation under insufficient lighting can cause bodily contact with each other, hitting accidents, and/or trouble between customers
- Be sure to perform appropriate adjustment of the monitor. For operation of this machine, do not leave monitor flickering or deviation as is. Failure to observe this can have a bad influence upon the players' or customers' physical conditions
- It is suggested to ensure a space allowing the players who feel sick while playing the game to take a rest
- Check if all of the adjusters are in contact with the surface. If they are not, the Cabinet can move and cause potential accidents

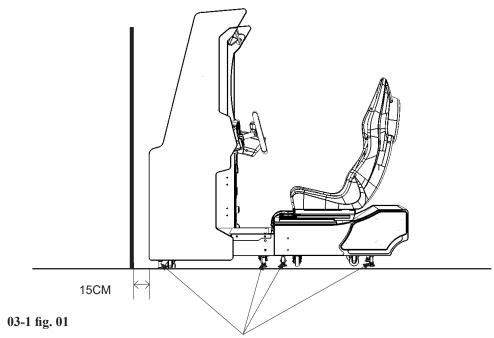


Ensure that all of the 8 adjusters are in contact with the floor. Provide a gap at the back of the cabinet ot no less than 15cm.

⚠ WARNING

- Do not put any heavy item(s) on this product. Placing any heavy item on the product can cause falling accidents or parts damage
- Do not climb on the product. Climbing on the product can cause falling accidents. To check the top portion of the product, use a step ladder
- When using a stepladder or stool while working, do not hold onto the billboard by any electrical components. Holding the billboard in these areas may cause damage, electronic component failure or personal safety issues
- To avoid electric shock, check to see if door & cover parts are damaged or omitted
- To avoid electric shock, short circuit and/or parts damage, do not put the following items on or in the periphery of the product:
 - Flower vases, flowerpots, cups, water tanks, cosmetics, and receptacles/containers/vessels containing chemicals or water

⚠ CAUTION

- To avoid injury, be sure to provide sufficient space by considering the crowd situation at the installation location. Insufficient installation space can cause customers to bump into each other and could cause injury
- Every day when cleaning the Controller (Steering Wheel), inspect the hoop and buttons, making sure that there are no scratches or cracks in the surface, and that the fastening screws are not loose. If the game is played with scratches, cracks, or loose screws, it can cause injuries to the player or to people nearby

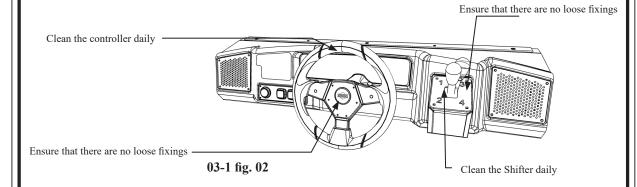

 When you clean the cabinet each day, always make sure that there is nothing placed on the seats and that they are not damp or wet

STOP IMPORTANT

To ensure customers enjoy playing the game, clean the Control Unit regularly.
 If there is any dirt buildup, the hoop may become slippery or tacky, resulting in an unpleasant experience for the player

DURING OPERATION (PATRON CONDUCT)

To avoid injury and unacceptable behavior, be sure to constantly give careful attention to the behavior and manner of the spectators and players alike.

MARNING

- To avoid injury and accidents, those who fall under the following categories are not allowed to play the game:
 - Those who need assistance such as the use of an apparatus when walking
 - Those who have high blood pressure or a heart problem
 - Those who have experienced muscle convulsion or loss of consciousness when playing video game, etc.
 - Those who have neck and/or spinal cord problems
 - Intoxicated persons
 - Pregnant women or those who are in the likelihood of pregnancy
 - Persons susceptible to motion sickness
 - Persons whose actions run counter to the product's warning displays
- A player who has never been adversely affected by light stimulus might experience dizziness or headache depending on his physical condition when playing the game
- Instruct those who feel sick during play to have a medical examination
- To avoid injury resulting from falling down and electric shock due to spilled drinks, instruct the player not to place heavy items or drinks on the product
- To avoid electric shock and short circuit, do not allow patrons to put hands, fingers or extraneous matter in the openings of the product or small openings in or around the doors
- To avoid injury resulting from falling down, immediately stop patrons leaning against or climbing on the product, etc.
- To avoid electric shock and short circuit, do not allow patrons to unplug the power plug without a justifiable reason
- Players should be warned not to place children on their lap while playing the game. Doing so may cause the child or part of the child to become trapped within the working of the machine. i.e. Controller, Seat, Pedals



Never have more than 1 player playing the game at any one time. Having two or more people playing this game at the same time may result in injuries.

3-2 DURING OPERATION (PAYING ATTENTION TO CUSTOMERS)

To avoid injury and trouble, be sure to pay attention to the behavior of visitors and players.


MARNING

- For safety reasons, do not allow any of the following people to play the game:
 - Those who require supporting devices (or the like) to walk
 - Those who have high blood pressure or a heart problem
 - Those who have experienced muscle convulsion or loss of consciousness when playing video games, etc.
 - Those who have neck or spinal cord problems
 - Intoxicated persons
 - Pregnant women
 - Persons susceptible to motion sickness
 - Persons who disregard the product's warning displays
- Even players who have never been adversely affected by light stimulus might experience dizziness or headache depending on their physical condition when playing the game. Small children are especially likely to experience these symptoms. Caution guardians of small children to keep watch on them during play
- Instruct those who feel sick during play to have a medical examination
- To avoid injury from falls and electric shocks due to spilled drinks, instruct the player not to place heavy items or drinks on the product
- To avoid electric shocks and short circuits, do not allow customers to put hands and fingers or extraneous matter in the openings of the product or small openings in or around the doors
- To avoid falls and resulting injury, stop the customer from leaning against or climbing on the product, etc.
- To avoid electric shock and short circuit, do not allow customers to unplug the power plug without a justifiable reason


3


⚠ CAUTION

- Immediately stop such violent acts such as hitting and kicking the product.
 Such violent acts can cause parts damage or falling down, resulting in injury due to fragments
- Two or more players must never be allowed to play using a single Control Unit. Playing in such a way could lead to physical injuries
- Players should be warned not to place personal effects or other objects on the base of the machine. If the safety sensor fails to detect these items, the motion of the machine may cause them to fly out and strike other patrons
- Players should be instructed to adjust the seat by moving it forward or backward to fit their body size before playing the game. Playing the game in an unnatural position can lead to unforeseen accidents
- Persons other than the player should not be allowed to touch the controls during play. They may brush against or collide with the controls or the player, possibly resulting in accidents
- Player should be informed/instructed to consider their environment before adjusting the seat

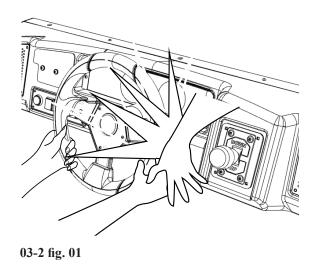


4 PARTS DESCRIPTION

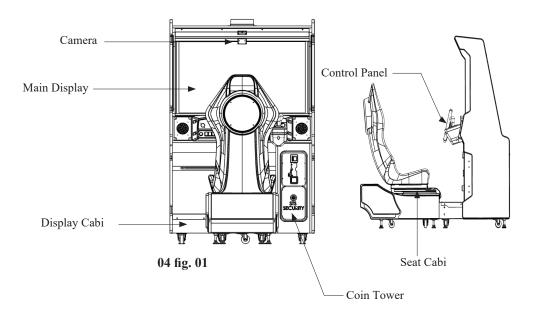

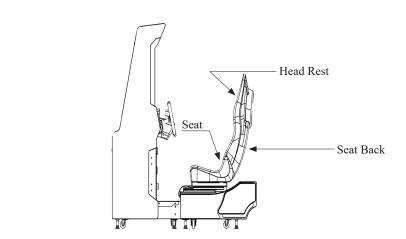

04 fig. 02

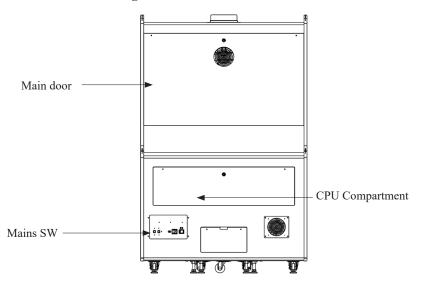

04 fig. 03

5 ACCESSORIES

Confirm that the accessories listed on this page are present when setting up the product. Accessories marked "Spare" in the note column are consumable items but included as spares.

 
OWNER'S and SEVICE MANUAL 420-0028-05UK (1)

This manual



05 fig. 01

POWER CABLE LM1227 (1) <UK> LM1246 (1) <European> LM1550 (1) <America> For installation, see chapter 6




05 fig. 02

KEY

(2)

 
For the cashbox door (Attached to the Steering Wheel at time of shipment)



05 fig. 03

MASTER KEY 220-5575UK (4)

 For opening/closing the doors (Packaged with this manual, in the box supplied with the product)



05 fig. 04

STICKER SHEET C EPILEPSY MULTI 440-CS0186UKUK (1)

Multilingual caution label - epilepsy seizure (English version fitted as standard)

Please see "Introduction" section of this manual for label positioning.

ACAUTION	A ADVARSEL!
discontinue use and take a next. Microscope	atterprise reprises my larger of think.
AATTENTION	À VAROITUS!
elimates electrique ou d'un providéte, de 6 vicus congress d'un moite, faites bies effection bonque vous	Supernemental/Asset for publish following circles, one
incredibiliament de jouer et represei visue.	palaaminen väittömästi ja mene tapäämään. ₁₈₀₀
A VORSICHT	ARPOZOXHI
colone hat size die Baltinitrony bestatit, best dererlige Sproptiere auflieben blieben, auflier für bei der Verwendung der Westliche	Ear publics may proped on exponenties of the regard appearance with parameters of public to promoting series
to do type other one age: to one Autopose on.	Sendon spine, is print on Samperson.
A ATTENZIONE	A ADVARSEL!
The set of a senior bending senior self to effective	
	-Nets du offer bette dies har appliesel krampetrokringen.
spitalitar a paralla di consecuenza direcali e ultimati	becombelology offer Spranck som en blige av Loublinsk ofter Charact, edge Solder at dess ben Scotte automatic
epitelloi a perdita di concerna dirruit e ulimeti tuminasi e e rideograpiri o temete di essere enggetti e tali essitano estato l'una diffin transitiria.	becombelology offer Spranck som en blige av Loublinsk ofter Charact, edge Solder at dess ben Scotte automatic
aphable a perilla di consecura direali e olimpii luminosi e e videograpii o famole di essere srappiii e lari probavo, evitare l'uso delle massistre.	benterheining other lignorests own an folige on boardinest other Propilly, other hydron of does born to other eproprome har does whole other removable) and break on distinct most
epholisi a prodia di concessora direati e olimeti luminazi e a cidasporiti e lamele di escesi engami e lati probami, evitari i'uno delle manchina.	besteithelding ofter ligerands som at bligg av (positival) ofter Through, other trydner at deep kan til other appropriate ber dere offere ofter removaled and foreit are denne medit often de other other other bestein and other other other
aphelia a profita di concentra direali e direali	berkelbelding ofter Sprande som av Mige av Spatistell ofter Fragili, etter trydeer at dens kan di otte aproprome har dens utstar ofter remonstell odd brak av dense medi
epitable i proble è conscienza disord è siteati l'actional è a l'adequatric è sonne di escent segont a lei problem, evitani l'ann delle massime. · le durante il giuce si si sente main, amelliure il giuce e riprosers.	beninshirting ofter Specials was an beginn a building of building after Things, other System of their box it acts appropriate bar date whiten ofter reasonable and land as desired manifest in the desired bearing their false goes and as date upon and date until Mellind advised applied up to or passes.
injustable a profile if a concentrate throat a stimed bushward as a stimular discover integral is tall profilent, extract four attack traceform. It is discovered by global of another main, streetform is global as represent.	the contribution of the Tagenste can an large or specified after 1744 and 1644 and 1
equilibrio à protito di conscienza timosi i criminali luminose i a civilipporti o timosito di conscienti reggiori i sind protitori, crimo i rice della finazioni. I di divestio il giuno di si sonte male, sontifore il giuno a reggiorate. A PRECASCION	Secretaristics of the secretarist of the part of the secretarist of th
equitable is provide all consequences through a climated between the experiment of the content required to the content required to the content required to the content required to the content content of the content of	beneathwhite ofth ligenish and no high or bushind after Though of higher of the his time purposes has the wholer offer remarked not for the arm has the wholer offer remarked not for the other and the unstablished who
exhibition a persion of commission broad a climate because it is inflament to channel communication of the last problem, exhalt from this metallism. It is desired to give a proposers. A PRECAICON 1. It willed to go high to purchase on all proposers or constructions. A persion on all proposers or constructions. A persion on all proposers or constructions. A persion of proposers or this persion constructions. A persion of commission or constructions. A persion of commission of constructions. A persion of commission or constructions. A persion of commission or construction of commission or construction.	becombinished offer ligenome want on higher to fundamental time. Though of these this clear properties that the first the application to the first the support of the first that the description and the substant of the first that the
equitable is proble of commissions broad a disregal commission a si eliminari in section of commissionagement in the commission of the commissional commissional in commissional commissional commissional commissional A PRECASCION To extend a to high fine admission on in parameter out findings and the commissional commissional commissional commissional problems of the commissional commissional commissional The extends a too high fine admission on in parameter out findings on extensional data have a jumper on the parameter out findings on extensional data have a jumper on the parameter of these and the commissional commissional commissional commissional commissional consideration and commissional commissional commissional considerational commissional commis	because the property of the pr
exclusion is provided in commissional animals or simular submission as a submissional company to the department of places of all such controls, submission in processors. **A PRECALCION** **In stated as to high to activities on a passion on submissional particular submissional controls on the passion of proper controls on the passion of processors of the passion of proper submissional passional controls on the passion of passional passional passional passional passional passio	because the property of the pr
equitable is provide of commissional broad's offening because it is offening only on the commissional commission of the last providence, evident if one offen inscending, in the discrete large commissional commissional process of an extensional process of a commissional process commissional	because the property of the pr
exclusion is provided in connectional sectorial or similar terminal explanation in committee and committee in the department of plane of all section made, sections if given or in procession of the committee in the committee of planes. A prescription of all section made, sections in the prescription of the committee of the committee of the committee of the committee of the committee of the committee of the committee of the committee of the committee of the committee of the committee of the committee of the committee of	benefationing of the special or an an Mag or pushioning with the special or an an Mag or pushioning with the special or s
whether is writted it continues that of stated it and a produce of their real to management of the produce of their real to management of their real to the produce. A PRECALCION 1 is already to the produce of their real to t	bereichnige der gewicht eine in Nige is bestätigt wir der Vertige
A PRECAUCIO To del Accidente del Constitución de la estade de la produce estado i constitución de la constitución de la produce estado i constitución de la constitución del constitución de la constitución del c	Service of the control of the contro
A PRECAUCH To entire a support of the support of t	International Conference on the Water of Section Conference on the Water Office Con
Section of the control of control control of the control of control co	the relativistic parties are in the late of scalarity in the late of the late
A PERCACAÇÃO A	Seminating the Semination of t
Section of the control of control control of the control of control co	the relativistic parties are in the late of scalarity in the late of the late


05 fig. 05

Network (Lan) Cable (2m)
For linking a twinned cabinet for network play.



05 fig. 06

The parts listed in Table 5b are needed to finalise the installation. These are traditionally parts that are applied by the customer at location. Please take a moment to check the contents. If for some reason some the parts are not present, call your local office along with the machine serial number to arrange for the relevant parts to be sent to you (PLEASE NOTE THAT SOME ITEMS ARE ALREADY FITTED TO LOCATION TO AID INSTALL)

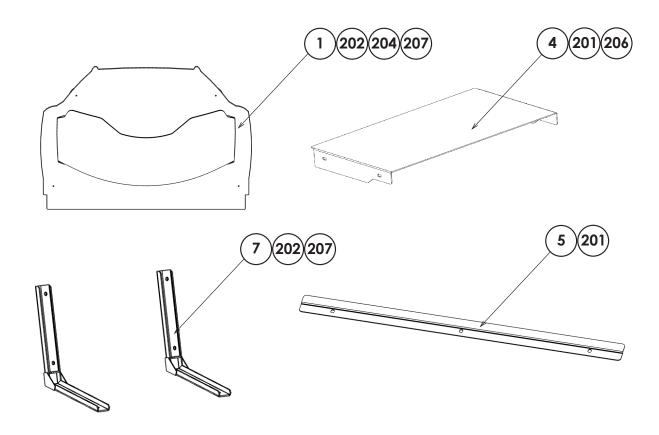

ITEM NO PART NO		DESCRIPTION	REFERENCE	QTY
**1	DA-7800UK	ASSY BILLBOARD		1
**4	DA-7053UK	FOOTWELL LID	FITTED IN SITU	1
**5	DA-7054UK	SASH FOOTWELL LID	FITTED IN SITU	1
**7	DA-7011UK	MOUNT BILLBOARD CABI		2
**201	029-B00425	M4X25 SKT BH PAS		7
**202	029-B00625	M6X25 SKT BH PAS		11
**204	060-S00600	M6 WSHR SPR PAS		3
**206	068-441616	M4 WSHR 16OD FLT PAS		7
**207	068-652016	M6 WSHR 200D FLT PAS		11

6

⚠ WARNING

- Perform assembly work by following the procedure herein stated. Failure to comply with the instructions can cause electric shock
- Perform assembling as per this manual. Since this is a complex machine, incorrect assembling can cause an electric shock, machine damage and/or improper functioning as per specified performance
- When assembling, more than one person is required. Depending on the assembly work, there are some cases in which working by one person alone can cause personal injury or parts damage
- Ensure that connectors are properly connected. Improper connections can cause electric shock
- Be careful not to damage any wires. Damaged wires may cause electric shock or short circuit or present a risk of fire
- This work should be carried out by site maintenance personnel or other qualified professionals. Work performed by non-technical personnel can cause a severe accident such as electric shock. Failing to comply with this instruction can cause a severe accident such as electric shock to the player during operation. If no one with proper technological expertise is available, request service from the office indicated in this document or the point of purchase so as to ensure safety
- Provide sufficient space so that assembling can be performed. Performing work in places with narrow space or low ceiling may cause an accident and assembly work to be difficult
- To perform work safely and avoid serious accident such as the cabinet falling down, do not perform work in places where step-like grade differences, a ditch, or slope exist
- Do not leave power cords or ground wires exposed in areas of heavy foot traffic. Doing so may cause them to become damaged, possibly resulting in electric shock and/or short circuits. When laying wiring across the floor, always use safety covers to protect the wires (wiring diameter: power cable - approx. φ 8)
- Have a flashlight or another supplementary lighting unit available while working. With indoor lighting alone, the cabinet interior may be too dark. Working without proper lighting can lead to accidents. It also hinders proper work performance
- The cabinet has ventilation ports. Be sure not to block them. If they are blocked, heat can build up, leading to fire. This can also accelerate wearing of parts and malfunctions
- Secure ample ventilation space around the cabinet. If heat builds up, there could be accidents associated with heat or smoke generation
- This product does not use any connectors other than those connected to and used by the game board when it leaves the factory. Do not needlessly connect wires to unused connectors. This could lead to overheating, generation of smoke and burn related injuries

⚠ CAUTION

- Handle molded parts with care. Excessive weight or pressure may cause them to break and the broken pieces may cause injury
- To perform the operation safely and accurately, use a safe, steady footstool or stepladder. Working without this may lead to a fall and possible injury
- Attempting to forcefully connect the incorrect connector or connecting a connector at the wrong angle or facing may damage the connector and could lead to overheating and burn related injuries
- When attaching or removing doors or lids, be careful that your hand or finger does not get caught in anything

STOP

IMPORTANT

- Be very careful when handling LCD screen. The screen can be damaged easily and cannot be repaired once damaged. Such damage can only be repaired by completely replacing the screen
- Be careful not to damage parts surfaces. In some cases, if such surfaces are damaged, the part must be replaced; it cannot be reinforced or repaired

 
The assembly of this product is performed in the following 6 steps:

- 6-1 UNPACKING THE CABINET
- 6-2 JOINING THE CABINETS
- 6-3 INSTALLING THE BILLBOARD
- 6-4 INSTALLING MULTIPLE CABINETS (COMMUNICATION)
- 6-5 LINKING THE CABINETS (COMMUNICATION)
- 6-6 APPLYING POWER

Tools Required for Assembly Operation



- Philips screwdriver (for M4, M6 screws)



- Hex Drive for (M4, M6 & M8 screws)



Locking Step Ladders



 
- A torch or any additional lighting




- A wrench or 24mm Spanner



- Machine Keys (Supplied)



100Mb Network Switch (Required for linking 3 or more cabs (Sold separately)

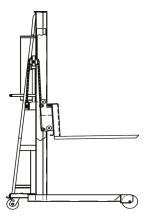

- Lifting equipment capable of lifting a weight of 250kg

6-1 UNPACKING THE CABINETS




- Be very careful when removing the Monitor and Seat cabinets from the pallet.
 Use only hydraulic lifting equipment such as a fork lift. Some parts weigh in excess of 200Kgs. DO NOT attempt to remove the machine from the pallet by hand. Doing so may result in serious personal injury and/or damage to the cabinet and its components
- There are 2 "LIFTING POINTS" highlighted on the lower front and rear parts of the machine by a symbol. Always use these points when lifting

Display Cabinet

This product is delivered as 3 individual components. 2 x Pallets for the two ASSY DISPLAY CABINETS and a single pallet for both ASSY SEATS. Take care when removing the machine from it's pallet. Only use appropriate lifting equipment such as a Fork Truck or similar lifting equipment. DO NOT attempt to remove by hand. Removing this product from its pallet by hand can cause severe injury and/or damage to the product and surrounding area.


The plastic outer covering is specially designed to fix the cabinet to the pallet. Once the plastic covering is removed, the machine will no longer be held securely to the pallet.

Remove the cabinet from it's pallet by approaching it from the rear. Using lifting equipment, carefully lift the machine up enough so that the pallet can be dragged from beneath it.

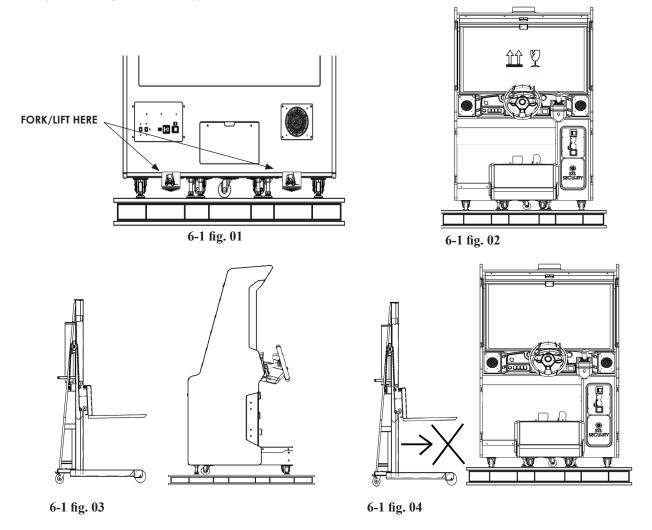


Seat Cabinet


The ASSY SEAT CABI are packed as pairs along with the INSTALLATION KIT. Like the DISPLAY CABI, the ASSY SEAT CABI's are attached to the pallet by means of a strong clear bag which is shrunk down to fit the contents within. Using a blade or scissors, carefully cut away the bag, from around the top edge of the pallet, taking care not to damage its contents.

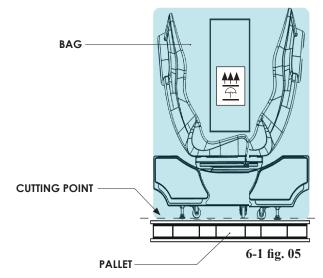

Using (2) people, carefully lift and remove the INSTALLATION KIT which rests across the top of the SEATS. DO NOT attempt to remove the INSTALLATION KIT single-handedly. Removing the Installation Kit single-handedly may result in either damage to components and/or personal injury.

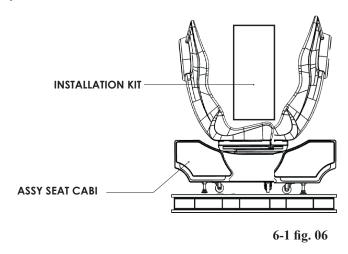


Remove the ASSY SEATS from the pallet using adequate lifting equipment. Failing to use such equipment may result in damage to components or personal injury.

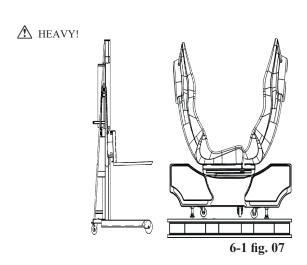


6-2 JOINING THE CABINETS

It is important that a suitable location is secured to enable installation to be carried out safely. *Please refer the beginning of this manual for Operational Area.*

Remove the FOOTWELL LID that is attached in situ by removing the (2) M4X25 fixings on both sides. Remove the FOOTWELL SASH by removing the (3) M4 fixings. These will be reapplied later

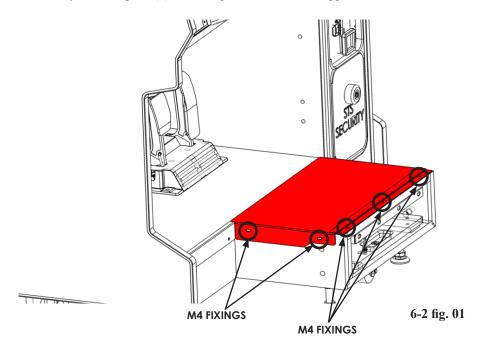


Align the Monitor Cab and Seat Cab. Connect the harnesses between the ASSY SEAT CAB and the ASSY MONITOR CAB

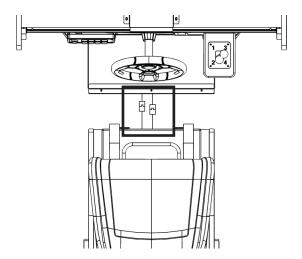


6-2 fig. 02


Carefully push the ASSY SEAT CABI up towards the ASSY MONITOR CABI, taking care not to trap any harnesses

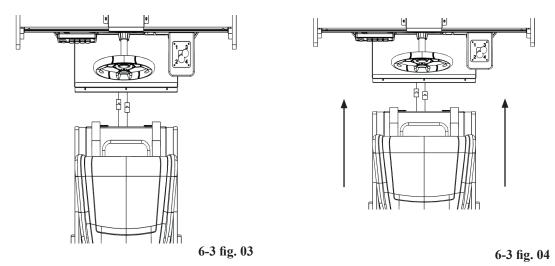

Once the SEAT CAB and MONITOR CAB are together, secure them using (4) M8 fixings in the positions illustrated below

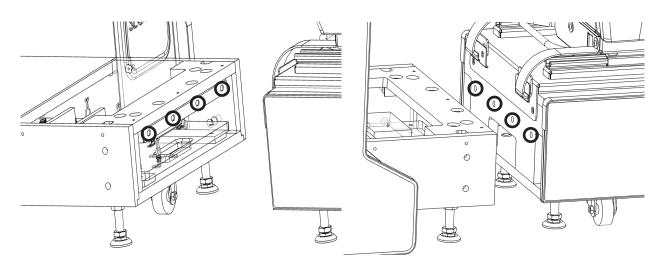



6-3 fig. 05

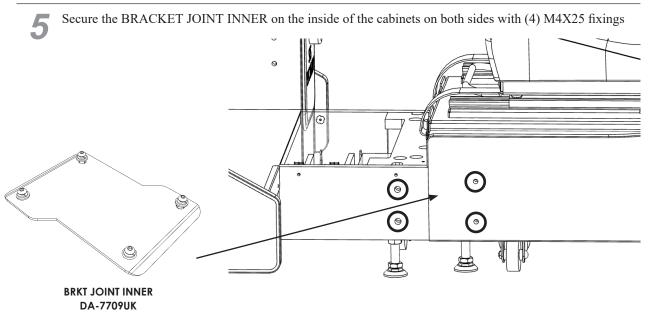


6-2 fig. 06

Note: to correctly fit the bracket, it must be inserted through the cut-out hole and then secured into place

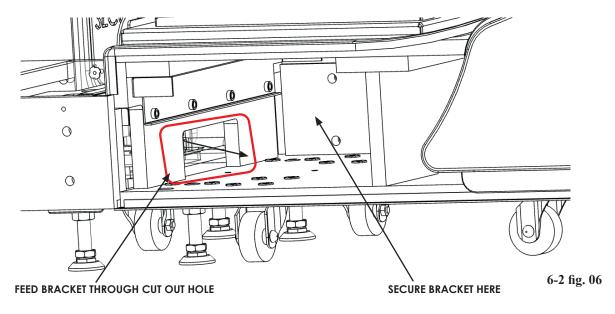

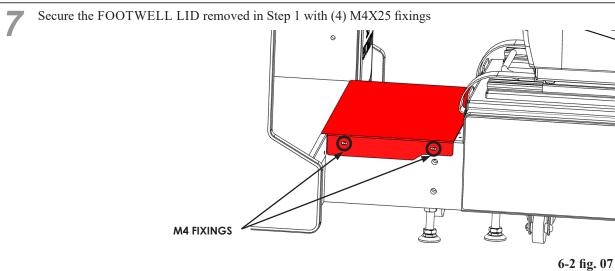


Secure the FOOTWELL LID SASH removed in Step 1 with (3) M4X25 fixings

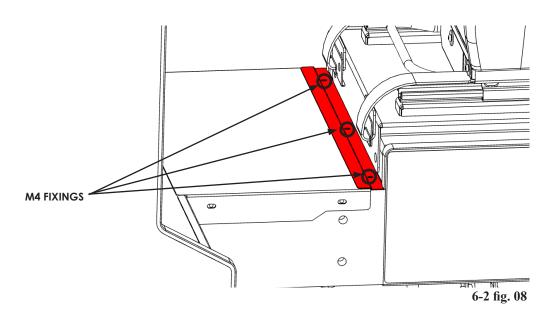


6-3 INSTALLING THE BILLBOARD


Attach the BILLBOARD MOUNT BRKTS using (2) M6X25 fixings on each bracket

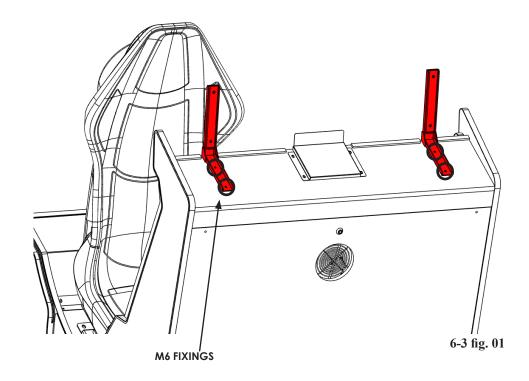


2 Mount the ASSY BILLBOARD by inserting the BRKT BILLBOARD over the BILLBOARD MOUNT BRKT

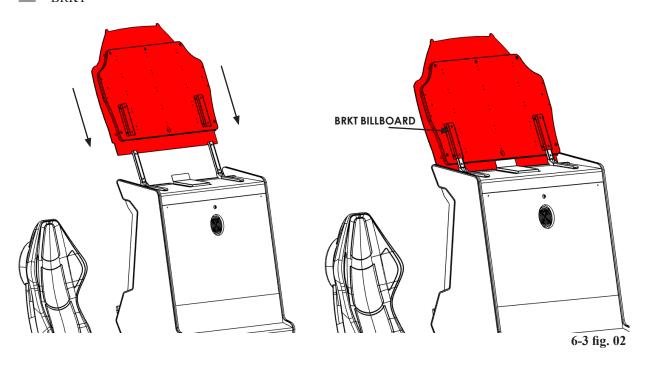

Secure the BILLBOARD in place using (2) M6X25 fixings on each bracket

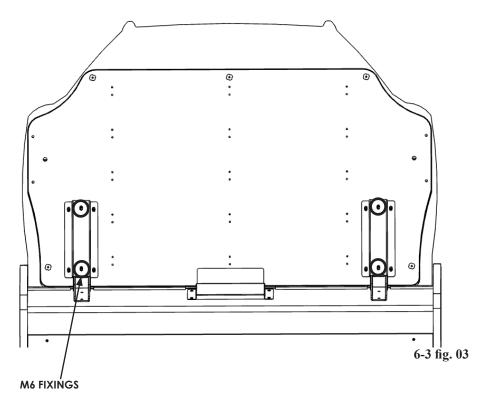

Secure the BILLBOARD BUMPER in place by inserting either the left or right side, then gently bending the bumper into position on the opposite side. Secure with (2) M4x50 fixings (1 on each side)

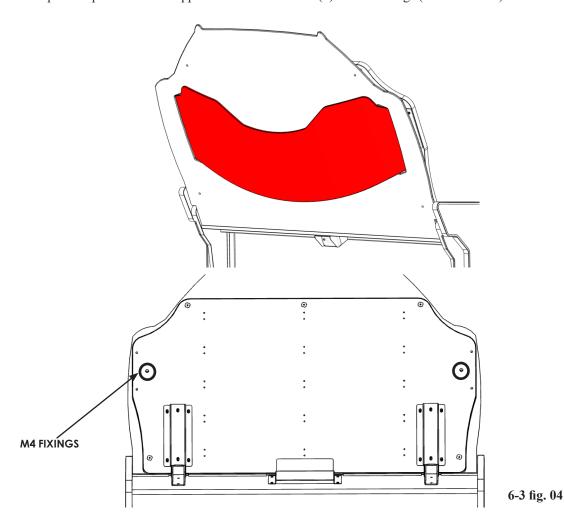


6-4 INSTALLING MULTIPLE CABINETS

It is important that a suitable location is secured to enable installation to be carried out safely. *Please refer the beginning of this manual for Operational Area.*

For this exercise we will show the procedures for installing (2) cabinets. This will reflect the procedures for installing 4, 6 or 8 cabinets.


1

Carefully place (2) car units into position. Follow the guidelines in the OPERATIONAL AREA in the beginning of this Manual

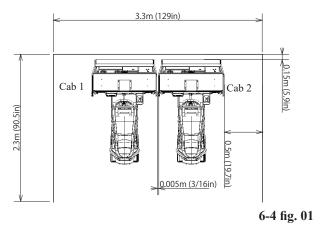

STOP IMPORTANT

Each cabinet has it own dedicated mains power input. Only use the power leads supplied with this machine. When connecting 4 or more cabinets together, please refrain from using Multi-socket extension cables. DO NOT place more than 2 units in a single Multi-socket extension cable (not supplied). Connecting more than 2 units in a single power extension cable may overload the circuit and cause possible electrical damage or even fire.

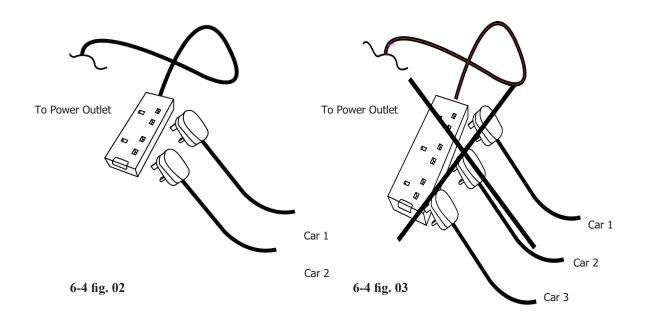

6-5 LINKING THE CABINETS (COMMUNICATION)


When installing two or more cabinets, it is recommended that they be linked together via a Network cable (supplied) to encourage multiple play, whereby players race together in the same race. Note: The provided LAN cable will connect two cabinets only. To connect 3 or more cabinets, a network switch and multiple LAN cables are required. A network switch is not included in the installation kit but can be purchased through Sega on request.




IMPORTANT

When powering the machine on for the first time, be sure NOT to have the network cables connected. Having the network cables connected when powering up for the first time will cause a network malfunction and incorrect IP addresses will be assigned

- Make sure the ASSY BILLBOARD is fitted and all connections made (see the beginning of this chapter)
- 2 Apply power to the cabinet and enter the TEST menu using the TEST SW located behind the coin door on the credit board
- 3 Select NETWORK SETTINGS > CABINET ID. Assign ID 1 to the first cabinet, ID 2 to the second cabinet and so on
- Select NETWORK SETTINGS > TOTAL LINKED CABINETS. Assign the number of total cabinets to be linked in the network
- Confirm changes. The Game BD and BILLBOARD will reboot. Repeat steps 1 to 5 until all cabinets within the network are assigned identification
- Using the LAN Cable (supplied), connect each cabinet network port situated on the AC Bracket together. The example below shows a typical set up. To connect 3 or more cabinets using a network switch (sold separately), see 6-5 Fig 2 & 3. A maximum of 8 cabinets can be linked together

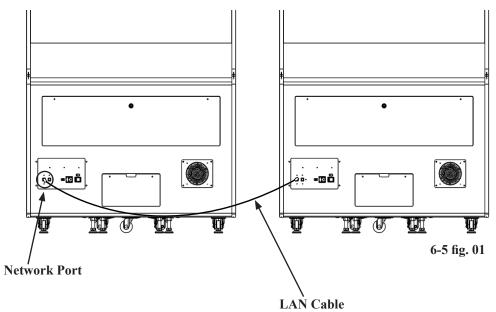

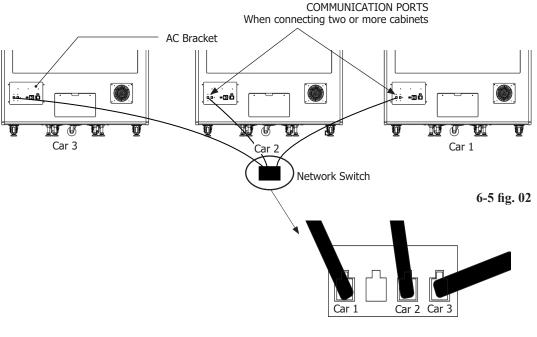

6-5 fig. 03

6-6 APPLYING POWER



Each cabinet has it own dedicated mains power input. Only use the power leads supplied with this machine. DO NOT connect more than 2 units in any one extension power lead. Using power leads not supplied with this product may cause on overload situation resulting in overheating, power failure or possibly fire hazard

MARNING


- Use the power supply equipped with an earth leakage breaker. Use of power supply without such a breaker could result in fire if there is a current leakage
- Do not expose the power cord or ground wire. If these are exposed, customers could stumble over them, for instance, and easily damage them. Additionally, if these lines are damaged, there could be a risk of electrical shock or short circuit. Set these lines at locations where they will not interfere with customer traffic, or attach covers to them
- After laying out the power cord on the floor, be sure to always protect it.
 If the power cord is left exposed, it can easily be damaged, resulting in electrical shock
- This product must only be used within the countries that it has been designed for. If the information within this section does not appear to match your electrical requirements then please contact the offices where purchased before applying power

MARNING

- Proceed with checks and tasks as indicated in these instructions. If
 instructions are not followed, or if tasks and/or checks are neglected, an
 electric shock or other very serious accident, even fatal accident, can
 occur. Also, customers could be injured while operating the product
- For safe operation, inspect and check the operation of each part of the product when turning on the power. If any defects are found, deal with them immediately. Never operate the product with defects still present


The AC units are attached to the rear of the ASSY MONITOR CABINET.

- Main switch
- Inlet for power cable connection
- Network (RJ45) for communication play.
- Fuses and fuse holder

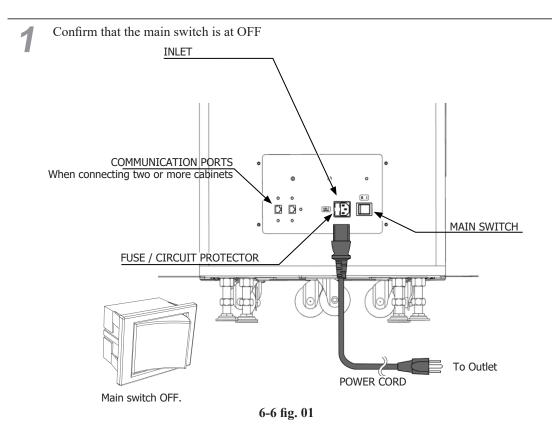

- Fully insert the power cord connector on the side opposite the power plug into the AC unit inlet
- The power cord is laid out indoors. Protect the power cord by attaching wire cover to it.

 If ground will be established with a ground wire made available separately, lay out the ground wire indoors and have it protected

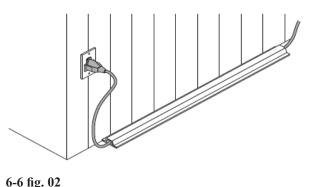

STOP) IMPORTANT

After starting the initialization operation, wait until the advertising screen is displayed or until an error screen is displayed due to the detection of an error. If switches, etc. are inadvertently operated, faults or parts damage may occur

- Reinspect the assembly work, paying special attention to the points below. Finally, check that there are no persons near the cabinet. Have all the adjusters been properly grounded, and are no casters contacting the floor surface? Have all power cables been connected correctly? Have the covers/doors been refitted to the cabinet? Have all fastening bolts and screws been tightened? Have any foreign objects been placed near the seat, or have any tools or spare screws, etc. been left on or in the product? Have any foreign objects been placed near the steering wheel?
- Turn the main switch, located on the rear of the cockpit ON. This sends power throughout the product. Following the order below, output locations will activate. 1) WINDOWS/SEGA logo is displayed on LCD screen. 2) Steering Wheel calibrates moves fully left/right then returns to the centre position. 3) Intercabinet communication check (in case of communication connection setting). 4) The Game loading Screen appears on screen. 5) Game attract sequence begins
- If (after the initialization operation ends) the steering wheel is not at its center position (facing straight ahead) for example, re-engage the power and conduct the initialization operation again. If the problem is not corrected after repeating the initialization, there is most likely a fault in the volume settings. Enter Test Mode, and check the settings. For this product, the following data and settings are still saved even if the power is turned off. Coin numbers represented in fractions (number of coins deposited that are not enough for one credit) and bonus adder count data are not saved
- Once the machine has initialised, enter the TEST screen by engaging the TEST button
- Carry out a routine check to make sure all INPUTS/OUTPUTS are functioning correctly. Please refer to section 9 of this manual for information on the I/O tests and functionality

PRECAUTIONS WHEN MOVING

⚠ WARNING

- As used in these instructions, the term "moving" refers to moving of the product within the same building, store or facility. These instructions do not cover moving between different buildings, areas, stores or facilities, since diverse factors are involved, not only packaging but also loading onto transport vehicles and securing the product in place during transport. To transport the product to a different building or store, contact the vendor where the product was purchased, the office indicated in these instructions, or request that the moving be done for you. This product is made up of parts that are of large size and heavy weight. Unless work is entrusted to someone with expertise in packaging and transport of such parts, a serious accident might occur.
- Even when the product is to be moved within the same building, store or facility, contact the point of purchase or the office indicated in these instructions if there will be level differences and/or narrow or low level entrances while moving. Alternatively, request that moving be done for you. Never disassemble the product in any way not covered in these instructions as this could cause fire, electric shock and/or short circuit.
- Always disconnect the power cable before moving the product. If it is moved with the power cable connected, the cable could be damaged, causing fire or electric shock.
- A qualified electrician is required for moving product parts within a store and for changing indoor wiring. Do not have work performed by anyone who is not qualified, otherwise there could be electric shock.
- Have work performed by site maintenance personnel or other qualified individuals. Do not allow people without proper knowledge and technical expertise to work on the product as this could cause electric shock or other serious accident. Also, customers could be injured while operating the product.
- Proceed with checks and tasks as indicated in these instructions. If instructions are not followed or if tasks and/or checks are neglected, an electric shock, serious, or fatal accident can occur. Also, customers could be injured while operating the product.
- Be careful not to damage wiring. Before separating parts that have wiring connections, disconnect the wiring connections, unravel wire bundles and undo fastenings. Only after that, remove fasteners (screws, nuts, etc.). If wiring becomes damaged, there could be an electric shock, short circuit or fire.

7

⚠ WARNING

- Always disconnect the power cable before moving the product. If it is moved with the power cable connected, the cable could be damaged, causing fire or electric shock.
- To move the unit over the floor, pull in the adjustors and have the casters contact the floor. While moving the unit, be careful that the casters do not roll over the power cord or the ground wire. If cord or wire is damaged, there could be electrical shocks and/or short circuits.
- When crossing a sloped or stepped area, disconnect the Main Cabinet and Seat Cabinet. If you tilt them while connected together, the connection points may be damaged and personnel could be injured.
- When lifting the Cabinet up steps, it must be held by the designated handles
 or by the bottom surface. Lifting it by any other area may lead to damage or
 disfiguring that part or surrounding parts due to the weight of the cabinet and
 could also lead to injury of personnel.
- When tilting the cabinet to move it across a sloped or stepped area, always use at least two people. Attempting such an operation alone can lead to accident or injury.
- Do not press the LED screen. The screen can be easily damaged and cannot be repaired if it is, meaning complete replacement will be necessary.

⚠ CAUTION

- When moving the components, do not push any of the plastic elements, shaped parts or use them to pull the components along. This may damage the parts or the surrounding parts and this could lead to accidents or injury.
- Do not use the Control Units on the Main Cabinet to push or pull the cabinet. This may damage or disfigure these parts and lead to malfunctions or injury.
- When moving the cabinet, be sure to push/pull each cabinet lengthways.
 Trying to move the cabinet any other way may cause the cabinet to topple over.

⚠ CAUTION


 To work safely and precisely prepare a steady, safety stool or ladder to stand on. Climbing onto the cabinet or hanging down from it can lead to accidents.

STOP IMPORTANT

• If you need to move components through a narrow or low door and the only way to get the separated components through is to turn them on their side (or if a separation method other than those described in this manual is required), either make a request to the office listed in this document or the place of purchase to perform the operation or contact them regarding how to perform it. Carelessly turning the components onto their side or separating them in ways other than those depicted in this manual may lead to irreparable damage.


The machine can be moved over short distances within the same environment without the need to disassemble. However, when transporting the machine to a different location it is advised that the machine be disassembled into two individual components. These components are the (1) Display Cabinet Assembly and (2) Seat Cabinet Assembly.

For a detailed instruction on how to disassembly the machine into these 2 parts, please refer to Chapter 6 in this manual and follow the instructions of "Installation" in reverse order.

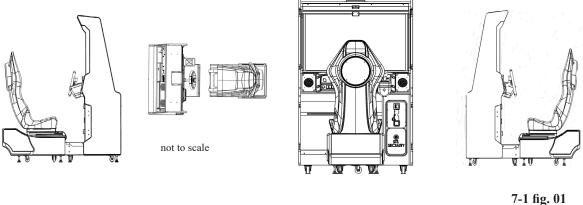

STOP IMPORTANT

 When relocating the machine to a different area within the same environment, be sure to raise all leg adjusters. Failing to fully raise all leg adjusters may cause them to hit the ground and become damaged. If the leg adjusters become damaged, replace them immediately. Do not locate the machine using damaged leg adjusters. Locating the machine using damaged leg adjusters will make the product unstable.

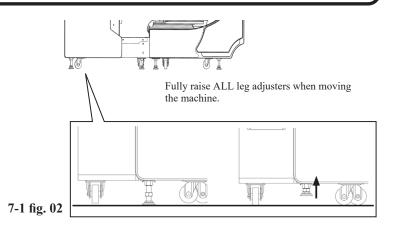

8 GAME DESCRIPTION

DAYTONA CHAMPIONSHIP USA

Daytona Championship USA is the latest racing game from legendary arcade machine manufacturer Sega Amusements. Daytona Championship USA is a reimagining of the classic arcade racing hit, Daytona USA. This new release contains 6 action packed tracks; 3 brand new courses accompanied by 3 beautifully redesigned classic tracks from the original game. Players will race against the computer and up to 7 other real players, with the new billboard system allowing drivers to see their competitors' reactions in real time. With improved handling, updated graphical designs, and challenging gameplay, Daytona Championship USA is the return of the titan of arcade racing.

MULTIPLAYER LOBBY (LINKED CABINETS)

WHEN THE MACHINE IS IN CREDIT AND THE START BUTTON IS PRESSED, THE FOLLOWING SCREEN IS DISPLAYED, INDICATING THE GAME PLAY AVAILABLE.

The first action for the player is to select whether to enter into a Multiplayer or Single Player game. When connected, the player will automatically be entered in to a Multiplayer lobby, at which point any connected cabinets can join. To enter a Single Player game by themselves, a player must hold the START button and press down on the accelerator. If the timer expires and no other players have entered the lobby, the game will automatically enter a Single Player lobby.



Single Player

If the player inserts a credit when a cabinet is not linked to any other machines (or if no other players join the lobby) and then presses the Start button, they will be taken in to a Single Player game where they are given the option between QUICK RACE, CHAMPIONSHIP* and TOURNAMENT* (*if enabled in the Game Settings of the Test & Service



To make a selection, the player must turn the steering wheel left and right to highlight an option and press the accelerator to confirm their choice.

During this selection process, a countdown is displayed in the top right hand corner of the screen. If the player does not make a selection within this time, Quick Race will be selected.

Quick Race

This game mode is available in Single and Multiplayer. It allows all 6 tracks to be played in either standard or time lap mode.



Standard Quick Race

On the transmission screen, the player will be able to choose from standard quick race against AI players or compete in time lap mode.



Quick Race is the default race type. To select time lap mode, the player must hold the start button and press down on the accelerator pedal when selecting transmission type (this is also detailed on the screen itself).



Standard Quick Race is against a number of AI racers The race will finish regardless of where the player finishes or if the timer expires.

Time Lap Mode

Time Lap mode is available in Single Player only. In this mode, only the player will be racing around the track, competing to set the fastest possible lap time.



The player must reach checkpoints to extend the timer. If the player does not reach a checkpoint in time, the race will end.



If the player receives a high score upon completing the track, they will be prompted to enter a three letter name at the name entry screen. This will then be displayed on the attract menu when the high scores for the relevant tracks are shown.



The player turns the steering wheel left and right to highlight a letter and selects their choice by pressing down on the accelerator. During this time, a countdown timer will appear in the top right hand corner. If no name is selected before the timer reaches zero or if the START button is pressed, the game will generate a three letter name for the player.



Championship

This game mode is available in Single Player only. It challenges the player to three races, one beginner track, one advanced track, and one expert track. The goal of this game mode is to place in one of the top three positions to advance to the next race. If the player fails, they can insert a credit to retry the current race they are on* (*if 'CHAMPIONSHIP CONTINUE' is set to to 'YES' in the 'GAME SETTINGS').



If the player receives a high score upon completing the third track, they will be prompted to enter their name at the name entry screen. This will then be displayed on the attract menu high score table.



Tournament

Tournament is a specific mode that allows the operator to create a time limited event that will run between 1 and 30 days. During the selected time period, players compete for the fastest time on a track determined by the operator in the test menu.



When enabled, tournament provides its own high score table with time and date stamps. These scores remain on display after the event has expired. Until tournament is turned off in the test menu, the high score table will continue to be displayed.

See the Test and Service Menu section for more details on how to set up Tournament mode.

Track Select

If a player selects Quick Race in Single Player, the track select screen will then be displayed.



To select a track, the steering wheel must be turned left or right and the accelerator pressed down to confirm. The player can choose from six tracks:

Daytona International Speedway	Beginner
Three-seven Speedway (Classic)	Beginner
Lakeside Castle	Advanced
Dinosaur Canyon (Classic)	Advanced
Metro City	Expert
Seaside Street Galaxy (Classic)	Expert

The difficulty of each track is labelled on the select screen. During this time, a countdown timer will appear in the top right hand corner. If no track is selected before the timer reaches zero, the track that is currently highlighted by the player will be selected.

Transmission/Car Select

After selecting a track, the player will be prompted to select either automatic or manual transmission.

Automatic is recommended for new players. In this transmission, the player will not be required to change gears as it will be done for them.



Manual transmission is recommended for more experienced players. This will require the player to change the gears themselves.

During this time, a countdown timer will appear in the top right hand corner. If no car transmission is selected before the timer reaches zero, automatic transmission will be chosen.



From here, the player will enter the track preview screen, after which the race will begin.



Multiplayer

Multiplayer Track Select

After all players have entered the lobby, the track select screen will be shown allowing players to vote on what track they wish to race on. The track with the most votes will be selected.

During this time, a countdown timer will appear in the top right hand corner. If no track is selected before the timer reaches zero, the track that is currently highlighted by the player will be chosen automatically.

If the votes are tied, the track that is the easiest difficulty will be selected.



Multiplayer Transmission Select

After selecting a track, the player will be prompted to select either automatic or manual transmission.

Automatic is recommended for new players. In this transmission, the player will not be required to change gears as it will be done for them.

Manual transmission is recommended for more experienced players. This will require the player to change the gears themselves.

During this time, a countdown timer will appear in the top right hand corner. If no car transmission is selected before the timer reaches zero, automatic transmission will be chosen.

Real Racers Only

This option is only available in multiplayer. This determines whether the AI will be in the race with the players. To initiate Real Racers Only, the players must hold the start button while selecting car transmission. Real racers on or off is determined by the players voting. The majority option will be chosen.



HUD (Heads up Display)

The image below represents the standard HUD screen in a single player race. It displays:



- 1 LAP NUMBER
- 2 LAP TIME COUNTER
- 3 TIMER
- 4 RACE POSITION
- 5 MINI-MAP
- 6 SPEEDOMETER
- 7 RACE BANNER

Indicates the current lap the player is on and how many laps the race is in total

Indicates the current lap time as well as any previous lap times

Indicates how much time the player has to reach the next checkpoint. If the timer reaches zero, the race will end

Indicates the current ranking of the player in the race (e.g. 10th out of 20 racers)

This displays a section of the map surrounding the player. The player car is shown as a blue arrow, with other players/AI racers as red arrows. Checkpoint markers are denoted with a black line

Indicates the speed the player is currently travelling at. If in manual transmission, this displays the gear the player is in

This indicates what car is in what position in the race. This is displayed in a scrolling style from right to left

Single Player Time Lap HUD

The Time Lap mode HUD contains all the elements of the standard HUD with some other included features:



- 1 COURSE RECORD TIME
- 2 TOTAL RECORD TIME
- 3 YOUR TIME
- 4 LAP NUMBER
- **5 LAP TIME COUNTER**
- 6 TIMER

This displays the current record time for a single lap. There are separate record times for Automatic and Manual transmissions

This displays the player's current best time for the entire track

This displays the player's current lap time

Indicates the current lap the player is on and how many laps the race is in total

Indicates the current lap time as well as any previous lap times

Indicates how much time the player has to reach the next checkpoint. If the timer reaches zero, the race will end

Player Views

Players can select from one of four views. These views can be selected by pressing the different view buttons on the cabinet. The views are labelled and shown below:

View 1



View 2



View 3



View 4



EXPLANATION OF TEST AND DATA DISPLAY

Perform tests and data checks periodically by manipulating the TEST Button and SERVICE Button in the cabinet. Follow the instructions in this chapter to conduct checks when the game machine is first installed, when money is being collected, or when the game machine does not operate properly.

Shown overleaf are the tests and screens to be used for different problems.



⚠ WARNING

When installing 2 or more cabinets which are networked together, the GAME SETTINGS which are adjusted within the first cabinet are reflected throughout all cabinets within that network



IMPORTANT

When changing the game configuration within the TEST MODE, be sure to exit all screens in the correct manner by choosing exit. DO NOT turn the machine ON/OFF to resume game. Changes WILL NOT take effect unless the correct method is used


9-1 SWITCH UNIT

MARNING

Never touch places other than those specified. Touching places not specified can cause electric shock and short circuit accidents

STOP IMPORTANT

- Adjust the sound to the optimum volume, taking into consideration the environmental requirements of the installation location
- Removing the Coin Meter circuitry renders the game inoperable

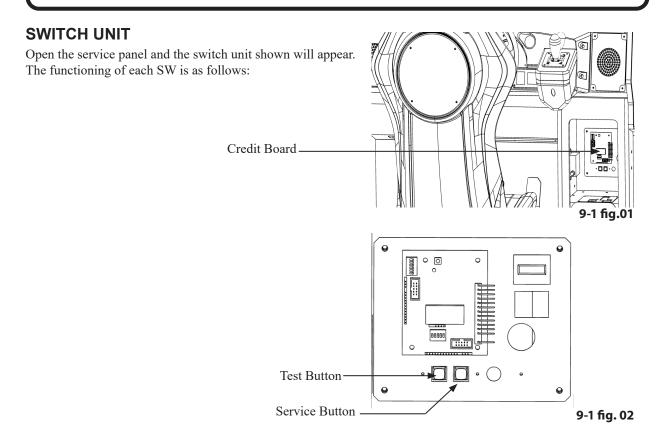

TEST Button (TEST):	For the handling of the Test Button, refer to the following pages.
SERVICE Button (SERVICE):	Gives credits without registering on the coin meter.

9-2 TEST MODE



- The details of changes to Test Mode settings are saved when you exit from Test Mode by selecting EXIT from the System Test Mode Menu. If power is turned off before that point, changes to the settings will be lost
- Entering the Test Mode clears fractional number of coins less than one credit and bonus adder data
- Use with the specified settings. If settings other than those specified are used, inappropriate operations or malfunction may occur

Test & Service Menu

The Test Menu is the area where you can perform a variety of tests and change numerous settings to best suit the customers' needs and those of your business. It also stores and contains data that will allow you to see when it is most popular, set up tournaments and check and troubleshoot any errors. The TEST button and the SERVICE buttons control navigation of the menu system.

The following options are available from the Test Menu:



9-2 fig.01

The user will use the SERVICE button to select the desired test and the TEST button to activate the test in the left hand pane of the display.

SYSTEM INFORMATION: General Information on installed software and hardware

INPUTS: Test routine for input peripherals
OUTPUTS: Test routine for output peripherals
CALIBRATION: Calibration routines for input peripherals

COIN: Test routine for coin handling
SOUND: Test routine for audio outputs
SCREEN: Test routine for display screen
NETWORK: Test routine for Ethernet link
BOOKKEEPING: System meters and bookkeeping

CLOCK: System clock setting

GAME SETTINGS:

LOCALISATION:

Routine to change in game languages

BILLBOARD:

Test routine for Game Specific settings

Routine to change in game languages

Test routine for Video Billboard (If fitted)


Leave System Menu and launch game



• When changing the game configuration within the TEST MODE, be sure to exit all screens in the correct manner by choosing exit. DO NOT turn the machine ON/OFF to resume game. Changes WILL NOT take effect unless the correct method is used

System Information

Select 'System Information' from the Test Menu to display the System Information menu. This test displays general system information regarding the hardware configuration and installed software.

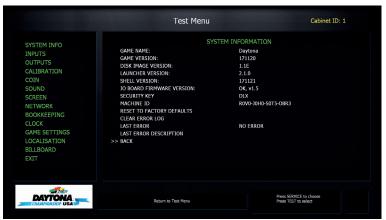

9-2 fig.02

GAME NAME: Name of the installed game.

GAME VERSION: Version number of installed game.

DISK IMAGE VERSION: Version number for master disk image.

LAUNCHER VERSION: Version number for System Launcher.

SHELL VERSION: Version number for Shell.

IO BOARD F/W VERSION: Displays I/O Board Firmware Revision if valid IO Board is fitted,

otherwise displays FAILED.

SECURITY KEY: Displays Security Key Data or if not present NOT FITTED.

MACHINE ID: Displays unique machine ID or UNKNOWN SECURITY KEY.

RESET TO FACTORY DEFAULTS: If Test is pressed when this item is highlighted then all settings

are returned to factory defaults and the cabinet will restart

(Requires confirmation).

CLEAR ERROR LOG: Clears all recorded errors.

LAST ERROR: Displays Last recorded error with Time & Date stamp or NO

ERRORS. Pressing Test whilst over this item scrolls through the

last 10 errors.

LAST ERROR: Displays Verbose description of current error and troubleshooting

advice.

BACK: Exit this test and return to Test & Service Menu.

Inputs

Select 'Input Test' from the Test Menu to display the Input Test menu. This test is used to test system inputs such as steering wheels, pedals and switches.

To implement the test, press each device that is listed and check the results on screen.



9-2 fig. 03

STEERING: 0-255 Maximum range
BRAKE: 0-255 Maximum range
ACCELERATOR: 0-255 Maximum range
GEAR SHIFT: - (not in use), UP, DOWN, 1,2,3,4

START BUTTON:

ON = pressed, OFF = not pressed
VIEW 1:

ON = pressed, OFF = not pressed
VIEW 2:

ON = pressed, OFF = not pressed
VIEW 3:

ON = pressed, OFF = not pressed
VIEW 4:

ON = pressed, OFF = not pressed
VIEW 4:

ON = pressed, OFF = not pressed
TEST:

ON = pressed, OFF = not pressed
ON = pressed, OFF = not pressed
SERVICE BUTTON:

ON = pressed, OFF = not pressed


EXIT: Press TEST and Service simultaneously to exit

To exit this menu you must press the TEST and SERVICE buttons simultaneously.

Outputs

Select 'OUTPUT TEST' from the Game Test menu to display the Output Test Menu. This test is used to test system outputs such as lamps or actuators.

Press the SERVICE button to move the cursor to the desired test item. Press the TEST button to test the selected item.

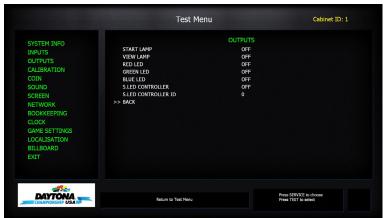

9-2 fig.04

START LAMP:

ON = Lamp ON, OFF = Lamp OFF

VIEW LAMP:

ON = Lamp ON, OFF = Lamp OFF

RED LED:

ON = Lamp ON, OFF = Lamp OFF

GREEN LED:

ON = Lamp ON, OFF = Lamp OFF

BLUE LED:

ON = Lamp ON, OFF = Lamp OFF

S.LED CONTROLLER: OFF = OFF, ATTRACT, IN GAME, RACE LEADER, CRASH,

OVERTAKE = Test lighting animation

S.LED CONTROLLER ID: Test Lighting routine specific to cabinet ID

BACK: Exit this test and return to Test & Service Menu

Please note that turning on more than one LED will change the colour accordingly:

RED and GREEN:

RED and BLUE:

Panel will be YELLOW

Panel will be MAGENTA

GREEN and BLUE:

Panel will be CYAN

RED, GREEN and BLUE:

Panel will be WHITE

The user will use the SERVICE button to select the desired output and the TEST button to change the output status.

EXIT: This will exit the menu and turn all lamps and LED's off.

Move the cursor to EXIT and press the TEST button to return to the TEST MENU screen.

Calibration

Select 'Calibration Test' from the Test Menu screen to display the Calibration Test menu.

This test is used to calibrate analogue inputs and to test and set steering force feedback. Use the SERVICE button to move the cursor to the desired test item. Press the TEST button to enter the selected item.



9-2 fig. 05

STEERING: This displays the current Calibration setting for the steering wheel.

Current input value (0-255)

BRAKE: This displays the current Calibration setting for the Brake Pedal.

Current input value (0-255)

ACCELERATOR: This displays the current Calibration setting for the Accelerator Pedal.

Current input value (0-255)

STEERING FORCE: This sets the amount of force feedback used in the steering wheel when

playing the game. There are four options available:

OFF - No steering force will be used

WEAK – Minimal steering force will be used NORMAL – Normal steering force will be used STRONG – Maximum steering force will be used

AUTO CALIBRATE: ON/OFF Enables or disables automated calibration of steering at start up.
TEST STEERING FORCE: This will give an indication of what the currently selected Steering Force

is like by automatically turning the wheel to a full lock in each direction.

NOTE: If STEERING FORCE is set to OFF, selecting TEST STEERING FORCE will not move the steering wheel.

CALIBRATE STEERING*

CALIBRATE BRAKE*

CALIBRATE ACCELERATOR*

Launches Calibration routine

Launches Calibration routine

CALIBRATE STEERING ROUTINE*

Starts the steering calibration routine. The wheel will automatically be calibrated by turning full left and then full right. No input is needed from the user once the test has been started. If Auto Calibration has been disabled please follow the on-screen instructions to manually calibrate

CALIBRATE BRAKE ROUTINE*

Starts the brake calibration routine. The user must follow the on screen prompts to fully depress and then release the brake pedal for 5 seconds.

CALIBRATE ACCELERATOR ROUTINE*

Starts the accelerator calibration routine. The user must follow the on screen prompts to fully depress and then release the accelerator pedal for 5 seconds.

BACK Exit this test and return to Test & Service Menu

.

Coin Settings

This part of the test menu is used to set credit related parameters. Select COIN from the Test menu to display the Coin Settings Menu.

Use the SERVICE button to move the cursor to the desired test item.

Press the TEST button to enter the selected item.



9-2 fig.06

This text displays the accumulative coins and credits values. Freeplay can be turned on/off by cycling through the Credit Settings options.

COIN COUNT: Coin count value from I/O board (cannot be reset)

CREDITS: Total number of credits added to system

SERVICE CREDITS: Total number of Service credits added to system ENTRY TYPE: Payment Method (COIN*\CARD\ SWIPE)
COIN SETTING: The following coin settings are available:

1	1 COIN 1 CREDIT
2	1 COIN 2 CREDITS
3	1 COIN 3 CREDITS
4	1 COIN 4 CREDITS
5	1 COIN 5 CREDITS
6	1 COIN 6 CREDITS
7	2 COINS 1 CREDIT
8	1 COIN 1 CREDIT, 2 COINS 3 CREDITS
9	3 COINS 1 CREDIT
10	4 COINS 1 CREDIT
11	1 COIN 1 CREDIT, 2 COINS 2 CREDITS, 3 COINS 3 CREDITS, 4 COINS 5 CREDITS
12	5 COINS 1 CREDIT
13	3 COINS 1 CREDIT, 5 COINS 2 CREDITS
14	2 COINS 1 CREDIT, 4 COINS 2 CREDITS, 5 COINS 3 CREDITS
15	1 COIN 1 CREDIT, 2 COINS 2 CREDITS, 3 COINS 3 CREDITS, 4 COINS 4 CREDITS, 5 COINS 6 CREDITS
16	FREEPLAY

BACK: Exit this test and return to Test & Service Menu. This will save any


changes to freeplay on this cabinet only.

Use the TEST button on the EXIT option to return to the System Menu.

Sound Settings

This test is used to set audio levels for the game and to test function of the speaker system. Select 'Sound Settings' from the test menu to display the Sound Settings Menu.

Use the SERVICE button to move the cursor to the desired test item. Press the TEST button to enter the selected item.

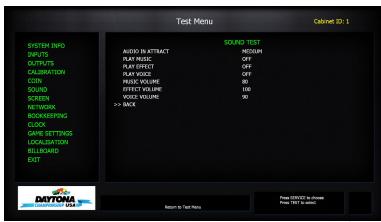

9-2 fig. 07

AUDIO IN ATTRACT
PLAY MUSIC
PLAY EFFECT
PLAY VOICE
MUSIC VOLUME
EFFECT VOLUME
VOICE VOLUME

Volume in attract mode (OFF/LOW/MEDIUM*/HIGH)

Play a sample of game music

Play a sample of game sound effects

Play a sample of game voice

Game Music level 00 to 100 (Default 100)

Game Sound Effect level 00 to 100 (Default 100)

Game Voice level 00 to 100 (Default 100)


The user will use the SERVICE button to select the desired test and the TEST button to activate the test. Move the cursor to BACK and press the TEST button to return to the Test Menu screen.

^{*} Denotes default values

Screen

This test is used to test the game display is working correctly.


Use the SERVICE button to move the cursor to the desired test item. Press the TEST button to enter the selected item.

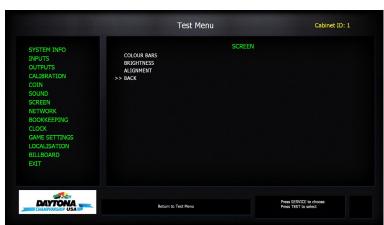

9-2 fig. 08


Colour Bars:

Selecting this will display the following screen.

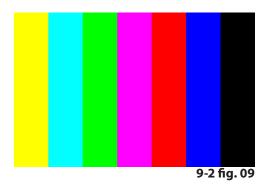


Brightness:

Selecting this will display the following screen.

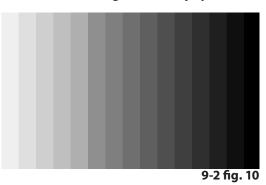

Grid Alignment:

Selecting this will display the following screen.

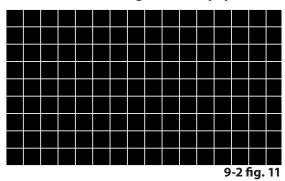

Network Test

This test is used to test the network link between cabinets (if connected). Select 'NETWORK' from the Test menu to display the Network Test Menu.

IMPORTANT NOTES:

In any cabinet configuration one cabinet must be set to ID=1, this is the Server that will control the network operation.

When making changes to "Cabinet ID" the cabinet should not be networked to any other cabinets.

Once Changes are made "CONFIRM CHANGES" must be selected to commit the change and restart the cabinet.

Use the SERVICE button to move the cursor to the desired test item.

Press the TEST button to enter the selected item.



9-2 fig . 12

NETWORK STATUS: OK SERVER = Connected as server. OK CLIENT = Connected as client

ACTIVE CABINETS

(INC THIS ONE): The total number of cabinets connected or UNKNOWN

TOTAL LINKED CABINETS: The total number of cabinets networked together. Must be set identically

on all connected cabinets. If this value is changed, the user must use

CONFIRM CHANGES and the cabinet will restart.

CABINET ID: ID of cabinet from 1 to 8. If this value is changed, the user must use

CONFIRM CHANGES and the cabinet will restart.

CONFIRM CHANGES: The user will be prompted to press TEST again to confirm. If the user

presses TEST again, the action is confirmed and the Cab will reset. If the

user presses SERVICE the action is aborted and settings discarded.

BACK Exit this test and return to Test & Service Menu

Move the cursor to BACK and press the TEST button to return to the Test Menu screen.

This test is used to review statistical data from the system. It consists of 7 screens of data. Screen 1 contains an overview of game play data. Select 'BOOKKEEPING' from the Test menu to display the Bookkeeping Test Menu.



9-2 fig. 13

TOTAL TIME ON: The total time the cabinet has been switched on in HH:MM:SS

TOTAL CREDITS IN: The total number of credits entered

TOTAL CREDIT CONTINUES: The total number of credits used for continue games

TOTAL SERVICE CREDITS: The total number of service credits entered

TOTAL SERVICE CONTINUES The total number of service credits used for continue games

TOTAL PLAYS: The total number of games played

TOTAL AVERAGE GAME TIME: The average game time for all games

BOOKKEEPING LAST CLEARED: The time the bookkeeping meters were last cleared
HIGH SCORES LAST CLEARED: The time the High Score tables were last cleared
CLEAR HISCORES: When selected, the user will be prompted to confirm.

If the user confirms (with the TEST button), the High Score table is reset.

If the user presses SERVICE, then no action is taken.

CLEAR BOOKKEEPING: When selected (with the TEST button), the user will be prompted

to confirm. If the user confirms, the bookkeeping meters are reset to zero.

If the user presses SERVICE, then no action is taken.

NEXT PAGE: Proceed to bookkeeping screen #2

EXIT: Exit to System Menu

Move the cursor to NEXT PAGE and press the TEST button to proceed to bookkeeping screen #2. Move the cursor to EXIT and press the TEST button to return to the Test Menu.

This page displays cumulative individual modes and total plays. This is from the last point in time that the Bookkeeping was cleared.



9-2 fig. 14

TOTAL PLAYS: The total number of games played

SINGLE PLAYER PLAYS: The total number of single player games

MULTIPLAYER PLAYS: The total number of multiplayer games

CHAMPIONSHP PLAYS: The total number of Championship games

TOURNAMENT PLAYS: The total number of Tournament games

PARTY MODE PLAYS*: The total number of party mode games*

NEXT PAGE: Proceed to bookkeeping screen #3

BACK TO MENU: Return to Test & Service Menu

Move the cursor to NEXT PAGE and press the TEST button to proceed to bookkeeping screen #3. Move the cursor to EXIT and press the TEST button to return to the Test Menu.

^{*}Feature only available on DLX cabinets

This page displays total game time and average game times for single and multiplayer modes. This is a cumulative total from the last point in time that Bookkeeping was cleared. All times are displayed in the format HHHH:MM:SS




9-2 fig. 15

TOTAL AVERAGE GAME TIME
AVERAGE GAME TIME SINGLE PLAYER
AVERAGE GAME TIME MULTPLAYER
AVERAGE GAME TIME CHAMPIONSHIP
AVERAGE GAME TIME TIME LAP
NEXT PAGE
BACK TO MENU

Total average game time, all modes combined Average game time for all single player modes Average game time for all multiplayer modes Average game time for Championship mode Average game time for Time Lap Proceed to bookkeeping screen #4 Return to Test & Service Menu

Move the cursor to NEXT PAGE and press the TEST button to proceed to bookkeeping screen #4. Move the cursor to EXIT and press the TEST button to return to the Test Menu.

This page displays a breakdown of the games on individual days. This is a cumulative total from the last point in time that the bookkeeping was cleared.

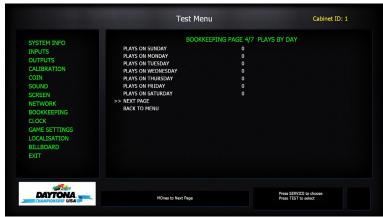


9-2 fig. 16

PLAYS ON SUNDAY: Cumulative count of plays for this day PLAYS ON MONDAY: Cumulative count of plays for this day **PLAYS ON TUESDAY:** Cumulative count of plays for this day Cumulative count of plays for this day PLAYS ON WEDNESDAY: PLAYS ON THURSDAY: Cumulative count of plays for this day **PLAYS ON FRIDAY:** Cumulative count of plays for this day PLAYS ON SATURDAY: Cumulative count of plays for this day **NEXT PAGE:** Proceed to bookkeeping screen #5 **BACK TO MENU:** Return to Test & Service Menu

Move the cursor to NEXT PAGE and press the TEST button to proceed to bookkeeping screen #5. Move the cursor to EXIT and press the TEST button to return to the Test Menu.

This page displays a breakdown of the games into individual hours. This is a cumulative total from the last point in time that the bookkeeping was cleared.

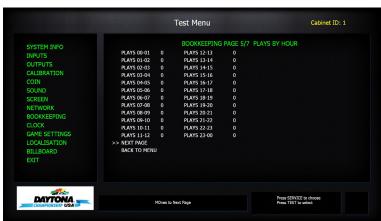

9-2 fig. 17

PLAYS XX-XX: Cumulative count of plays during the specified hour

NEXT PAGE: Proceed to bookkeeping screen #6
BACK TO MENU: Return to Test & Service Menu


Each hour is logged separately in 24 hour format therefore:

logs games played between 12am and 1am

logs games played between 1am and 2am and so on. 23-24 logs games played bewtween 11pm and 12am.

Move the cursor to NEXT PAGE and press the TEST button to proceed to bookkeeping screen #6. Move the cursor to EXIT and press the TEST button to return to the Test Menu.

This page displays a breakdown of the races into individual tracks. This is a cumulative total from the last point in time that the bookkeeping was cleared.

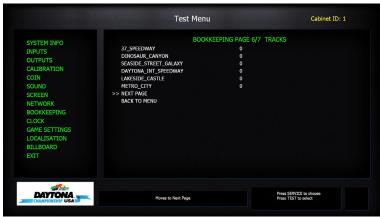

9-2 fig. 18


TRACK #1 -6: Cumulative count of plays on the specified track

NEXT PAGE: Proceed to bookkeeping screen #7

BACK TO MENU: Return to Test & Service Menu

Move the cursor to NEXT PAGE and press the TEST button to proceed to bookkeeping screen #7. Move the cursor to EXIT and press the TEST button to return to the Test Menu.

This page displays a breakdown of the different cars used in all game modes. This is a cumulative total from the last point in time that the bookkeeping was cleared.

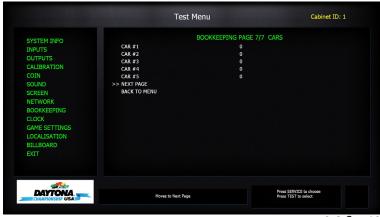

0-2 fig. 19

CAR #1 -5: Cumulative count of plays using the specified car

NEXT PAGE: Proceed to bookkeeping screen #1
BACK TO MENU: Return to Test & Service Menu

Use the SERVICE button to navigate and the TEST button to action changes to the following options. Move the cursor to BACK TO MENU and press the TEST button to return to the Test Menu.

CAR REFERENCE TABLE

CAR 1	9-2 fig. 20
CAR 2	9-2 fig. 21
CAR 3	9-2 fig. 22
CAR 4	9-2 fig. 23
CAR 5	9-2 fig 24

Clock Setting

This test is used to set the current time and date of the computer system. Select 'CLOCK' from the Test Menu to enter the Clock Setting screen. When selected, the screen will show fields for YEAR, MONTH, DATE, HOURS, MINUTES and SECONDS. The SERVICE button is used to select the desired option and the TEST button will increment the value of that option between specified parameters.



9-2 fig 25

CURRENT TIME: Shows the current time, displayed in 24 hour clock format

CURRNT DATE: Shows the Current Date, displayed in the following format

DD/MM/YYYY

YEAR: Variable from 2016 to 2070

MONTH: Variable from 01 to 12

DATE: Variable from 1 to 28, 29, 30 or 31 (dependant on MONTH & YEAR)

HOURS: Variable from 0 to 23

MINUTES: Variable from 0 to 59

SECONDS: Variable from 0 to 59

BACK: Return to Test & Service Menu after adjusting clock to new value

Use the SERVICE button to navigate and the TEST button to action changes to the following options. Move the cursor to BACK and press the TEST button to return to the Test Menu.

Game Settings 1

This allows game parameters to be viewed and changed. Select GAME SETTINGS from the Test Menu screen to enter the Game Settings screen.

If more than one cabinet is linked then game settings must be made from Cabinet 1 (Player 1) Test & Service Menu

CABINET 2-8 IN LINKED GAME



9-2 fig 26

Limited options can be changed when a linked cabinet that is not ID=1

CAMERA ENABLED: Use the player camera in game (YES*/NO)

NEXT PAGE: Proceed to Game Settings screen #1
BACK TO MENU: Return to Test & Service Menu

MARNING

When installing 2 of more cabinets which are networked together, the GAME SETTINGS which are adjusted within the first cabinet are reflected throughout all cabinets within that network

Single Player/Cabinet 1 in Linked Game



9-2 fig 27

DIFFICULTY: Set the game difficulty (V EASY/EASY*/MEDIUM/HARD/V HARD) **GAME LENGTH:** Set the game length (V SHORT/SHORT/MEDIUM*/LONG/V LONG)

CAMERA ENABLED: Use the player camera in game (YES*/NO)

INSTANT REMATCH: Offer instant rematch after multiplayer game (ON*/OFF)

START ON COIN ENTRY: Game starts as soon as credit is available (YES/NO*)

MENU TIMINGS: Length of time given to make menu selections (SHORT/MEDIUM*/

LONG)

CAR SELECT: Is player offered a choice of Cars (CHOOSE*/RANDOM/FIXED)

TRACK SELECT: Is player offered a choice of tracks (CHOOSE*/RANDOM/FIXED)

TRANSMISSION SELECT: Is player offered a choice of transmission (ON*/AUTO ONLY/MANUAL

ONLY)

CHAMPIONSHIP MODE: Is Championship Mode Enabled (YES*/NO) **CHAMPIONSHIP CONTINUE:** Is Championship Continue offered (YES*/NO)

AUTO DRIVE: Is Auto drive feature enabled (YES/NO*) This will accelerate

automatically if the player does not use the pedal

NEXT PAGE: Proceed to Game Settings (Advanced)


BACK TO MENU: Return to Test & Service Menu

Use the SERVICE button to navigate and the TEST button to action changes to the following options. Move the cursor to BACK and press the TEST button to return to the Test Menu. Alternatively highlight NEXT PAGE and push the TEST button to go to the advanced game settings page.

^{*} Denotes default values

Game Settings (Advanced)

This page allows for advanced game parameters to be viewed and changed. Select GAME SETTINGS from the Test Menu screen to enter the Game Settings screen. From there highlight NEXT PAGE and push the TEST button to reached the GAME SETTINGS (ADVANCED) screen.

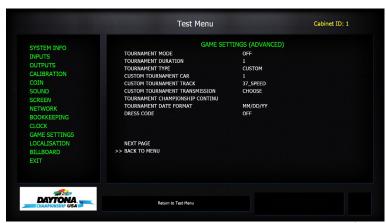

9-2 fig 28

TOURNAMENT MODE: Enables or Disables Tournament Mode (YES/NO*)

TOURNAMENT DURATION: Sets the duration of tournament in days (*1-30 days)

TOURNAMENT TYPE: Define tournament type (CHAMPIONSHIP/CUSTOM*)

CUSTOM TOURNAMENT CAR: Defines Car for tournament if custom is enabled (1,2,3,4,5, *Choice)

CUSTOM TOURNAMENT TRACK: Defines Track for tournament if custom is enabled (1,2,3,4,5,6, *Choice)

CUSTOM TOURNAMENT TRANS: Defines Transmission for tournament if custom is enabled (MANUAL/

AUTO/*Choice)

TOURNAMENT CSHIP CONT: When Tournament is set to CHAMPIONSHIP, is continue option available

(YES*/NO)

TOURNAMENT DATE FORMAT: Defines how Tournament duration date is displayed (MM/DD/YY*,

DD/MM/YY, YY/MM/DD)

NEXT PAGE: Proceed to Game Settings screen #1

BACK TO MENU: Return to Test & Service Menu

Tournament Set Up

Tournament allows an operator to set up a time limited single player event. This can be customised and records are stored in a unique "Tournament" high score table. Once the time has elapsed the high score table will still be displayed but no further record can be set.

To set up a tournament, please make the desired adjustments in the Game Settings (advanced) screen as described on the previous page.

Before attempting to change the duration of days for tournament mode, please follow these instructions:

- Turn Tournament mode off via "Game Settings" in the Test Menu
- Start the game up (load to attract screen)
- Return to the Test Menu
- Turn Tournament mode back on
- Change duration to whichever amount of days you wish to test

Failure to follow steps will cause the cabinet to not give the option of tournament mode in the menu.

Use the SERVICE button to navigate and the TEST button to action changes to the following options. Move the cursor to BACK and press the TEST button to return to the Test Menu.

Localisation

This allows the game language to be selected. On linked cabinets this can only be carried out from Cabinet ID 1. (Player 1).



9-2 fig 29

LANGUAGE: Select the game language:

ENGLISH/FRENCH/ITALIAN/SPANISH/PORTUGEUSE/RUSSIAN/

TURKISH

CONFIRM CHANGES: The user will be prompted to press TEST again to confirm. If the user

presses TEST again, the action is confirmed and the Cab will reset. If performed on Cabinet 1 of a group of linked cabinets, all will be changed

and restarted

If SERVICE is pressed the action is aborted and settings discarded.

BACK TO MENU: Return to Test & Service Menu

10 VIDEO DISPLAY

⚠ CAUTION

The LCD display screen is adjusted prior to leaving the factory. Avoid any unnecessary adjustment.

STOP IMPORTANT

- If the adjustment method in this Manual does not resolve the problem, contact the customer service number in this Manual or your supplier
- Do not stick tape, stickers, or anything else onto the screen. Any kind of adhesive may damage the surface of the screen

10-1 GENERAL DESCRIPTION

This specification applies to the 43.0 inch Color TFT-LCD Module P430HVN01.4. This LCD module has a TFT active matrix type liquid crystal panel 1920x1080 pixels, and diagonal size of 43.0 inch. This module supports 1920x1080 resolution display. Each pixel is divided into Red, Green and Blue sub-pixels or dots which are arranged in vertical stripes. Gray scale or the brightness of the sub-pixel color is determined with a 10-bit gray scale signal for each dot.

The P430HVN01.4 has been designed to apply the 10-bit 2 channel LVDS interface method. The main feature of P430HVN01.4 would be high brightness, high contrast, wide viewing angle, high color saturation, symmetry narrow bezel, edge LED backlight and high color depth.

* General Information

Items	Specification	Unit	Note
Active Screen Size	43.0	Inch	
Display Area	1018.08(H) x 572.67(V)	mm	
Outline Dimension	1044.08(H) x 598.67(V) x 9.9(D)	mm	1
Driver Element	a-Si TFT active matrix		
Display Colors	10 bit (8bit+FRC), 1073.7M	Colors	
Number of Pixels	1920x1080	Pixel	
Pixel Pitch	0.53025 (H) x 0.53025(W)	mm	
Pixel Arrangement	RGB vertical stripe		
Display Operation Mode	Normally Black		
Display Orientation	Landscape/Portrait Enable		
Surface Treatment	AG	Haze = 11%	

Note:

(1) Dmax: 26.5mm (Front bezel to Driver cover); Dmin: 9.9mm (Front bezel to Bezel back)

10-2 CLEANING THE SCREEN

⚠ CAUTION

- Since the LCD display screen is susceptible to damage, pay careful attention to its handling. When cleaning, refrain from using water or volatile chemicals
- Do not climb onto the control panel as this could lead to injuries
- When reaching across the control panel to clean the screen, there is a risk of hurting your shoulder or arm. Use a mop with a non-feathery, soft, dry cloth mop head and wipe the surface of the screen

When the screen surface becomes dirty with dust, etc., clean it by using a soft cloth such as gauze. When water, and volatile chemicals such as benzene, thinner, etc., spill on the screen surface, it may be subject to damage, therefore, do not use them.

Also, since the surfaces are susceptible to damage, refrain from rubbing them with a hard material or using a duster. If the screen is especially dirty, call in a professional cleaner.

10-3 ADJUSTMENT METHOD


All adjustment values are set accurately at the time of shipping from the factory. Do not adjust these values needlessly or apply adjustments not specified in this Manual. The display may not appear properly if the values are incorrect


CONTROL - ADJUSTMENT PROCEDURE

This sections explains basic control procedures for making adjustments using the buttons on the 'Monitor Adjustment Board'


LOCATION

The DISPLAY CONTROL BD is located on the rear of the Display Panel. Remove the Back Door to gain access.

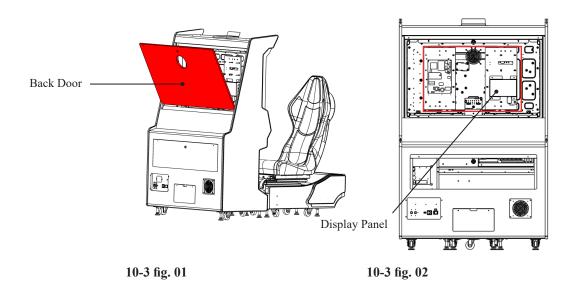

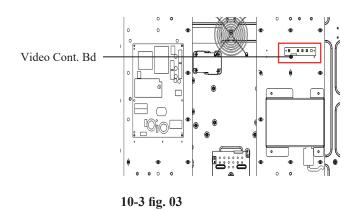

Button Names and Functions

 

10-3 Fig. 04

MENU: Turn the Picture Menu display ON and OFF.

SELECT: Gains entry to the Item selected in the menu. (Highlights in Yellow when selected)

Exits the Item adustment. Any changes made during this operation are actioned.

DOWN: Moves the cursor (Black Bar) down to select a menu item.

Decrease the value of, or change, a selected menu item.

UP: Move the cursor (Black Bar) up to select a menu item.

Increase the value of, or change, a selected menu item.

LED: LED illuminates green: Monitor is operating.

LED flashes red: Power is off.

POWER: Turns the LCD Display ON and OFF (usually, this is not necessary to operate)

On-Screen Display (OSD)


Press the MENU Button while the OSD is not displayed to bring up the Picture Menu. On the Picture Menu, it is possible to perform various screen adjustments.



10-3 Fig. 05

Use the UP and DOWN Buttons to move the 'Black Bar'to the item you want to adjust. After selecting the desired item, pressing the SELECT Button will extend the MENU Screen and allow adjustments to be changed.

Within each item, press the SELECT Button to exit the adjustment screen. The adjustment values at this time will be saved simultaneously.

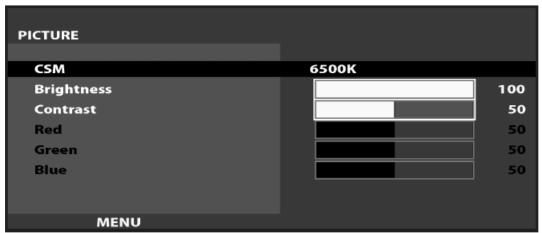


10-3 Fig. 06

The current options are set at:

CSM - 6500K Brightness - 100 Contrast - 50

On-Screen Display (OSD) <continued>

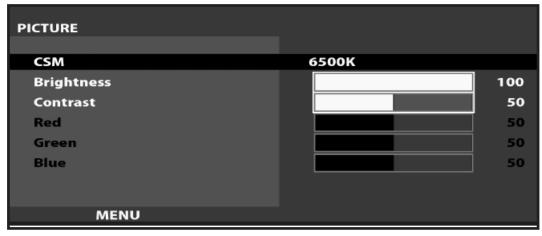

10-3 Fig. 07

Available Settings

CSM (Selects Operation Mode))
Selection availble - 6500K - 9300K - USER

BRIGHTNESS (Adjust Brightness)

Adjust screen Brightness. - Values: 0 - 100

(0" being the darkest setting, and "100" being the brightest)

CONTRAST (Adjust Contrast)

Adjust Contrast level. - Values: 0 - 100

(0" having the least amount of difference between light and dark, and "100" having the most)

NOTE: The Red, Green, and Blue adjustments are unavailable in the Mode of Operation selected on the Screen shown in 11-3 Fig. 06. These adjustments can only be made if the CSM option is set to 'User'.

MARNING

- When working with the product, be sure to turn the power off. Working with the power on may cause an electric shock or short circuit
- Be careful not to damage the wires. Damaged wires may cause an electric shock, short circuit or present a risk of fire
- Do not touch any parts that are not specified in these directions. Touching unspecified locations may lead to electric shock or cause short circuits
- This work should be performed by site maintenance personnel or other skilled professionals. Work performed by non-technical personnel can cause a severe accident such as an electric shock
- Exercise due caution in performing soldering procedures. If soldering iron is handled carelessly, there could be fires or burns
- Proceed very carefully when heating thermal contraction tube. Careless operations can result in fires or burns

⚠ CAUTION

- When fastening plastic parts, be careful not to tighten screws and nuts excessively or parts may be damaged, resulting in injuries from fragments, etc.
- Be careful not to get hand or finger caught when removing or attaching the parts
- Disconnection and connection of connectors will be performed within the narrow cabinet space. Take due care not to scratch or otherwise injure yourself
- Take care when carrying the removed Control Units. Such heavy lifting carries a risk of injury to back or shoulders

STOP IMPORTANT

- After the Potentiometer has been replaced, be sure to set the values on the test mode CALIBRATION and INPUT test screen, and check variations in the volume value
- Handle parts inside the Control Unit very carefully. Be especially careful to avoid damage, deformation, or loss of these parts. If any one of these parts is lost or defective, it can result in damages and/or faulty operations

⚠ CAUTION

- After the unit has been disassembled and reassembled again, check carefully that the unit has been reassembled correctly
- Be sure to inspect the outer covers on both gear and brake units
- Assemble so that there is no gap between the L and R covers. If there is a gap
 or rattling, the players could get fingers or hands caught, resulting in injury




STOP) IMPORTANT

- Once the product has been disassembled, use slack preventive agent. Coat screws with suitable amounts of this agent and then tighten them. If this agent is not used, the product might start rattling or come apart
- Use the slack preventive agent prescribed in these instructions. If any other agent is used, there could be chemical changes that inhibit the use of screws and part surfaces could be damaged
- Be careful not to damage or lose small parts or screws
- When a part has been replaced, be sure to always make adjustments and check conditions in Test Mode

11-1 CONTROLLER - EXPLODED DIAGRAM

The exploded diagram below shows the Active Steering Wheel Assy. Each part is tagged with a part number. Please quote this number when ordering spare parts.

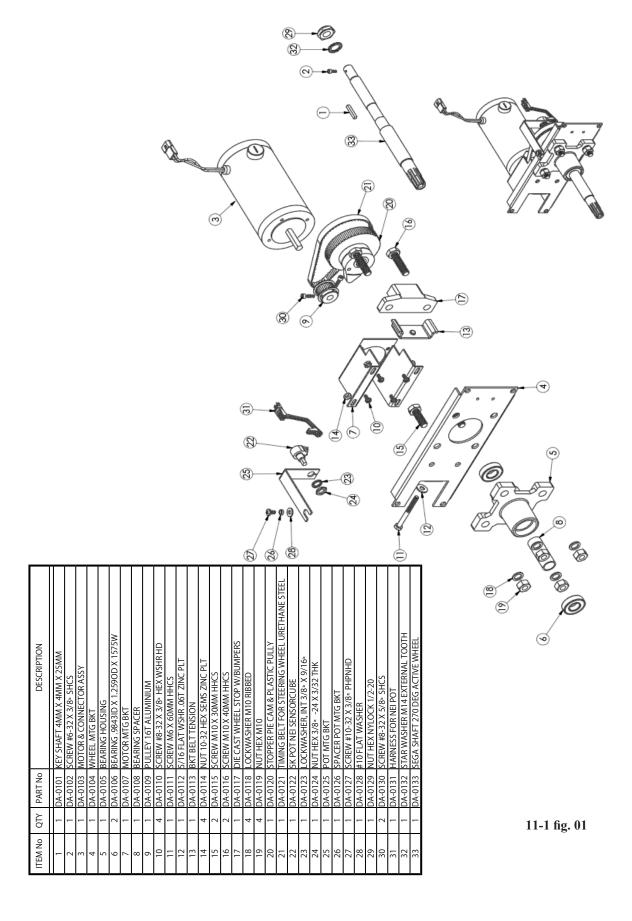

11-2 BRAKE AND ACCELERATOR UNIT

MARNING

When working with the product, be sure to turn the power off. Working with the power on may cause an electric shock or short circuit. However, the unit must be switched on when using test mode. Do not touch any part of the unit except the areas indicated.

Be careful not to damage wires. Damaged wires may cause an electric shock, short circuit or present a risk of fire.

This work should be performed by site maintenance personnel or other skilled professionals. Work performed by non-technical personnel can cause a severe accident such as an electric shock.

To prevent accidents while working or while operating the product after it has been installed, be sure not to conduct any procedures other than those given in this manual. There are cases in which procedures not covered in this manual require special tools and skills.

If a procedure not given in this Manual is required, request service from the office given in this manual or from the point of purchase.

STOP IMPORTANT

Be sure to perform volume's move value setting in the Input Test in the Game Test Mode after replacing or adjusting the Volume.

If the accelerator or brake pedals are not functioning correctly, you may need to adjust the positioning of the volume or replace it with a new one. In addition, you should apply grease to the gear contacts and spring parts once every three months.


When the accelerator pedal is not being pressed, the accelerator volume should have a value of 30H or less. When the pedal is being pressed, the value should be C0H or greater.

When the brake pedal is not being pressed, the value should be 35H or less. When the pedal is being pressed, it should be D0H or more. You can view these values in test mode. Note that the unit must be switched on to use test mode. Do not touch any part of the unit except those areas indicated when the unit is switched on, as there is a danger of electrical shock or short-circuit.


For this task, you will need a Phillips-head screwdriver (for M4, M5 screws).

Adjusting Procedure

On the accelerator and brake pedal unit, remove the two truss screws and lift off the front cover.

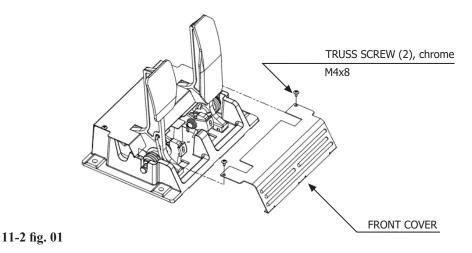

2 Loosen the single screw that secures the potentiobase, and move the base to adjust the volume values.

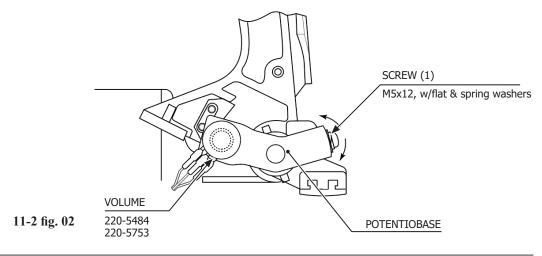


- Secure the potentiobase.
- Configure the volume values on the INPUT ASSIGNMENTS screen in Game Test Mode.
- Check that the values change smoothly in response to pedal input.

11-3 ADJUSTING/REPLACING THE VOLUME POT

Replacing the Volume


- Remove power from the cabinet.
- Remove the two screws and lift off the potentio cover.

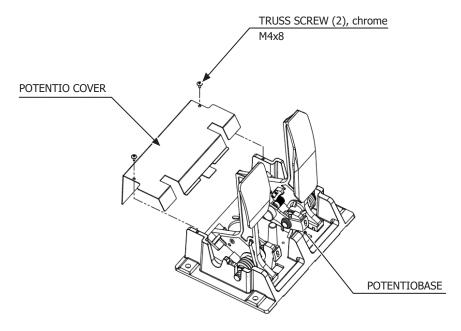

11-3 fig. 01

- 2 Detach the connector from the volume to be replaced.
- Remove the single screw that secures the potentiobase. (see 11-3 FIG. 01).
- Without detaching the volume, remove the potentiobase. (see 11-3 FIG 02).
- The wire connected to the volume pot will be reused. Use a tool such as a pair of snips or cutters to remove the old heatshrink tubes which cover the contacts.

Use a soldering iron to melt the solder and seperated the wires from the old volume pot. Be very careful when using a soldering iron.

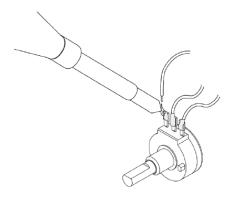

11-3 fig. 02


- If the exposed conductive wire at the end is less than 5mm, use a tool such as a wire stripper or cutter to cut the wire insulation back to a workable length. Place new sleeving over the wire before resoldering them to the pot.
- Once soldered, cover the bare contacts with the sleeving. If heatshrink is used, apply heat from an appropriate hot air blower to shrink the sleeving tightly over the contacts.
- Reassemble the pot to the pot bracket by working in reverse order of these instructions. Refer to the POT VOLUME ADJUSTMENT section of this manual.

11-4 GREASING



Use only the specified grease. Using any other kind of grease can result in damage to parts.

Once every three months, you should apply grease to the gear contacts and spring parts. Use Grease Mate-brand spray grease (Part No.: 090-0066).

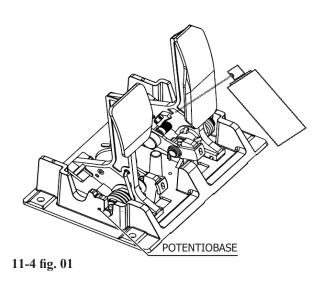

11-5 SHIFT LEVER

⚠ WARNING


- When working with the product, be sure to turn the power off. Working with the power on may cause an electric shock or short circuit
- Be careful not to damage the wires. Damaged wires may cause an electric shock, short circuit or present a risk of fire

If the shift lever switch input does not function correctly on the INPUT TEST screen, the switch may need to be replaced. To carry out this maintenance, you must first remove the shift lever unit.

For this task, you will need a tamper proof wrench (for M5 screws), /and a Phillips-head screwdriver (for M4 screws).

11-6 REMOVING THE SHIFT LEVER

- Turn the power OFF
- Using the M5 tamper proof wrench remove the four tamper proof screws, 1 located in each of the corner of the Shift Lever*
- Gently lift out the Shift Lever to reveal the wiring harness, locate the plug connecting it to the Control panel and remove the connection. The Shift Lever can now be extracted
- When re-installing the Shift Lever, follow the above instructions in the reverse order
- After the re-installation of the Shift Lever, be sure to check the INPUT TEST in the Game Test mode to determine it's correct operation

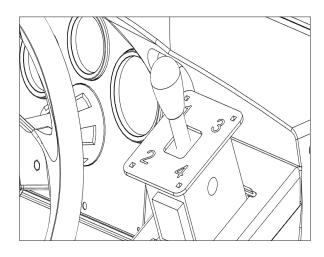


11-6 fig. 01

^{*}The Shift Lever may be either a 4-Speed Shifter or an Up/Down Shifter, but the removal procedure is the same for both.

11-7 SHIFT SWITCH REPLACEMENT

Follow the instructions below to change the microswitch:

- Unscrew and remove the M3x16 Self Tapping Screws which secure the microswitch to the Gear Shift base
- **?** Remove the microswitch
- Remove the wiring harness from the old microswitch and re-attach it to the replacement switch in the same manner

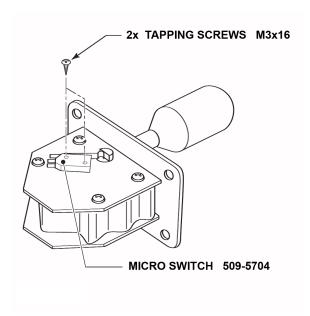

11-7 fig. 01

- Using the M3x16 Self Tapping Screws, refit the replacement microswitch to the Gear Shift base
- The unit is now ready to be refitted into the Control Panel. To do this, follow the instructions in reverse order

12 COIN HANDLING

Handling the Coin Jam

If the coin is not rejected when the REJECT button is pressed, open the coin chute door and open the selector gate. After removing the jammed coin, put a normal coin in and check to see that the selector correctly functions.

12-1 CLEANING THE COIN SELECTOR




- Remove and clean smears by using a soft cloth dipped in water or diluted chemical detergent and then squeezed dry
- Never apply machine oil, etc. to the Coin Selector
- After cleaning the Coin Selector, insert a regular coin in the normal working status and ensure that the selector correctly functions

The Coin Selector should be cleaned once every 3 months. When cleaning, follow the procedure below:

Turn the power for the machine OFF. Open the Coin Chute Door


Remove the Coin Selector from the Coin Chute Door


Open the gate and dust off by using a soft brush (small soft Paint Brush, etc.)

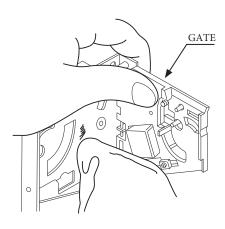

CLEANING THE COIN SELECTOR (MECHANICAL)

 - Remove and clean smears by using a soft cloth dipped in water or diluted chemical detergent and then squeezed dry.
- Remove the CRADLE. When removing the retaining ring (E ring) be very careful so as not to bend the rotary shaft.



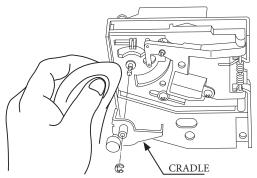

After wiping off as per previous step, further apply a dry cloth to completely dry the Coin Selector.


Coin Insertion Test

Once every month, when performing the Coin SW Test, simultaneously check the following:

Does the Coin Meter count satisfactorily?


Does the coin drop into the cashbox correctly?

Is the coin rejected when inserted while keeping the REJECT Button pressed down?

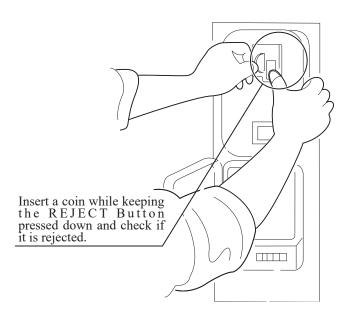

CLEANING THE COIN SELECTOR (SR3 / NRI)

Remove and clean smears by using a damp soft cloth dipped in water. DO NOT use any diluted chemical detergent or cleansing agent as this will impair the workings of the component.

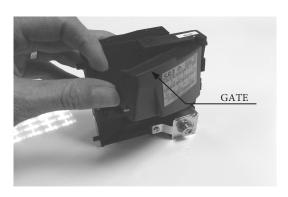

Open the reject gate to gain access to the rundown path.



- Remove the dirt and stains from the runway by wiping off with a soft damp cloth.
- After wiping off as per previous step, further apply a dry cloth to completely dry the coin Selector.



12-2 FAULT FINDING

Fault Finding

The following information is presented for customers' guidance in rectifying a fault but does not cover all possible causes.

All acceptors with electronic faults should be returned to an approved service centre for repair.

SYMPTOM	INVESTIGATE	POSSIBLE CAUSE					
	Connector	Poor Contact					
	Connector	Loose Wire					
		Not switched on					
	Power Supply	Incorrect voltage					
	i ewer eappry	Inadequate current					
		Rise time too slow					
Acceptor does not work (all	Inhibit all inputs	Acceptor Inhibited					
coins reject)	Accept gate	Gate not free or dislocated					
	Accept channel	Obstruction					
	Reject gate	Not fully closed					
		EEPROM chksm error					
		SR Sensor fault					
	LED on rear cover RED	Credit opto fault					
		Credit sensor blocked					
		Reject lever pressed					
	LED on rear cover YELLOW	Reinstall power					
	Power Supply	Voltage less than 10v (Voltage					
		drops when coil engages)					
D A	Accept gate	Gate jam or dislocated					
Poor Acceptance	Connector	Loose					
	Coin rundown	Dirty					
	Bank Select	Both banks enabled					
Online official and large in	Accept channel	Acceptor dirty or may have					
Coin stick or jam in	Accept gate	some damage					
acceptor	Regect gate	Some damage					
A true coin type rejects	Label	Coin not programmed					
No accept signal	Connector	Loose or broken wire					
. No doopt oignal	Accept channel	Path dirty or obstructed					

12-3 ADJUSTING THE PRICE OF PLAY (EXCEL)




• The price of play is determined by the configuration of switches located on either the EXCEL or VTS board. The type of board used is determined by product location. Switch settings for both types of board remain the same

This product comes equipped with a Crane NRI Coin Acceptor. To adjust the price of play ALL CREDIT SETTINGS are adjusted via the EXCEL CREDIT BOARD.

IMPORTANT!

The CREDIT SETTINGS within the SYSTEM TEST MODE must be set to 1 Coin 1 Credit to allow the CREDIT BOARD to function correctly.

The CREDIT BD has a built in accumilator. This is controlled by 2 DIL Switches. These allow the operator to select the price of play, type of coin acceptor and region.

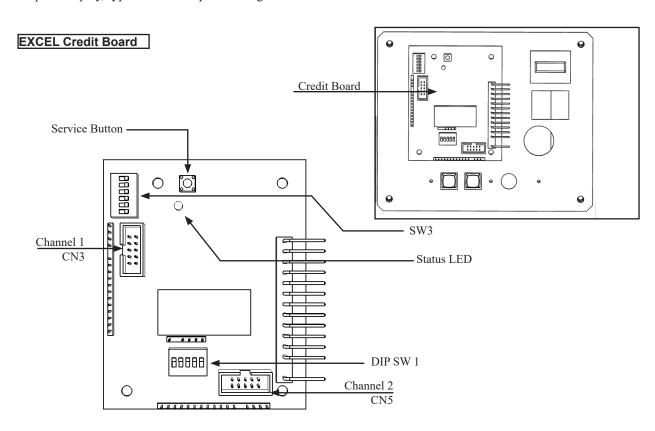

DIL SW3 (Regional Settings)

Adjust these switches to specify the type of Coin Acceptor used and currency.

Default = SW1&SW2 ON - SR3/NRI in parallel mode, Sterling.

SERVICE BUTTON Provides a SERVICE CREDIT when pressed

Status LED Flashes when functioning.

CHANNEL 1 To Coin Acceptor (SR3 TYPE.)

DIL SW1 (credit settings) Adjust to required price of pay.

VOL CONTROL MAIN VOLUME ADJUSTMENT (FRONT SPEAKERS)

12-4 COIN REGION & PRICE OF PLAY SETTINGS

	Y 85 9 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Spain SR3/NRI Parallel Spain Coin Controls C220 Parallel Portugal Parallel Euro TBA Channels	 	 	- - - 	 	- I I I				ł	C220 Binary	Spain Coin Controls	Austria SR3 Parallel	Holland Parallel	Belgium Parallel	UK NRI Parallel	UK Mars ME/MS 111 Parallel	UK Coin Controls Euro SR3 Parallel	UK Coin Controls SR3 Parallel	UK Coin Controls C220 Binary	UK Coin Controls C220 Binary	UK Coin Controls C220 Parallel		Country Setting	
							1	OFF ON		9	9		OFF	OFF	OFF	NO	ON	9	9	유	OFF		유		Switch 3	
	OF THE THE SWA						Ì	9		9	9		ON N	NO	NO	OFF	OFF	OFF	유	유	OFF	유	유	SW4	3 Setting	
Switch 3 SW2 SW3 OFF OFF ON ON OFF ON ON OFF ON OT	OF OF ON ON OF OF OF OF OF ON ON OF OF OF ON ON OF			9		C																		SW5	ď	
SWItch 3 Setting SW2 SW3 SW4 SW5 OFF OFF OFF OFF ON OFF OFF OFF ON ON OFF ON OFF ON ON OFF ON OFF ON ON OFF	Witch 3 Setting SW3 SW4 SW5 OFF OFF OPF OFF ON OFF OFF ON OFF		OFF [L		_																	SW6		
SWItch 3 Setting SW2 SW3 SW4 SW5 SW6 OFF OFF OFF OFF ON OFF OFF OFF ON OFF	Witch 3 Setting SW3 SW4 SW5 SW6 OFF OFF OFF OFF ON	dacdo (Direct Mode	TBA		BA	<u>}</u>	200Es <i>€</i> 1		100Pta	500Pta		500Pta	20Sch		-	10p	£1	£2 €2	٤1	£1	£1	£1	COIN1		
SWItch 3 Setting SW2 SW3 SW4 SW5 SW6 OFF OFF OFF OFF ON OFF OFF OFF ON OFF	Witch 3 Setting SW3 SW4 SW5 SW6 OFF OFF OFF OFF ON	2 channal Mode	ode				000	100Es	new	50Pta	200Pta		200Pta	10Sch	5NLG	50BFr	20p	£2	€1	50p new	50p new	50p new	50p new	COIN2		Credit Boa
SW1ch 3 Setting SW2 SW3 SW4 SW5 SW6 COIN1 OFF OFF OFF OFF £1 ON OFF OFF OFF £1 ON OFF OFF OFF £1 ON OFF ON OFF £2 OFF ON OFF ON OFF - 10p ON OFF ON OFF ON 500Pta ON OFF ON ON 500Pta OFF ON ON ON 500Pta	witch 3 Setting SW3 SW4 SW5 SW6 COIN1 OFF OFF							50Es		-	100Pta		100Pta	5Sch	2.5NLG	20BFr	50p	20p	50p new 50¢	20p	20p	20p	20p	COIN3	Coin	ırd Mode Se
Switch 3 Setting Credit Board Mo SW2 SW3 SW4 SW5 SW6 COIN1 COIN2 COI OFF OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 OFF ON OFF £1 50p new 20 OFF ON OFF £2 £1 50p ON OFF ON F1 £2 £1 50p ON OFF ON OFF - 50BFr 20E ON OFF ON 20Sch 10Sch 5S ON OFF ON 500Pta 20Pta 100 ON OFF ON 500Pta 200Pta 100	Credit Board Mowitch 3 Setting SW3 SW4 SW5 SW6 COIN1 COIN2 COI OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £2 £1 50p new 20 ON OFF £2 £1 50p 50p ON OFF 10p 20p 50 ON OFF ON 20Sch 10Sch 5S OFF ON 500Pta 200Pta 100 OFF ON 500Pta 200Pta 100							ı	new	25Pta	50Pta		50Pta	1Sch	1NLG	5BFr	£1	10p	20p 20¢	10p	10p	10p	10p	COIN4	Validator F	ettings Swi
Switch 3 Setting Credit Board Mo SW2 SW3 SW4 SW5 SW6 COIN1 COIN2 COI OFF OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 OFF ON OFF £1 50p new 20 OFF ON OFF £2 £1 50p ON OFF ON F1 £2 £1 50p ON OFF ON OFF - 50BFr 20E ON OFF ON 20Sch 10Sch 5S ON OFF ON 500Pta 20Pta 100 ON OFF ON 500Pta 200Pta 100	Credit Board Mowitch 3 Setting SW3 SW4 SW5 SW6 COIN1 COIN2 COI OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £2 £1 50p new 20 ON OFF £2 £1 50p 50p ON OFF 10p 20p 50 ON OFF ON 20Sch 10Sch 5S OFF ON 500Pta 200Pta 100 OFF ON 500Pta 200Pta 100							ı		1	25Pta		25Pta				£2	50p new	10p 10¢	ı	-			COIN5	⁻rogramm	tch 3
Switch 3 Setting Credit Board Mo SW2 SW3 SW4 SW5 SW6 COIN1 COIN2 COI OFF OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 ON OFF OFF £1 50p new 20 OFF ON OFF £1 50p new 20 OFF ON OFF £2 £1 50p ON OFF ON F1 £2 £1 50p ON OFF ON OFF - 50BFr 20E ON OFF ON 20Sch 10Sch 5S ON OFF ON 500Pta 20Pta 100 ON OFF ON 500Pta 200Pta 100	Credit Board Mowitch 3 Setting SW3 SW4 SW5 SW6 COIN1 COIN2 COI OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £2 £1 50p new 20 ON OFF £2 £1 50p 50p ON OFF 10p 20p 50 ON OFF ON 20Sch 10Sch 5S OFF ON 500Pta 200Pta 100 OFF ON 500Pta 200Pta 100					The crea			old	50Pta	ı	old	200Pt				-	50p old	-	£2	£2	50p old	50p old	COIN6	ing	
Switch 3 Setting Credit Board Mode Settings Switch 3 SWZ SW3 SW4 SW5 SW6 COIN1 COIN2 COIN3 COIN4 COIN5 OFF OFF OFF E1 50p new 20p 10p OFF OFF OFF E1 50p new 20p 10p ON OFF OFF E1 50p new 20p 10p ON OFF OFF F1 50p new 20p 10p OFF ON OFF F1 50p new 20p 10p OFF ON OFF E1 50p new 20p 10p OFF ON OFF E1 £2 £1 50p new 50p new OFF ON OFF ON 50BFr 20BFr 20g 10g 50p new OFF OFF ON 500Pta 200Pta 100Pta </td <td>Credit Board Mowitch 3 Setting SW3 SW4 SW5 SW6 COIN1 COIN2 COI OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £2 £1 50p new 20 ON OFF £2 £1 50p 50p ON OFF 10p 20p 50 ON OFF ON 20Sch 10Sch 5S OFF ON 500Pta 200Pta 100 OFF ON 500Pta 200Pta 100</td> <td></td> <td></td> <td></td> <td></td> <td>dit board au through an is necessa</td> <td></td> <td></td> <td></td> <td>1</td> <td></td> <td>old</td> <td>50Pta</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>,</td> <td>,</td> <td>•</td> <td>'</td> <td>,</td> <td>COIN7</td> <td></td> <td></td>	Credit Board Mowitch 3 Setting SW3 SW4 SW5 SW6 COIN1 COIN2 COI OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £1 50p new 20 OFF OFF £2 £1 50p new 20 ON OFF £2 £1 50p 50p ON OFF 10p 20p 50 ON OFF ON 20Sch 10Sch 5S OFF ON 500Pta 200Pta 100 OFF ON 500Pta 200Pta 100					dit board au through an is necessa				1		old	50Pta						,	,	•	'	,	COIN7		
Switch 3 Setting Credit Board Mode Settings Switch 3 Switch 3 Setting Colin Validator Programming SW2 SW4 SW5 SW6 COIN1 COIN2 COIN3 COIN4 COIN5 COIN6 OFF OFF OFF £1 50p new 20p 10p 50p old ON OFF OFF £1 50p new 20p 10p £2 ON OFF OFF £1 50p new 20p 10p £2 OFF ON OFF £2 £1 50p new 20p 10p £2 OFF ON OFF £2 £1 50p new 20p 10p £2 OFF ON OFF £2 £1 £2 20p 10p 50p new	witch 3 Setting Credit Board Mode Settings Switch 3 SW3 SW4 SW5 SW6 COIN1 COIN2 COIN3 COIN4 COIN5 COIN6 OFF OFF £1 50p new 20p 10p - 50p old OFF OFF £1 50p new 20p 10p - 50p old OFF OFF £1 50p new 20p 10p - £2 OFF OFF £1 50p new 20p 10p - £2 ON OFF £2 £1 50p new 20p 10p - £2 ON OFF £1 £2 £1 50p new 20p 10p - £2 ON OFF £1 £2 20p 10p 50p new 5				WIFE	utomatically output on property for the value of the valu			old	25Pta	200Pta	old	25Pta						-	50p old	50p old	£2	,	COIN8		
Switch 3 Setting Switch 3 Switch Switch 3 Switch S	Witch 3 Setting				wire at this position	ly sets the validator intervalidator interval					ı								50p old	-				COIN9		
Switch 3 Setting Switch 3 Settings Switch 3 Setting Switch 3 Setting Switch 3 Setting Switch 3 Setting Switch 3 Switc	Sudich 3 Setting				ition	e 'alidator for 17 way pir erconnectir					50Pta old								ı					COIN10	C120/S	
Switch 3 Setting Switch 3 Settings Switch 3 Setting Switch 3 Setting Switch 3 Setting Switch 3 Switch	Credit Board Mode Settings Switch 3 Coin Validator Programming Coin Validator Programming SW3 SW4 SW5 SW6 COIN1 COIN2 COIN3 COIN4 COIN5 COIN6 COIN7 COIN8 COIN9 COIN9 <th< td=""><td></td><td></td><td></td><td></td><td>The credit board automatically sets the validator for parallel and binary operation through an output on pin 8 of the 17 way pinstrip. For the feature to work it is necessary for the validator interconnecting cable to include at</td><td></td><td></td><td></td><td></td><td>25Pta old</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>ı</td><td>ı</td><td></td><td></td><td></td><td>COIN11</td><td>R3 Only</td><td></td></th<>					The credit board automatically sets the validator for parallel and binary operation through an output on pin 8 of the 17 way pinstrip. For the feature to work it is necessary for the validator interconnecting cable to include at					25Pta old								ı	ı				COIN11	R3 Only	
Switch 3 Setting	Sulting Colint					d binary he feature nclude at					1								1	,				COIN12		

Set SW 1 according to the option settings found in the relevant Price of Play Settings Table on the following pages.


Set SW 3 on the VTS /Excel board as shown in the table above corresponding to the country required.

	PRICE OF PLAY	BONUS		D	IL SWITCH	1	
			1	2	3	4	5
1	0.10	-	OFF	OFF	OFF	OFF	OFF
2	0.10	0.50 = 6 credits	ON	OFF	OFF	OFF	OFF
3	0.20	-	OFF	ON	OFF	OFF	OFF
4	0.20	0.50 = 3 credits	ON	ON	OFF	OFF	OFF
5	0.30	-	OFF	OFF	ON	OFF	OFF
6	0.30	1.00 = 4 credits	ON	OFF	ON	OFF	OFF
7	0.30	0.50 = 2 credits	OFF	ON	ON	OFF	OFF
8	0.30	1.00 = 3 credits	ON	ON	ON	OFF	OFF
9	0.40	-	OFF	OFF	OFF	ON	OFF
10	0.40	1.00 = 3 credits	ON	OFF	OFF	ON	OFF
11	0.50	-	OFF	ON	OFF	ON	OFF
12	0.50	1.00 = 3 credits	ON	ON	OFF	ON	OFF
13	0.50	2.00 = 5 credits	OFF	OFF	ON	ON	OFF
14	0.60	-	ON	OFF	ON	ON	OFF
15	0.60	1.00 = 2 credits	OFF	ON	ON	ON	OFF
16	0.80	-	ON	ON	ON	ON	OFF
17	0.80	1.50 = 2 credits	OFF	OFF	OFF	OFF	ON
18	1.00	-	ON	OFF	OFF	OFF	ON
19	1.00	2.00 = 3 credits	OFF	ON	OFF	OFF	ON
	1.00	4.00 = 5 credits	ON	ON	OFF	OFF	ON
21	1.50	-	OFF	OFF	ON	OFF	ON
22	1.50	2.00 = 2 credits	ON	OFF	ON	OFF	ON
23	2.00	-	OFF	ON	ON	OFF	ON
24	2.00	5.00 = 3 credits	ON	ON	ON	OFF	ON
25	3.00	-	OFF	OFF	OFF	ON	ON
26	3.00	5.00 = 2 credits	ON	OFF	OFF	ON	ON
27	5.00	-	OFF	ON	OFF	ON	ON
28	5.00	10.00 = 3 credits	ON	ON	OFF	ON	ON
29	7.50	-	OFF	OFF	ON	ON	ON
30	7.55	10.00 = 2 credits	ON	OFF	ON	ON	ON
31	10.00	-	OFF	ON	ON	ON	ON
32		FREE PLAY	ON	ON	ON	ON	ON

The price of play is controlled by DIL switches 1 to 5 of a bank of 8, located on the EXCEL CREDIT BD.

Default values are in **BOLD**

12-5 PRICE OF PLAY QUICK START - USA

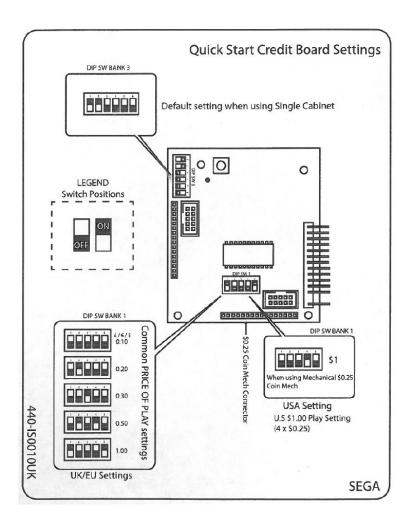

DIL SWI1	DIL SWITCH BANK ONE (5 way SW1)										
ltem	Price	SW1	SW2	SW3	SW4	SW5					
1	25cent	OFF	OFF	OFF	OFF	OFF					
3	50cent	OFF	ON	OFF	OFF	OFF					
5	75cent	OFF	OFF	ON	OFF	OFF					
9	\$1.00	OFF	OFF	OFF	ON	OFF					
16	\$2.00	ON	ON	ON	ON	OFF					
DIL SWI1	DIL SWITCH BANK TWO (6 way SW3)										
Type	SW1	SW2	SW3	SW4	SW5	SW6					
USA	OFF	OFF	OFF	OFF	OFF	OFF					

13 LAMPS AND LIGHTING

MARNING

- When working with the product, be sure to turn the power off. Working with the power on may cause an electric shock or short circuit
- You may get burned by a hot fluorescent lamp or other lamps. Pay full attention to the lamps when performing work
- Be sure to use lamps of the designated rating. Using lamps of undesignated rating can cause fire or malfunctioning
- There is the danger of short circuits or smoke generation due to deterioration
 of insulation in lighting fixtures resulting from age deterioration. Check for
 anomalies such as the following: Does it smell like something is burning? Is there
 socket discoloration? Are any lamps being replaced frequently? Do lamps not
 go on properly?

⚠ CAUTION

The Coin Door Lamp utilises a 12v 1.2w Wedge Bulb. It is important that you replace this bulb or any other bulb of that of the same voltage and rating. Failing to observe this caution may result in PCB failure or possible fire hazard

13-1 COIN DOOR LAMP


- Step 1. Open the Coin Door and locate the Lamp Housing directly behind the Coin Insert Bezel.

 Lamp Housing*
- Step 2. Hold the Lamp Housing firmly between your index finger and thumb and gently pull upwards. Do not try to remove the Lamp Housing whilst holding the bulb as the bulb may break causing injury.
- Step 3. Once the Lamp Housing has been removed, carefully hold the bulb between your fingers and pull the Lamp Housing away.

Do not twist either bulb or Lamp Housing whilst removing the bulb as this may cause damage to both bulb and/or Housing.

Type: Wedge Bulb - 12v, 1.2w

Step 4. Simply push-fit a replacement bulb of the same type and follow these steps in reverse to refit.

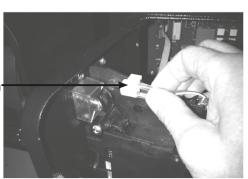



13-2 FOOTWELL LIGHTING


The FOOTWELL LIGHTING provides an ambient coloured lighting effect to the FOOTWELL area. When the cabinets are joined in a network, each cabinet is assigned a different colour by means of illuminating various lighting around the cabinet. The FOOTWELL lighting forms part of this group.

1


Turn off the power


2

Locate the Footwell lighting cover positioned beneath the Control Panel

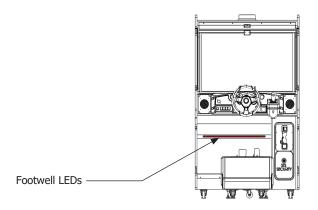


Remove the (2) M4x25 HEX KEY MSCR located at either end of the FOOTWELL LIGHTING COVER. Locate the LED strip and carefully peel away from the surface

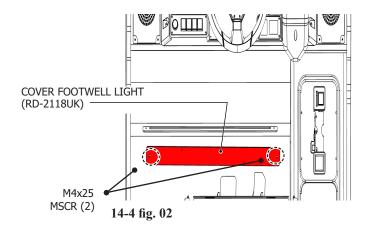

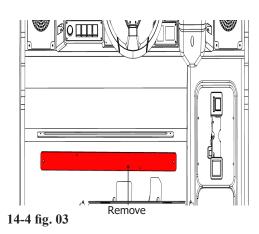


FLEX STRIP RGB LED 20CM 390-2012-020RGB

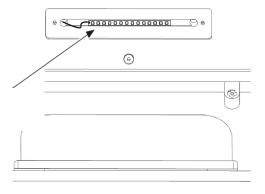


4

Remove the BACK DOOR of the DISPLAY CABINET. Locate and disconnect the connector for the FOOTWELL LED STRIP

(2) Unlock the Back door using the back door key (supplied)

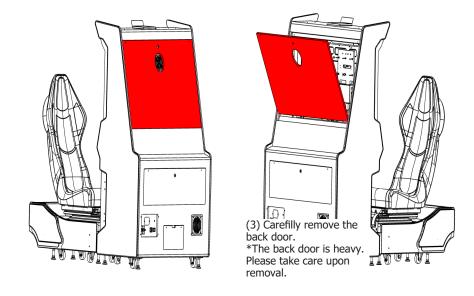

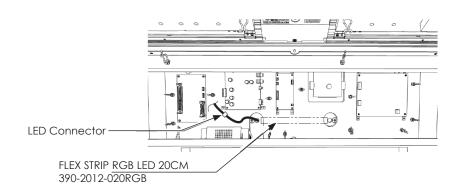


Carefully pull the LED STRIP through the access hole and discard. Fit a NEW LED STRIP by following these instructions in reverse order


13-3 INNER PANEL LIGHTING

Turn off the power

9 Unlock and remove upper back door

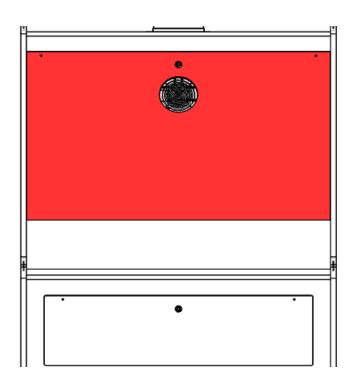


Remove the (3) M4 fixings highlighted

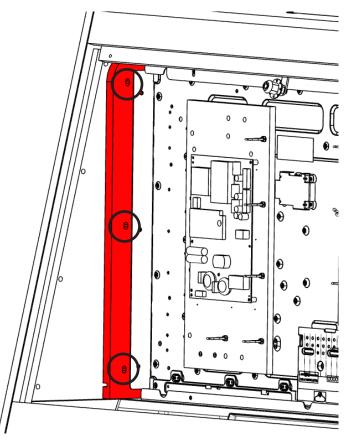


4

Slide the INNER PANEL out and away from the cabinet

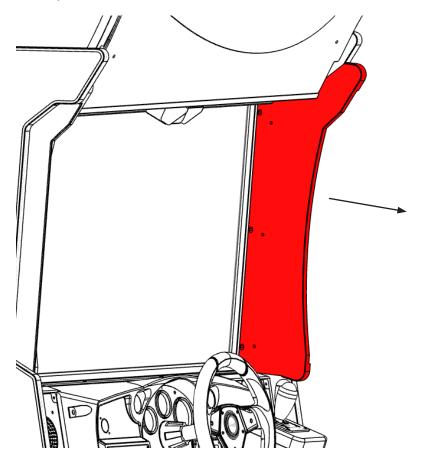


Replace the faulty LED strip on the inner side of INNER PANEL

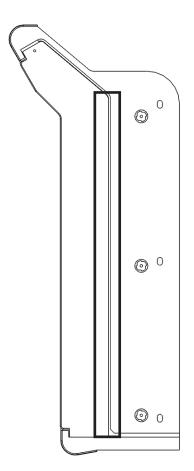


13-4 SEAT RING LIGHTING

Turn off the power

9 Remove (4) M4 fixings highlighted and remove SEAT RING DISC

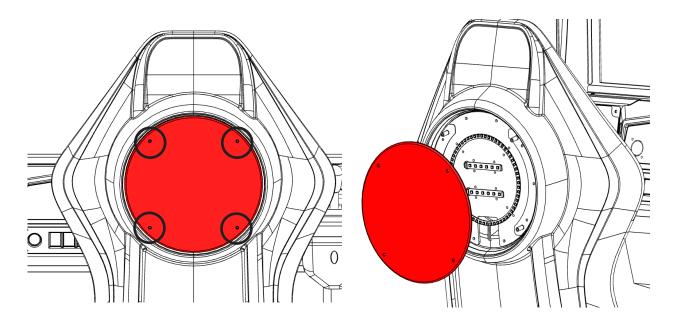

Remove and replace any faulty LED strips

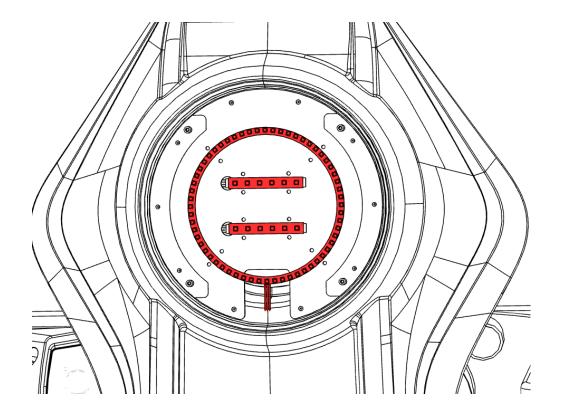


4


Resecure by following steps in reverse

13-5 BILLBOARD LIGHTING

Turn off the power

9 Remove (2) M4 fixings highlighted and remove BILLBOARD BUMPER

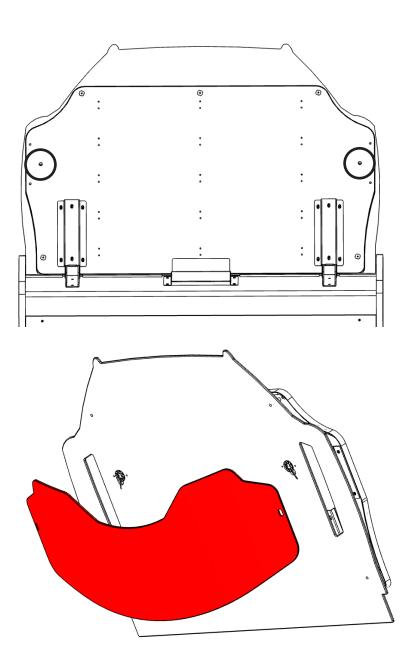

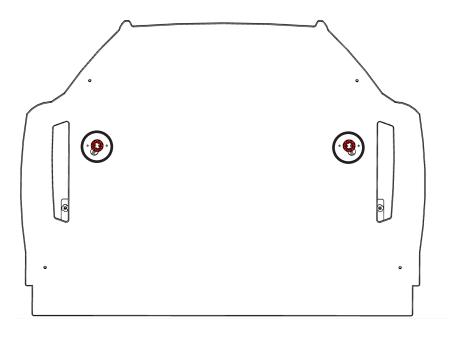


4


Resecure by following steps in reverse

13-6 UNDER SEAT LIGHTING

- Turn off the power
- **9** Remove (6) M4 fixings highlighted and remove COVER FLOOR LED

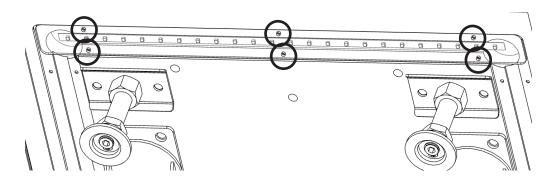

Remove and replace faulty LED strip

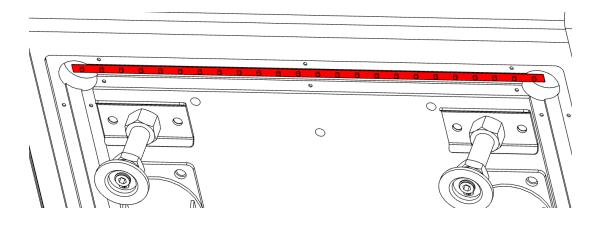

Resecure by following steps in reverse

MARNING

- Once a year, check to see if power cords are damaged, if the plug is securely inserted, dust has not accumulated between the socket outlet and the power plug, etc. Using the product with accumulated dust in the interior may cause fire or electric shock
- Never use a water jet, etc. to clean the inside and/or outside of the cabinet. If wetness occurs for any reason, do not use the product until it has completely dried
- Once a year, request the office shown on this Manual or the dealer from whom
 the product was originally purchased to perform the internal cleaning. Using
 the product with accumulated dust in the interior may cause fire or other
 accidents. Note that you are liable for the cost of cleaning the interior parts
- There is the danger of accidents involving electrical short circuits or fire caused by factors such as the deterioration of insulation in electrical and electronic equipment over time. Check that there are no abnormalities such as odors from burning



When the game is not in use, check at regular intervals and make sure that nothing has been forgotten or placed on the seats

⚠ WARNING

- Take care not to get fingers caught when opening/closing or attaching/removing doors, lids and other such parts
- When working inside the cabinet, parts can catch causing cuts and abrasions.
 Check the inside of the cabinet and be aware of where the parts are before performing the work

The items listed below require periodic checks and maintenance to guarantee the performance of this machine and to ensure safe operation.

Regularly clean all points of direct player contact such as the steering wheel and seat. Make regular inspections to ensure there is no damage to the surfaces and there are no foreign objects on the parts.

PERIODIC INSPECTION TABLE

ITEMS	DESCRIPTION	PERIOD
CABINET	Confirm that adjusters contact floor	Daily
	Seat check, removal of forgotten / other items	Daily
LCD DISPLAY	Screen cleaning	Weekly
	Check screen adjustment	1 month
	Exchange of lamp unit	When message is displayed
CONTROL UNIT	Cleaning	As appropriate
	Potentiometer Inspection	1 month
	Greasing	3 months
SEAT MECH	Cleaning	As appropriate
	Check for loose fixings	3 months
	Greasing	3 months
ACCEL/BRAKE	Potentiometer Inspection	1 month
	Greasing	3 months
COIN SELECTOR	Inspection of coin switch	1 month
	Coin insertion test	1 month
	Coin Selector cleaning	3 months
GAME BOARD	Individual tests	1 month
	Check of settings	1 month
LAMPS AND LIGHTING	Inspection of lighting fixtures	As appropriate
ELECTRICAL/ELECTRONIC PARTS	Inspection	As appropriate
POWER CABLE	Inspection, Cleaning	1 year
CABINET INTERIOR	Cleaning	1 year
CABINET SURFACES	Cleaning	As appropriate

Cleaning the Cabinet Surfaces


When the cabinet surfaces become dirty, remove stains with a soft cloth soaked in water or diluted (with water) chemical detergent and then wrung dry. To avoid damaging the finish, do not use such solvents as thinner, benzene, etc. (other than ethyl alcohol) or abrasives (bleaching agent and chemical dust-cloth).

Some general-purpose household, kitchen, and furniture cleaning products may contain strong solvents that degrade plastic parts, coatings, and print. Before using any cleaning product, read the product's cautionary notes carefully and test the product first on a small area that is not highly visible.

14-1 GREASING


GREASING SEAT RAIL

Move the seat to the rear most position and apply grease to the portion shown in the figure once every 3 months by using a good quality white lithium grease. After greasing, move the seat a few times forward and backward so as to allow the grease to be applied all over uniformly. Remove any residue from the protect rubbers and surrounding area..

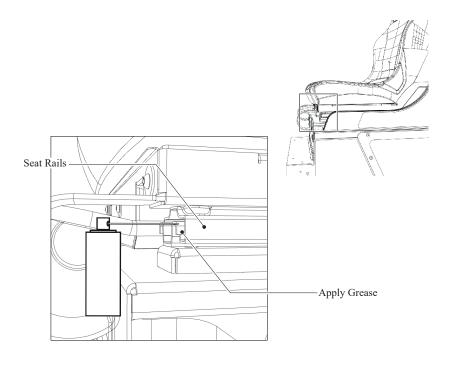

GREASING BRAKE & ACCEL

Remove the (4) fixings which secure the front and rear covers. Apply the lubricant to the areas shown. Be sure to apply a good quality synthetic lubricant. Using a mineral based lubricant may cause damage to plastic parts. Do not apply lubricant to parts other than those mentioned. Doing so may cause premature deterioration.

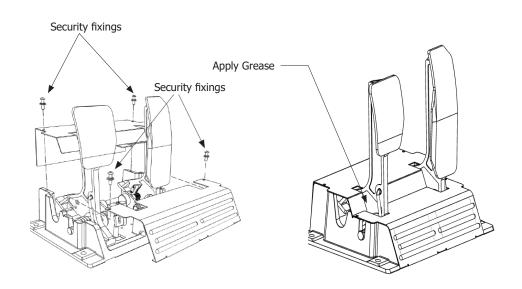

15 TROUBLESHOOTING & ERROR CODES

⚠ WARNING

- If an error message is displayed, have the problem looked at by a store maintenance person or a technician. Unless the problem is addressed by someone with specialized knowledge or skills, there could be electrical shock, short circuits or fire. If there are no store maintenance people or technicians, cut off the power immediately and contact the office shown in this manual or the dealer from whom the product was originally purchased
- If problems other than those covered in this Manual arise, or if no improvements
 can be noted after measures given in this Manual have been taken, do not
 take measures indiscriminately. Cut off the power immediately and contact the
 office shown in this manual or the dealer from whom the product was originally
 purchased. Indiscriminate countermeasures could lead to unforeseeable
 accidents. They could also result in permanent damages
- When working with the product, be sure to turn the power off. Working with the power on may cause an electric shock or short circuit
- Be careful not to damage the wires. Damaged wires may cause an electric shock, short circuit or present a risk of fire
- After the cause of circuit protector activation has been removed, have the circuit protector re-engaged. If the unit is used continuously as is, there could be heat generation or fire, depending on the cause of the activation

A CAUTION

- When removing and replacing parts, take due care not to trap or pinch your fingers
- The Control Units contain gears, cams and other moving machine parts. Take due care not to trap or pinch your fingers

PROBLEMS	CAUSE	COUNTERMEASURES
When the main SW is	The power is not ON.	Firmly insert the plug into the outlet.
turned ON, the machine is not activated.	Incorrect power source/voltage.	Make sure that the power supply/voltage are correct.
	The Circuit Protector of the AC Unit functioned due to momentary overcurrent.	After eliminating the cause of overload, have the Circuit Protector of the AC Unit restored.
	The screen is not adjusted correctly.	Adjust the screen correctly.
No sound output.	The audio level has not been correctly set with the Hardware Volume Control.	Adjust the Hardware Volume Control audio until the game can be heard.
	The volume levels within the Sound Settings in the Test Menu have not been set correctly.	Enter the Sound Settings menu from the Test Menu and check that all volume levels are set to the appropriate levels. Options are available within this menu to test the volume levels of each setting to make sure each are correct.
The Control Units (Steering wheel/Foot Pedals)	Due to external or environmental factors the targeting is off.	Perform calibration in TEST Mode.
do not operate correctly.	Volume damaged. (Potentiometer)	Exchange the volume.
The Foot pedals grind when operated or squeak.	Grease has deteriorated.	Apply grease to the designated grease areas.
The View buttons do not operate properly.	The Microswitch has been damaged or malfunctioned.	Replace the Microswich.
	The connection to the Assy SW has broken.	Reconnect the connector
Control Unit does not respond.	The Control Unit motor is set not to move.	Alter the TEST Mode settings. (See 9.)
	Due to overload or other factors, an error has occurred with the motor. This has been sensed by the motor sensor and the motor has been stopped.	Remove the cause of the motor error.
	Motor damaged.	Exchange the motor.
The Control Unit makes a lot of noise when it vibrates.	Due to a problem with the vibration parts or wear over time, the internal parts are worn.	Replace motor.
The START switch does not operate	Faulty switch or bad connections	Check the connections on the rear of the switch. If connections are good, replace switch.

	Network cables are not connected.	Reconnect the network cables to each cabinet.
Linked cabinets will not sync together in the attract mode.	The cabinets are using security keys from different regions	Ensure each cabinet has the same region (viewable on the System Information page of Test Mode). Cabinets will only link together from the same region.
	Network cables are faulty.	Replace the faulty network cables. Contact the company from whom the unit was purchased.
	.Network cables are not connected.	Ensure network cables are properly connected to the cabinets.
Cabinets are unable to start a Multi- player session together.	Cabinet ID's are not set up correctly.	Go into the Network Settings and ensure each cabinet has a different Cabinet ID. Confirm the settings and then the cabinets will reset with the new changes saved.
The Steering Wheel does not work correctly in the game.	The Steering Wheel has not been calibrated correctly.	Go into the Calibration Settings in the Test Menu and select Calibrate Steering.
The Pedals do not work correctly in the game. Vehicles move forward or backwards with no player input.	The Pedals have not been calibrated correctly.	Go into the Calibration Settings in the Test Menu and select Calibrate Brake and follow the on screen instructions. Once this has been done, select Calibrate Accelerator and follow the on screen instructions.
	The audio level has not been correctly set with the Hardware Volume Control.	Adjust the Hardware Volume Control until audio in the game can be heard.
No audio can be heard in either the attract mode, or throughout the game.	The volume levels within the Sound Settings in the Test Menu have not been set correctly.	Enter the Sound Settings menu from the Test Menu and check that all volume levels are set to the appropriate levels. Options are available within this menu to test the volume levels of each setting to make sure each are correct.
High Score Tables have not been cleared after attempting to clear them in the Bookkeeping menu.	The high scores have only been cleared on one cabinet when multiple cabinets are linked together.	When multiple cabinets are linked together, the high score tables will only be cleared if the process is done on all connected machines at the same time. Each cabinet must be in the Bookkeeping menu, and then Clear High Scores should be selected on each one and then confirmed. If any cabinets are left in the attract mode during this, the high score tables will not be cleared.

The Camera is not detected/operating	The camera is connected into the wrong USB port	Make sure the camera is connected into the USB3 port on the CPU. (The USB3 port is identified by its 'blue' colour). The camera will not operate in a standard USB port.
	Bad connections	Check that good connections are made in the camera ,USB cable, and camera Ext. cable.
	Camera faulty	Replace camera.
An error message appears in the game that says: "I/O BOARD NOT DETECTED".	The I/O USB cable has become disconnected.	Reconnect the I/O USB cable to the game board and perform a power cycle.
An error message appears in the game that says: "SECURITY KEY NOT DETECTED".	The security key has become disconnected.	Reconnect the security key to the game board and perform a power cycle.

ERROR MESSAGE TABLE

The game is equiped with an integral fault monitoring system. Each time an identified fault is detected an error message is displayed on screen.

Below is a table showing possible common conditions. Please refer to them as a guide.

If the ERROR Code/Message displayed on screen id not supported by this manual then please contact your Sega Service Centre for dignostics.

ERROR MESSAGE	DESCRIPTION	TROUBLESHOOTING
Error - No Security Key Found	The system was unable to detect a valid security key	Check USB Security Key
Error - Incorrect Key Inserted	The system found a security key but the configuration is not valid for this product	Check USB Security Key
Error - Security Failure	The system security has detected security issues with the installed software	Restore software from recovery USB stick
Error - I/O BD failure	The I/O Board was not detected on power up	Check I/O Board, Power supply and harnessing
Error - I/O BD disconnected	The IO Board was detected on power up, but has subsequently been disconnected from the software	Check I/O Board, Power supply and harnessing
Error - Update Copy Failed	The shell was unable to create main and backup copies of the game or during install or update	Check USB Install Media and reapply update or re-install. If still failing restore software from USB Recovery stick
Error - Invalid Shell Update	The shell Update on the USB stick is not a valid update	Check USB Install Media and reapply update
Error - Update Copy Fail	The shell was unable to create main and backup copies of the game or during install or update	Check USB Install Media and reapply update or re-install. If still failing restore software from USB Recovery stick
Error - No Game Installed	The shell was unable to find a game on the disk to launch. A game needs to be installed.	Restore software from USB Recovery stick
Error - No Shell Installed	Launcher was unable to find a Shell on the disk to launch. A Shell needs to be installed.	Restore software from USB Recovery stick
Game Error	The game was unable to launch or has terminated abnormally. On reboot the game will be reinstalled from back up. If it fails again no further attempt to launch the game will be made on subsequent power cycles.	Restore software from USB Recovery stick

16 **GAME BOARD**

⚠ WARNING

- When working with the product, be sure to turn the power off. Working with the power on may cause an electric shock or short circuit
- Be careful not to damage the wires. Damaged wires may cause electric shock or short circuit or present a fire risk
- Do not expose the Game Board, etc. without a good reason. Failure to observe this can cause electric shock hazard or malfunctioning
- Do not use this product with connectors other than those that were connected and used with the Game Board at the time of shipping. Do not carelessly connect wires to connectors that were not used at the time of shipping, as this may cause overheating, smoke or fire damage
- When returning the Game Board after making repairs or replacements, make sure that there are no errors in the connection of connectors. Erroneous connections can lead to electrical shock, short circuits or fires
- When connecting a connector, check the direction carefully. Connectors must be connected in only one direction. If indiscriminate loads are applied in making connections, the connector or its terminal fixtures could be damaged, resulting in electrical shock, short circuits or fires

⚠ CAUTION

- In this product, setting changes are made during the test mode. The game board need not be operated. Use the Game Board, etc. as is with the same setting made at the time of shipment so as not to cause electric shock and malfunctioning.
- Static electricity from your body may damage some electronic devices on the IC board. Before handling the IC board, touch a grounded metallic surface so that the static electricity can be discharged.


STOP) IMPORTANT

- When replacing the Game Bd. Remove all external USB devices before packaging it up and returning it to your Service Center. The replacement Game BD will not come with these devices fitted
- When sending the Game Board for repair, send it complete along with any external USB devices. Do not send the Game Board with USB devices connected. Leaving the USB devices connected may cause damage
- Make sure the Game Board is packaged in suitable box and protected using a cushioned filler. Sending the Game Board without suitable packaging may cause further damage which in turn will incur further repair costs


16-1 HOW TO REMOVE GAME BOARD

The game board located at the rear of the cabinet behind the screen. Each cabinet has it's own Game Board.

- Turn the power off
- Remove the PANEL ACCESS DOOR by unscrewing the (2) M4x25 SKT BH PAS Screws located at each top corner

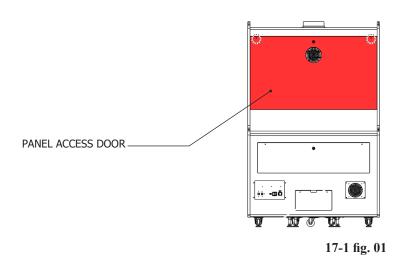


2 Unlock back panel by using key provided (keyhole labelled)

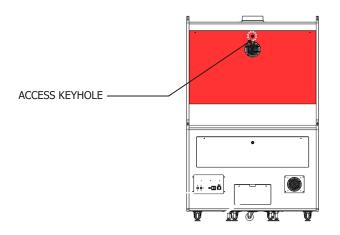

17-1 fig. 02


Carefully disconnect all of the connectors connected to the Game Bd. Please refer to the next section in this manual, 16.2 Game Board Connectors

Locate and remove the (2) M4x25 SKT BH PAS fixings which secure the SASH BACK GAME BD to the cabinet

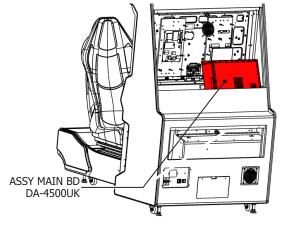

17-1 fig. 03


6 Locate and remove the (4) M4x25 SKT BH PAS fixings which secure the SASH BACK GAME BD to the backing board

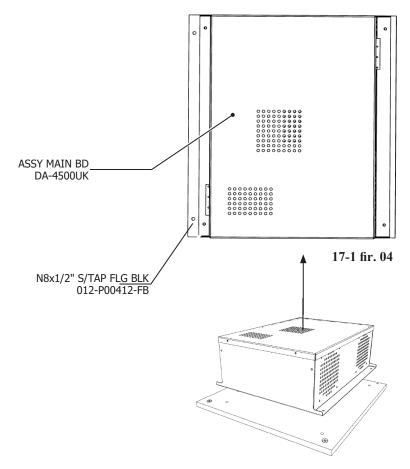

17-1 fig. 05

16-2 GAME BOARD CONNECTORS

There are many connections to be made at the GAME BD. Although similar to a home personal computer in appearance, there are a few differences. Please be sure that each connection is made in the same position when disconnecting and reconnecting the Game Board. Failing to make the same connections may result in malfunction.

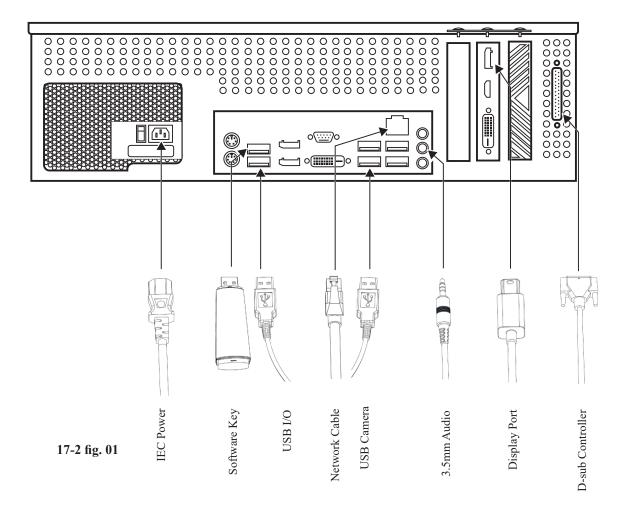

17 DESIGN RELATED PARTS

For the warning display stickers, refer to Section 1.







DA-7722UK

 
DA-7101UK



DA-7727UK



DA-7724UK







DA-7102UK



DA-7809UK

DA-7729UK




DA-7812UK DA-7059UK



DA-7728UK

DA-7201-BUK

DA-7202UK

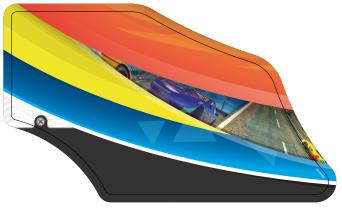

DA-7734UK



DA-7744UK




DA-7725UK (Right Side)




DA-7726UK (Left Side)

18 PARTS LIST

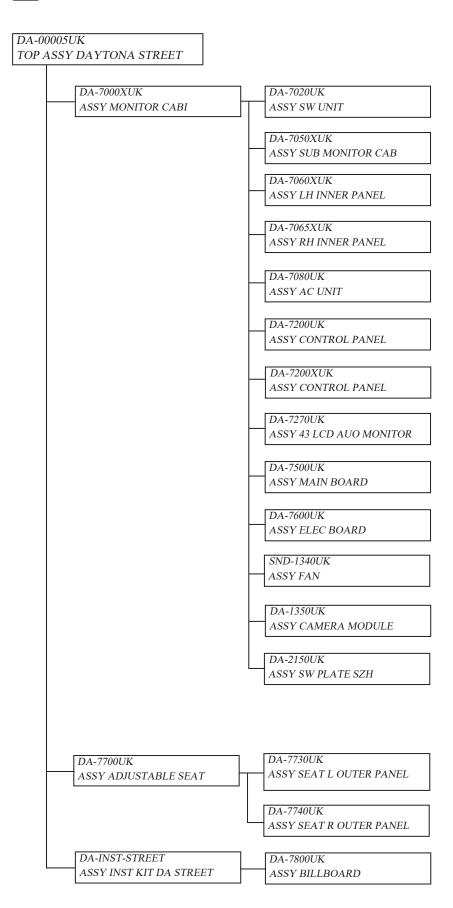


1 TOP ASSY DAYTONA CHAMPIONSHIP USA (DA-00005UK)

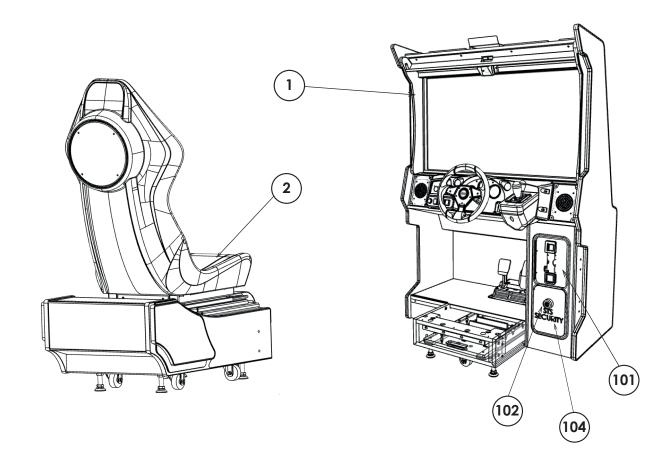

SEQ	PT NUMBER	DESCRIPTION	QTY
*1	DA-7000XUK	ASSY MONITOR CABINET	1
*2	DA-7700UK	ASSY ADJUSTABLE SEAT	1
*20	421-7988-91UK	STICKER SERIAL NUMBER UK	1
*21	440-CS0010UK	STICKER CAUTION GENERIC	2
*22	440-DS0010UK	STICKER DANGER HIGH VOLTAGE	2
*23	440-WS0010UK	STICKER WARNING HI-VOLTAGE	1
*24	440-WS0100UK	STICKER WARNING FORK HERE	4
*25	LB1046	LABEL TESTED FOR ELEC. SAFETY	1
*26	LB1130	LABEL WEEE WHEELIE BIN	1
*101	220-5374-01	DOOR DFMD W/FR&LOCK C120 UNIV	1
*102	220-5575UK	LOCK (J9117) KEY TO LIKE 22MM W CAM	1
*103	OS1247	ALUMINIUM STICKY CLIP ASK-3	3
*104	220-5727-01B	DOOR CASH H.S. STS	1
*401	DA-INST-STREET	ASSY INST KIT DA STREET	1
*402	SAECE-xxx	DECLARATION OF CONFORMITY	1
*403	PK0468	SHRINK WRAP RD STD	2
*404	PK0518	PALLET DA STREET MONITOR	1
*405	PK0519	PALLET DA STREET SEAT	1
*406	420-0028-02UK	MANUAL DA STREET	1


Please note: The location of all labels can be found in Chapter 1 of this manual.

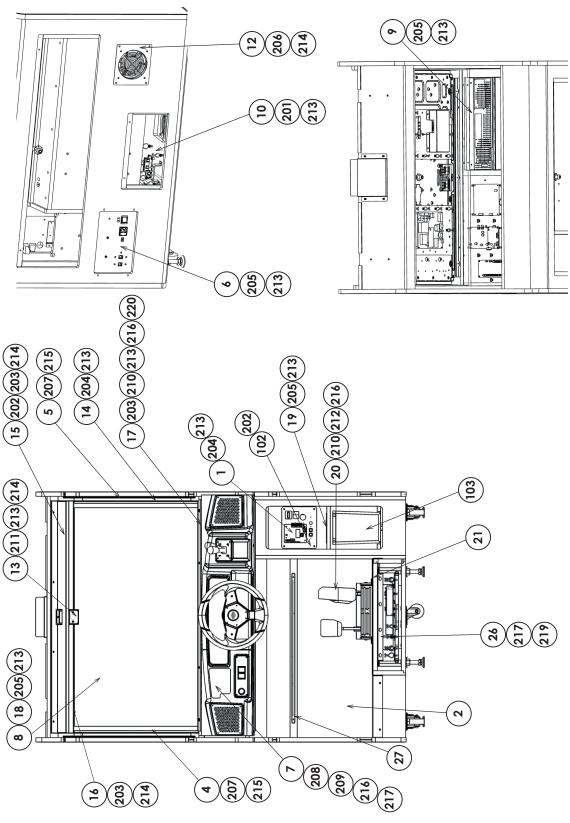


ITEM NO	PART NO	DESCRIPTION	QTY
**1 **2 **3 **4 **5	DA-7020UK DA-7050UK DA-7055UK DA-7060UK DA-7065UK DA-7080UK	ASSY SW UNIT ASSY SUB MON 42"CABI ASSY SPEAKER GRILLE ASSY LH INNER PANEL ASSY RH INNER PANEL ASSY AC UNIT	1 1 2 1 1
**7	DA-7200XUK	ASSY CONTROL PANEL	1

2) ASS	SY MONITOR CA	ABI (DA-7000XUK)	(D-2/2)
ITEM NO	PART NO	DESCRIPTION	QTY
**8	DA-7280UK	ASSY 43" LCD AUO 01 MONITOR	1
**9	DA-7500UK	ASSY MAIN BD	1
**10	DA-7600UK	ASSY ELEC BD	1
**11	DA-7900UK	ASSY AUX ELEC BD	1
**12	SND-1340UK	ASSY FAN	1
**13	DA-1350UK	ASSY CAMERA MODULE	1
**14	DA-7003UK	BRKT GLASS RETAIN SIDE	2
**15	DA-7004UK	BRKT BB HEADER BTM	1
**16	DA-7005UK	BRKT GLASS RETAIN TOP	1
**17	DA-7006UK	BRKT GLASS RETAIN BTM	1
**18	DA-7279UK	GLASS LCD 43" AUO SCREEN PROTECT	1
**19	DUT-0302UK	PLATE COIN PATH	1
**20	SPG-2200-01-CN	ASSY ACCEL & BRAKE CHINA	1
**21	SPG-2224UK	PEDAL GASKET	1
**22	DA-7101UK	STICKER LH CHEEK	1
**23	DA-7101-AUK	BLANK STICKER LH CHEEK	1
**24	DA-7102UK	STICKER RH CHEEK	1
**25	DA-7102-AUK	BLANK STICKER RH CHEEK	1
**26	DA-7009UK	BRKT FRONT JOINT	1
**27	DA-7066UK	COVER FOOTWELL LIGHT	1
**28	DA-7007UK	BRKT JOINT INNER L	1
**29	DA-7007UK	BRKT JOINT INNER R	1
2)	DA-70060K	DIKT JOHN INNER K	1
**101	130-04030-E	SPKR ELIP 40HM 30W VIS DX4x6P	2
**102	838-8001UK	AMP 2.2 VISATON	1
**103	PP1087	BOX CASH	1
**104	280-A012640-WX	ROUTER TWIST D12 SO6.4 WOOD XL	58
**105	390-2012-060RGB	LED FLEXIBLE RGB 600MM	1
**201	000-P00450	M4X50 MSCR PAN PAS	2
**202	012-P03512-F	N6X1/2" S/TAP FLG PAS	4
**203	029-B00412-0B	M4X12 SKT BH BLK	11
**204	029-B00416	M4X16 SKT BH PAS	10
**205	029-B00425	M4X25 SKT BH PAS	17
**206	029-B00425-0B	M4X25 SKT BH BLK	12
**207	029-B00630-0B	M6X30 SKT BH BLK	6
**208	029-B00816	M8X16 SKT BH PAS	4
**209	029-B00825	M8X25 SKT BH PAS	4
**210	029-B00840	M8X40 SKT BH PAS	4
**211	050-U00400	M4 NYLOC NUT	3
**212	060-S00800	M8 WSHR SPR PAS	8
**213	068-441616	M4 WSHR 16OD FLT PAS	4
**214	068-441616-0B	M4 WSHR 16OD FLT BLK	36
**215	068-652016-0B	M6 WSHR 200D FLT BLK	16
**216	068-852216	M8 WSHR 22OD FLT PAS	6
**217	020-F00830-0B	M8X30 SKT CSK BLK	8
**218	029-B00830	M8X30 SKT BH PAS	4
**219	020-F00850-0B	M8X50 MSCR SKT CSK BLK	4
**220	050-F00800	M8 NUT FLG SER PAS	8
**301	DA-60104UK	WH AC MONITOR / DBA	1
**302	DA-60108UK	WH PEDALS	1
**304	DA-60115UK	WH SPEAKERS / LIGHTING	1
**305	DA-60117UK	WH CTRL TO BILLBOARD	1
**306	DA-60118UK	WH AUDIO VISATON	1
**307	DA-60121UK	WH CTRL TO BASE	1
**308	BE-6001UK	ASSY LED CLIP	1

(3) ASSY SW UNIT (DA-7020UK)

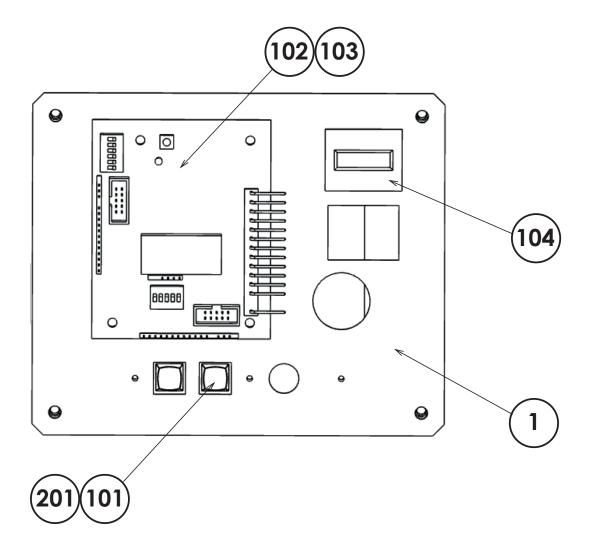


ITEM NO	O PART NO	DESCRIPTION	QTY
***1	SSR-0321UK	SW BRKT DOUBLE METER	1
***101	838-14548-01AUK	SW & VOL CTL BD	1
***102	280-L00706-PM	STANDOFF 6.4MM HOLE PM	4
***103	EP1380-01	CREDIT BOARD EXCEL	1
***104	220-5643UK	COIN METER SMALL 12V	1
***106	421-12043-01	STICKER SW PANEL CE	1
***107	OS1098	CRIMP BELL END SMALL	2
***108	601-0460	CABLE TIE NYLON 100MM	2
***201	029-B00308	M3X8 SKT BH PAS	3
***301	DA-60110	WH COIN HANDLING	1

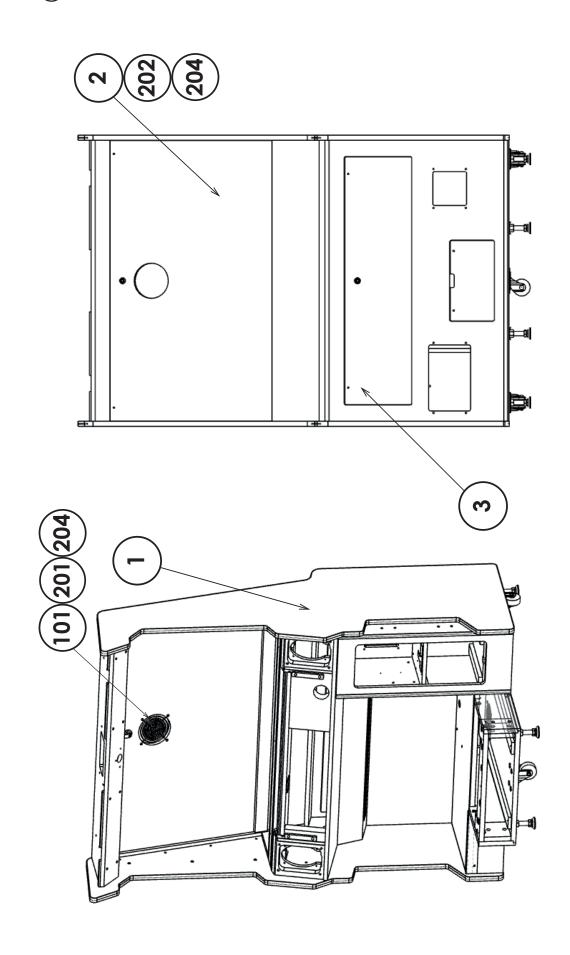


ITEM N	O PART NO	DESCRIPTION	QTY
***1	DA-7051UK	MONITOR CABINET SASH FRONT STEP	1
***2	DA-7001UK		1
***101	FN1012	FAN GUARD METAL 120MM (FG-12)	2
***201	029-B00412	M4X12 SKT BH PAS	8
***202	029-B00425	M4X25 SKT BH PAS	8
***204	068-441616	M4 WSHR 16OD FLT PAS	10

4 ASSY SUB MONITOR CABI (DA-7050XUK)


(5) ASSY LH INNER PANEL (DA-7060UK)

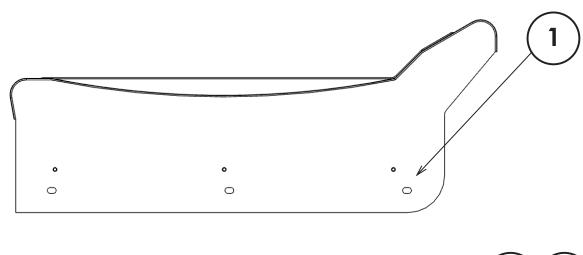

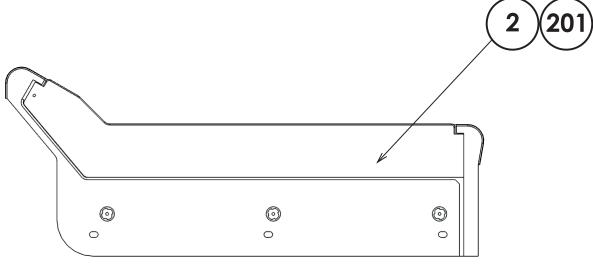


ITEM N	O PART NO	DESCRIPTION	QTY
***1 ***2	DA-7061UK DA-7063UK	PANEL INNER LH PANEL INNER CHEEK ACRYLIC	1 1
***101	390-2012-080-RGB	LED FLEXIBLE RGB 800MM	1
***201	012-P03512-F	N6X1/2" S/TAP FLG PAS	1
***301	BE-6001UK	ASSY LED CLIP	1

6 ASSY RH INNER PANEL (DA-7065UK)

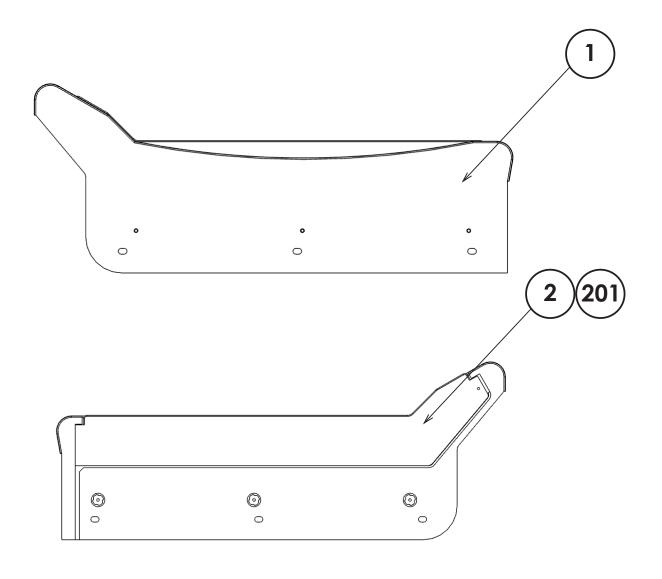


ITEM NO PART NO	DESCRIPTION	QTY
***1 DA-7062UK ***2 DA-7063UK	PANEL INNER RH PANEL INNER CHEEK ACRYLIC	1 1
***101 390-2012-080-RGB	LED FLEXIBLE RGB 800MM	1
***201 012-P03512-F	N6X1/2" S/TAP FLG PAS	1
***301 BE-6001UK	ASSY LED CLIP	1

7 ASSY AC UNIT (DA-7080UK)

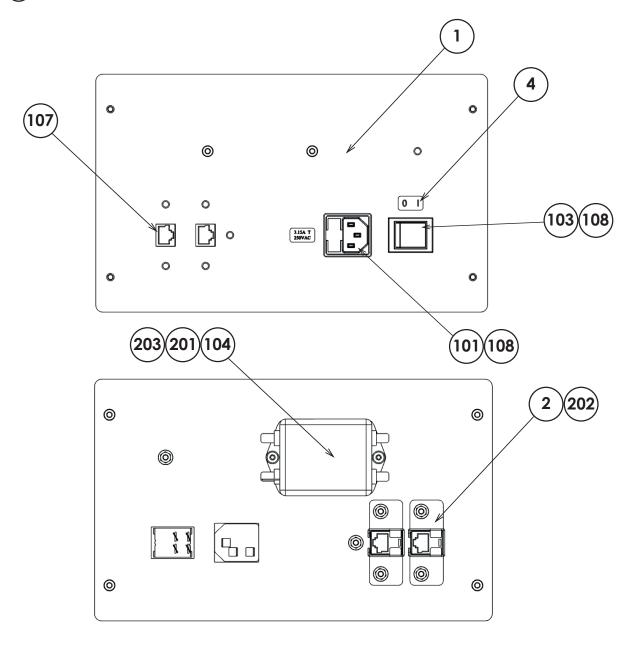

ART NO	DESCRIPTION	QTY
A-1081UK	PLATE AC	1
F-0402UK	CONN COVER	1
31096	STICKER PROTECTIVE EARTH	1
31131	LABEL ON / OFF	1
-0403UK	PLATE AC CAP	1
21302	FUROSOCKET FUSED 10A 250VAC	1
		2
	SWITCH ROCKER 250V AC	1
1419	FILTER SCHAFFNER 2030-16-06	1
1391	COUPLER INLINE LAN RJ45	1
0-5029-D508	HEAT SHRINK SLEEVING 50.8DIA	8cm
31126-3150-250	FUSE LABEL 3.15A 250V	1
9-B00408	M4X8 SKT RH PAS	2
		6
	M4 WSHR SPR PAS	2
A-601011JK	WH AC IN	1
	A-1081UK F-0402UK 81096 81131 F-0403UK 1302 4-5078-3150 V1109 1419 1391 0-5029-D508 81126-3150-250 9-B00408 0-F00400	A-1081UK PLATE AC F-0402UK CONN COVER B1096 STICKER PROTECTIVE EARTH B1131 LABEL ON / OFF L-0403UK PLATE AC CAP B1302 EUROSOCKET FUSED 10A 250VAC B14-5078-3150 FUSE 3.15 X 20 CERAMIC SB 3150mA B1109 SWITCH ROCKER 250V AC B1419 FILTER SCHAFFNER 2030-16-06 B1391 COUPLER INLINE LAN RJ45 B1391 COUPLER INLINE LAN RJ45 B1126-3150-250 FUSE LABEL 3.15A 250V B-B00408 M4X8 SKT BH PAS B-B00400 M4 NUT FLG SER PAS B-B00400 M4 WSHR SPR PAS B-B00400 M4 WSHR SPR PAS

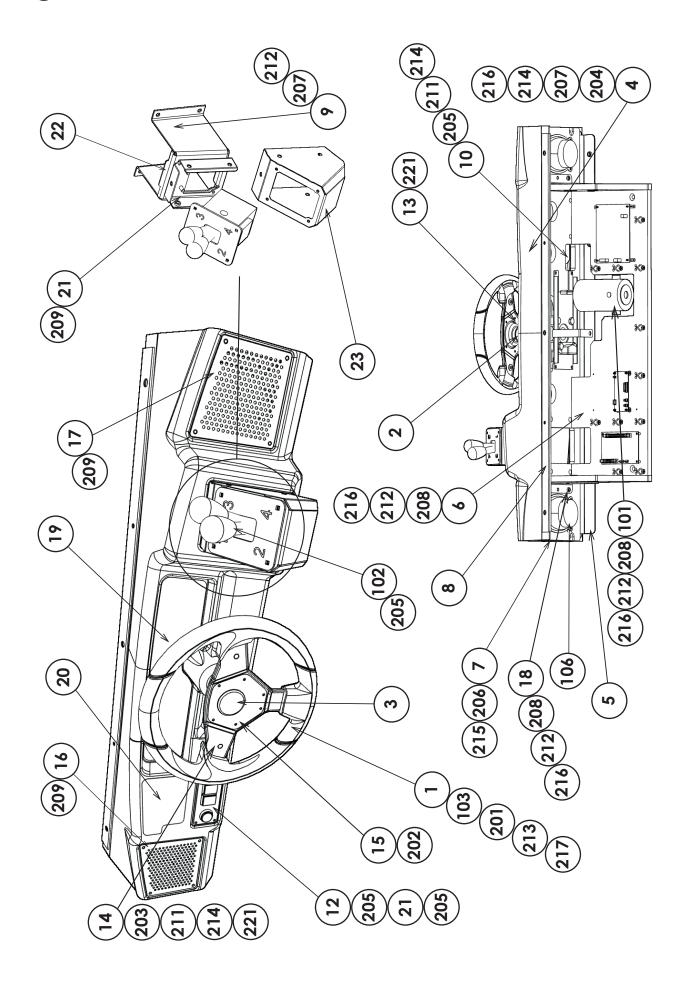

8 ASSY CONTROL PANEL (DA-7200UK)


ITEM N	O PART NO	DESCRIPTION	QTY
***1	RNE-2001	STEERING WHEEL	1
***2	RD-2009UK	HANDLE COLLAR	1
***3	DA-2022-BUK	STEERING EMBLEM	1
***4	DA-2001-01XUK	CONTROL PANEL COVER	1
***5	DA-7212UK	CTRL PNL SUPP BRKT	1
***6	DA-7213UK	BASE CTRL PNL	1
***7	DA-7214UK	BRKT CTRL PNL COVER	2
***8	DA-7216UK	BRKT CTRL PNL RETAINING	1
***9	DA-2004UK	SHIFT BRACKET	1
***10	DA-2006UK	BRKT CONTROL BUTTON	1
***12	DA-2100UK	ASSY SW PLATE	1
***13	RND-0222	PLATE REAR RNE HOOP	1
***14	RND-0223	PLATE FRONT RNE HOOP	1
***15	RND-0224	PLATE FRONT UPPER CAP RNE HOOP	1
***16	DA-2007UK	SPEAKER GRILLE L	1
***17	DA-2008UK	SPEAKER GRILLE R	1
***18	DA-2016UK	BRKT BASE SUPPORT	2
***19	DA-7207UK	STICKER DIALS	1
***20	DA-7208UK	STICKER SUB INSTR	1
***21	DA-2301UK	BASE SUPPORT SHIFTER	1
***22	DA-2302UK	BRKT CLAMP BASE	1
***23	DA-2303UK	ENCLOSURE SHIFTER MOUNTING	1
***101	RD-2500UK	MECHA 50-0102-07PT W/SEGA SHAFT	1
***102	610-2101-01	SHIFTER 4 SPEED	1
***103	OS1254	EDGING C PROFILE PVC TRIM	0.5
***104	280-A01264-WX	ROUTER TWIST D12 SO6.4 WOOD X	13
***106	130-04030-E	SPKR ELIP 40HM 30W VIS DX4x6P	2
***107	FR-838-001UK	MOTOR CONT HAPP 50-2000-03	1
***108	838-0005UK	I/O BOARD SAE	1
***109	OS1011	PCB FEET RICHCO LCBS-L-5-01	4
***111	838-0026UK	AMP 2.1 40W KEENE	3
***112	838-0041UK	PCBA WOOFLY 2	1
***113	280-L00640-WX	STANDOFF 6MM WOOD XL	4
***201	020-000820	M8X20 BLT PAS	1
***202	020-B00308-0B	M3X8 SKT BH BLK	6
***203	029-B00408	M4X8 SKT BH PAS	3
***204	029-B00412	M4X12 SKT BH PAS	2
***205	029-B00412-0B	M4X12 SKT BH BLK	16
***206	029-B00430	M4X25 SKT BH PAS	4
***207	029-B006012	M6X12 SKT BH PAS	8
***208	029-B00630-0B	M6X30 SKT BH BLK	14
***209	060-F00400-0B	M4 WSHR FORM A FLT BLK	12
***210 ***211	060-F01600	M16 WSHR FORM A FLT PAS	2
***211 ***212	060-S00400	M4 WSHR SPR PAS	7
***212 ***212	060-S00600	M6 WSHR SPR PAS	18
***213 ***214	060-S00800	M8 WSHR SPR PAS	1
***214 ***215	068-441616 068-441616 0D	M4 WSHR 16OD FLT PAS	9
***215 ***216	068-441616-0B	M4 WSHR 16OD FLT BLK	4
***216 ***217	068-652016	M6 WSHR 200D FLT PAS	18
***217	068-852515-OB	M8 WSHR 25OD FLT BNP	3

(D-3/3)

8 ASSY CONTROL PANEL (DA-7200UK)

ITEM NO PART NO		DESCRIPTION	QTY
***218	012-P00325	N4X1" S/TAP PAN PAS	4
***219	012-P03506-F	N6X1/4" S/TAP FLG PAS	4
***220	012-P03512-F	N6X1/2" S/TAP FLG PAS	8
***221	050-U00400	M4 NUT NYLOK PAS	8
***301	DA-60123UK	WH BUTTON PLATE	1
***302	DA-60106UK	WH I/O	1
***303	DA-60109UK	WH DC MOTOR CONTROL	1
***304	600-7141-100UK	CABLE JVS TYPE A-B 100CM	1



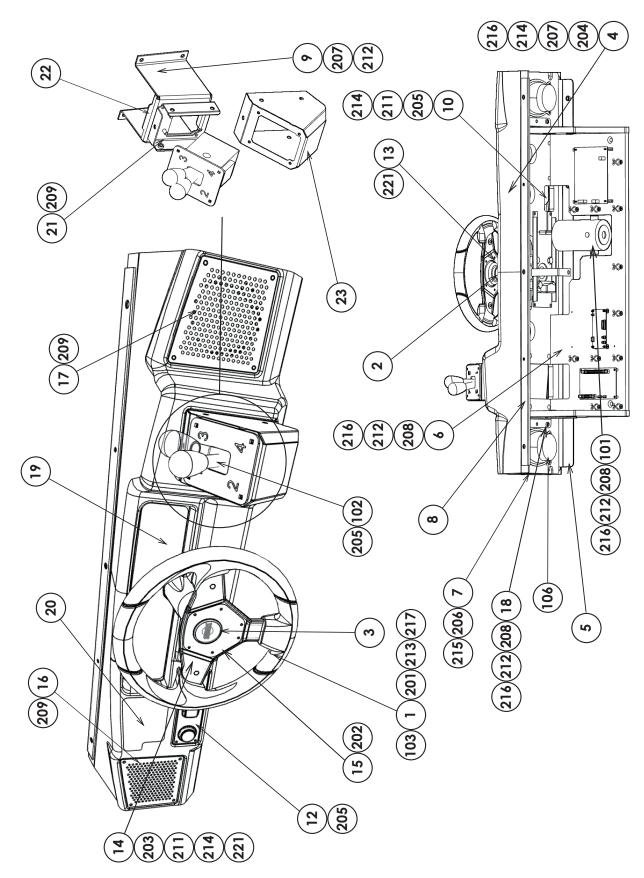




(8A) ASSY CONTROL PANEL (DA-7200XUK)


ITEM NO	D PART NO	DESCRIPTION	REFERENCE	QTY
***1	SPG-2001X	STEERING WHEEL		1
***2	RD-2009UK	HANDLE COLLAR		1
***3	SPG-2002UK	ASSY STEERING EMBLEM		1
***4	DA-2001-01XUK	CONTROL PANEL COVER		1
***5	DA-7212UK	CTRL PNL SUPP BRKT		1
***6	DA-7213UK	BASE CTRL PNL		1
***7	DA-7214UK	BRKT CTRL PNL COVER		2
***8	DA-7216UK	BRKT CTRL PNL RETAINING		1
***9	DA-2004UK	SHIFT BRACKET		1
***10	DA-2006UK	BRKT CONTROL BUTTON		1
***12	DA-2150UK	ASSY SW PLATE SZH	Used from June 2021 onwards	1
***16	DA-2007UK	SPEAKER GRILLE L		1
***17	DA-2008UK	SPEAKER GRILLE R		1
***18	DA-2016UK	BRKT BASE SUPPORT		2
***19	DA-7207UK	STICKER DIALS		1
***20	DA-7208UK	STICKER SUB INSTR		1
***21	DA-2301UK	BASE SUPPORT SHIFTER		1
***22	DA-2302UK	BRKT CLAMP BASE		1
***23	DA-2303UK	ENCLOSURE SHIFTER MOUNTING		1
***101	RD-2500UK	MECHA 50-0102-07PT W/SEGA SHAFT		1
***102	610-2101-01	SHIFTER 4 SPEED		1
***104	280-A01264-WX	ROUTER TWIST D12 SO6.4 WOOD X		13
***106	130-04030-E	SPKR ELIP 40HM 30W VIS DX4x6P		2
***107	FR-838-001UK	MOTOR CONT HAPP 50-2000-03		1
***108	838-0005UK	I/O BOARD SAE		1
***109	OS1011	PCB FEET RICHCO LCBS-L-5-01		4
***112	838-0041UK	PCBA WOOFLY 2		1
***113	280-L00640-WX	STANDOFF 6MM WOOD XL		4
***201	020-000820	M8X20 BLT PAS		1
***204	029-B00412	M4X12 SKT BH PAS		2
***205	029-B00412-0B	M4X12 SKT BH BLK		16
***206	029-B00430	M4X25 SKT BH PAS		4
***207	029-B00612	M6X12 SKT BH PAS		8
***208	029-B00630-0B	M6X30 SKT BH BLK		14
***209	060-F00400-0B	M4 WSHR FORM A FLT BLK		12
***210	060-F01600	M16 WSHR FORM A FLT PAS		2
***211	060-S00400	M4 WSHR SPR PAS		4
***212	060-S00600	M6 WSHR SPR PAS		18
***213	060-S00800	M8 WSHR SPR PAS		1
***214	068-441616	M4 WSHR 16OD FLT PAS		6
***215	068-441616-0B	M4 WSHR 16OD FLT BLK		4
***216	068-652016	M6 WSHR 200D FLT PAS		18
***218	012-P00325	N4X1" S/TAP PAN PAS		4
***219	012-P03506-F	N6X1/4" S/TAP FLG PAS		4
***220	012-P03512-F	N6X1/2" S/TAP FLG PAS		8
***225	FAS-200013	M3X16 SKT CAP CRM		4
***301	DA-60123UK	WH BUTTON PLATE		1
***302	DA-60106UK	WH I/O		1
***303	DA-60109UK	WH DC MOTOR CONTROL		1
***304	600-7141-100UK	CABLE JVS TYPE A-B 100CM		1

(9) ASSY 43 LCD AUO 01 MONITOR (DA-7280UK)

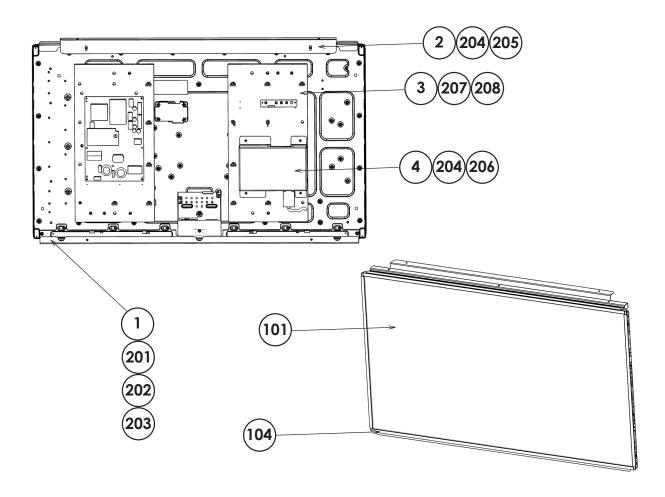


ITEM NO PART NO	DESCRIPTION	QTY
***1 DA-7281UK ***2 DA-1272UK ***3 TRF-1210UK ***4 TRF-1207UK ***6 DA-7282UK	BRKT SCREEN LOWER BRKT LCD SUPPORT TOP PNL PRISMA BD DMODUL MNT 55 COVER PRISMA BD DMODUL BRKT SCREEN UPPER	1 1 2 1
***101 200-6043-02-AUO ***102 OS1247 ***103 280-A01264-WX ***104 OS1230 ***105 280-0017UK ***106 EP1419 ***107 440-WS0002UK ***108 440-DS0010UK	FOAM STRIP 2mm X 10mm SPACER 6.4OD 3.7ID 11.1L FILTER SCHAFFNER FN2030-16-06 LABEL WARNING HI VOLT LABEL DANGER HI VOLT	1 2 13 3.3 10 1
***109 201-6043-02-AUO ***201 029-B00305 ***202 060-S00300-0B ***203 060-F00300-0B ***204 029-B00412 ***205 060-S00400 ***206 068-441616 ***207 029-B00620 ***208 068-652016	M3X5 SKT BH PAS M3 WSHR SPR BLK M3 WSHR FORM A FLT BLK M4X12 SKT BH PAS M4 WSHR SPR PAS M4 WSHR 16OD FLT PAS M6X20 SKT BH PAS M6 WSHR 20OD FLT PAS	1 7 7 7 6 2 6 4 4
***209 012-P00320	N4X3/4" S/TAP PAN PAS	10

(10) ASSY MAIN BOARD (DA-7500UK)

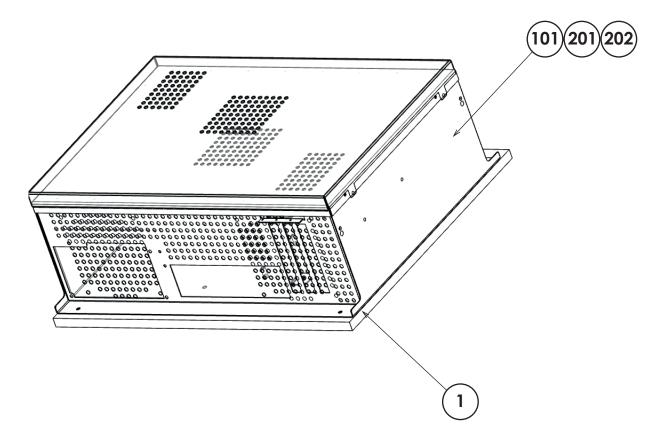


ITEM NO PART NO		DESCRIPTION	
***1	DA-7501UK	WOODEN BASE MAIN BD	1
***101	610-0012-02UK	ASSY MAIN BOARD	1
***103	LB1101	STICKER WARNING BATTERY	1
***104	LB1111	STICKER PLEASE RECYCLE	1
***201	029-B00412	M4X12 SKT BH PAS	4
***202	068-441616	M4 WSHR 16OD FLT PAS	4
***301	DA-60103UK	WH AC GAMEBOARD	1
***302	DA-60107UK	WH AUDIO A	1
***303	DA-60113UK	WH PARALLEL	1
***304	600-7011-0200UK	DA DVI TO DVI 200CM	1
***306	600-7269-0200UK	LAN CABLE 200CM	1

(11) ASSY ELEC BOARD (DA-7600UK)

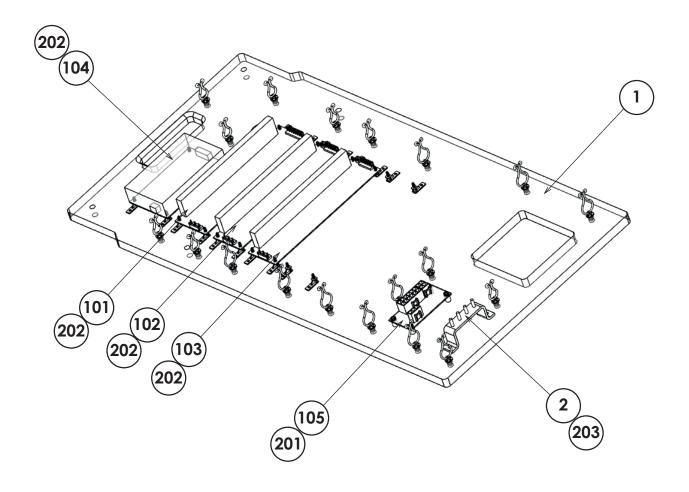


ITEM NO	O PART NO	DESCRIPTION	QTY
***1	DA-7601UK	WOODEN BASE ELEC BD	1
***2	CFB-4003-01UK	EARTH PLATE	1
***101	400-100-012-01	PSU 12V 100W MW LPS-100-012-01	1
***102	400-075-024-01	PSU 24VDC 75W MW LPS-75-24	1
***103	400-075-012-01	PSU 5VDC 75W MW LPS-75-12	1
***104	400-065-0512-01	PSU 5V-12V DC 65W MW RPD-65C	1
***105	838-14551-02UK	AC DISTRIBUTION BD	1
***106	OS1011	PCB FEET RICHCO LCBS-L-5-01	20
***107	280-A01264-WX	ROUTER TWIST D12 SO6.4 WOOD X	8
***108	280-A02064-WX	ROUTER TWIST D20 SO6.4 WOOD X	11
***109	440-DS0010UK	LABEL DANGER HI VOLT	2
***110	400-100-005-01	PSU 5V 100W MW LPS-100-05	1
***201	012-P00325	N4X1" S/TAP PAN PAS	4
***202	012-P03506-F	N6X1/4" S/TAP FLG PAS	20
***203	012-P03512-F	N6X1/2" S/TAP FLG PAS	2
***204	050-F00400	M4 NUT FLG SER PAS	4
***301	DA-60102UK	WH AC DIST	1
***302	DA-60105UK	WH DC DIST	1
***303	DA-60111UK	WH BASE TO SEAT	1

(12) ASSY FAN (SND-1340UK)

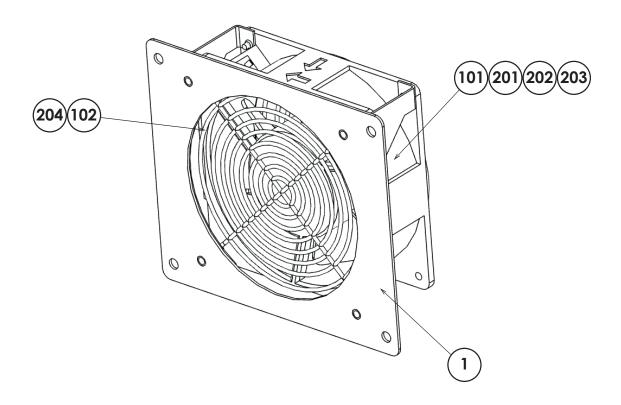


ITEM NO	PART NO	DESCRIPTION	QTY
***1	SND-1341UK	BRKT FAN MTG	1
***101	260-0012-01UK	FAN DC 12V AXIAL	1
***102	FN1012	FAN GUARD METAL 120MM (FG-12)	2
***201	020-B00316-0B	M3X16 SKT BH BLK	4
***202	060-S00300-0B	M3 WSHR SPR BLK	4
***203	060-F00300-0B	M3 WSHR FORM A FLT BLK	4
***204	050-U00400	M4 NUT NYLOK PAS	4
***301	DB-60030UK	WH LED WHT	1

(13) ASSY CAMERA MODULE (DA-1350UK)

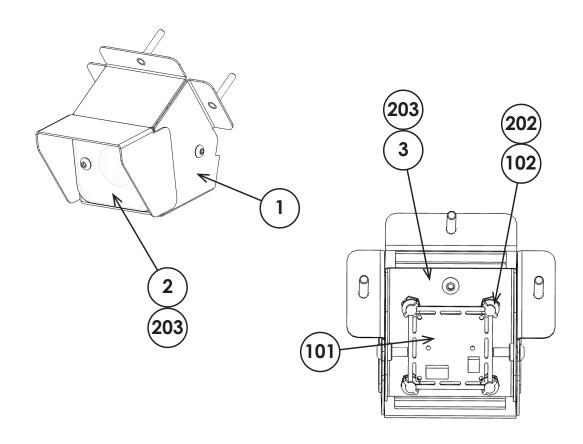


ITEM NO	PART NO	DESCRIPTION	QTY
****1	DA-1351UK	BRKT SURROUND	1
****2	DA-1352UK	COVER CAMERA	1
****3	DA-1353UK	PLATE MTG CAMERA	1
****101	EP1483	CAMERA USB130W01MT	1
****102	280-0005UK	HOLDER EDGE PCB SCREW MNT 6MM	4
****202	012-P03506-F	N6X1/4" S/TAP FLG PAS	4
****203	029-B00412-0B	M4X12 SKT BH BLK	5

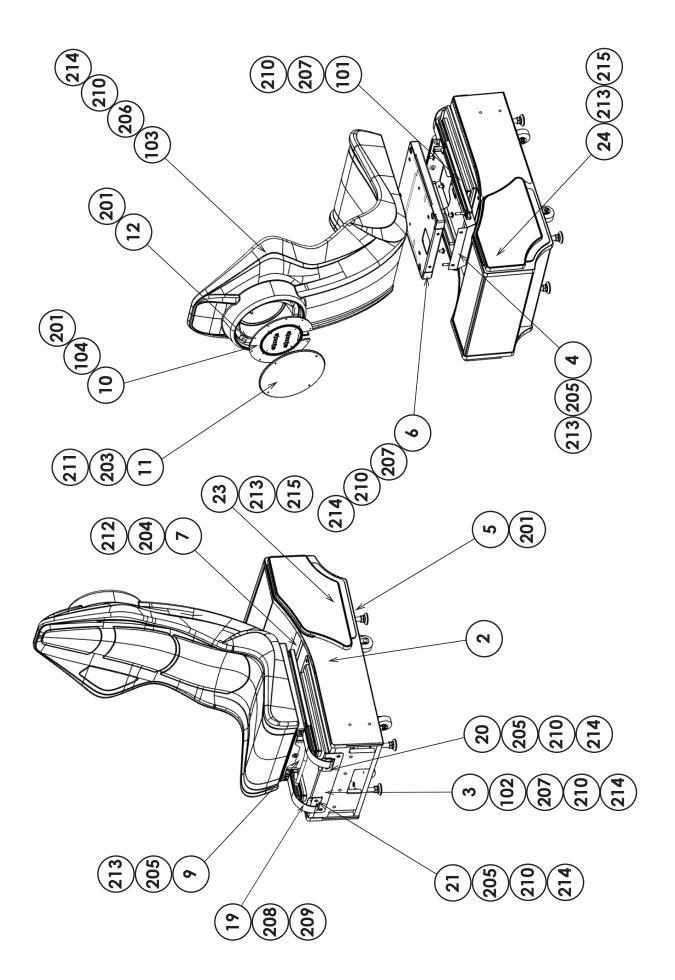

(14) ASSY ADJUSTABLE SEAT SC (DA-7700UK) (D-2/2)DESCRIPTION QTY ITEM NO PART NO ***2 DA-7702UK SEAT BASE CABINET 1 ***3 DA-7703UK SEAT BASE SC 1 ***4 DA-7704UK TRAY COVER REAR 1 ***5 DA-7705UK COVER FLOOR LED REAR


***5	DA-7705UK	COVER FLOOR LED REAR	1
***6	DA-7706UK	SEAT MOUNT TRAY SC	1
***7	DA-7707UK	BRKT SEAT BASE CABI UPPER	1
***9	DA-7711UK	TRAY COVER FRONT	1
***10	DA-7721UK	DISC SEAT REAR LED MOUNT	1
***11	DA-7722UK	DISC SEAT REAR	1
***12	DA-7723UK	PLATE SEAT REAR DISC	2
***13	DA-7724UK	STICKER SEAT CAB UPPER	1
***14	DA-7725UK	STICKER SEAT CAB LH	1
***15	DA-7726UK	STICKER SEAT CAB RH	1
***16	DA-7727UK	STICKER SEAT CAB REAR	1
***17	DA-7728UK	STICKER SEAT UPPER	1
***18	DA-7729UK	STICKER SEAT LOWER	1
***19	DA-3405UK	PROTECT RUBBER	2
***20	DA-3407UK	RUBBER HOLDER L	1
***21	DA-3408UK	RUBBER HOLDER R	1
***22	DA-7709UK	BRKT JOINT INNER	2
***23	DA-7730UK	ASSY SEAT LH OUTER PANEL	1
***24	DA-7740UK	ASSY SEAT RH OUTER PANEL	1
21	Dit // lock	ABBT SEAT RELOCITED THREE	1
***101	601-0006UK	SEAT SLIDE COBRA SEATS SUBFR07	1
***102	OS1198	P CLIP 11MM	3
***103	PD-1601-A	SEAT	1
***104	601-0460	CABLE TIE 100MM	6
***106	390-2012-040RGB	LED FLEXIBLE RGB 400MM	1
100	0,020120.01102		-
***201	012-P03512-FB	N6x1/2" S/TAP FLG BLK	30
***202	020-F00650-0B	M6X50 MSCR SKT CSK BLK	3
***203	029-B00412	M4X12 SKT BH PAS	4
***204	029-B00425-0B	M4X25 SKT BH BLK	6
***205	029-B00612-0B	M6X12 SKT BH BLK	5
***206	029-B00816-0B	M8X16 SKT BH BLK	8
***207	029-B00830-0B	M8X30 SKT BH BLK	15
***208	050-U00800	M8 NUT NYLOK PAS	2
***209	060-F01200	M12 WSHR FORM A FLT	2
***210	060-S00800-0B	M8 WSHR SPR BLK	20
***211	068-441616	M4 WSHR 16OD FLT PAS	4
***212	068-441616-0B	M4 WSHR 16OD FLT BLK	6
***213	068-652016-0B	M6 WSHR 200D FLT BLK	13
***214	068-852216-0B	M8 WSHR 22OD FLT BLK	19
***215	050-F00600	M6 NUT FLG SER PAS	8
***301	DA-60112UK	WH SEAT BASE	1
***302	DA-60114UK	WH SEAT UPPER	1
***303	DA-6007UK	ASSY SEAT LIGHTING	1
***304	BE-6001UK	ASSY LED CLIP	3
***307	DA-60122UK	WH SEAT LIGHTING	1
***308	DA-60124UK	WH SERIAL LED SPLITTER	1

(15) ASSY SEAT LH OUTER PANEL (DA-7730UK)

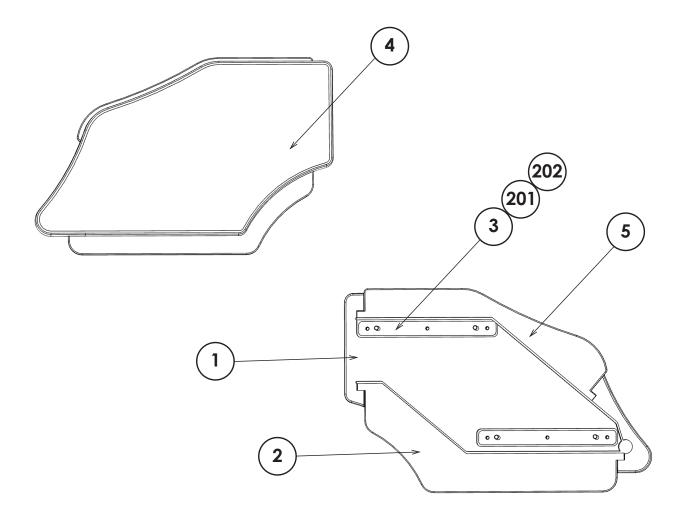


O PART NO	DESCRIPTION	REFERENCE	QTY
DA-7731UK DA-7732UK	PANEL SEAT LH OUTER PANEL SEAT OUTER ACRYLIC		1
			2
DA-77340K DA-7736UK	PANEL SEAT OUTER TOP ACRYLIC		1
029-B00412	M4X12 SKT BH PAS		6
068-441616	M4 WSHR 16OD FLT PAS		6
DA-6010UK 390-2305-10-AD DA-60024UK	ASSY SEAT PANEL LIGHTING SLED FLX S602812B 10mm WH SERIAL LED		2 0.04 1
	DA-7732UK DA-7733UK DA-7734UK DA-7736UK 029-B00412 068-441616 DA-6010UK 390-2305-10-AD	DA-7731UK PANEL SEAT LH OUTER DA-7732UK PANEL SEAT OUTER ACRYLIC DA-7733UK PLATE STUD DA-7734UK STICKER SEAT LH OUTER DA-7736UK PANEL SEAT OUTER TOP ACRYLIC 029-B00412 M4X12 SKT BH PAS 068-441616 M4 WSHR 16OD FLT PAS DA-6010UK ASSY SEAT PANEL LIGHTING 390-2305-10-AD SLED FLX S602812B 10mm	DA-7731UK PANEL SEAT LH OUTER DA-7732UK PANEL SEAT OUTER ACRYLIC DA-7733UK PLATE STUD DA-7734UK STICKER SEAT LH OUTER DA-7736UK PANEL SEAT OUTER TOP ACRYLIC 029-B00412 M4X12 SKT BH PAS 068-441616 M4 WSHR 16OD FLT PAS DA-6010UK ASSY SEAT PANEL LIGHTING 390-2305-10-AD SLED FLX S602812B 10mm

(16) ASSY SEAT RH OUTER PANEL (DA-7740UK)

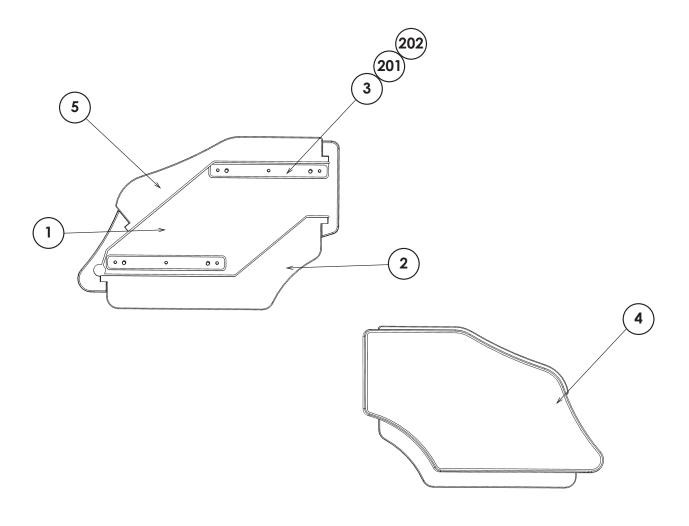


ITEM N	O PART NO	DESCRIPTION	REFERENCE	QTY
***1	DA-7741UK	PANEL SEAT RH OUTER		1
***2	DA-7732UK	PANEL SEAT OUTER ACRYLIC		1
***3	DA-7733UK	PLATE STUD		2
***4	DA-7744UK	STICKER SEAT RH OUTER		1
***5	DA-7736UK	PANEL SEAT OUTER TOP ACRYLIC		1
***201	029-B00412	M4X12 SKT BH PAS		6
***202	068-441616	M4 WSHR 16OD FLT PAS		6
***301	DA-6010UK	ASSY SEAT PANEL LIGHTING		2
****1	390-2305-10-AD	SLED FLX S602812B 10mm		0.04
****2	DA-60024UK	WH SERIAL LED		1

(17) ASSY INSTALLATION KIT (DA-INST-STREET)

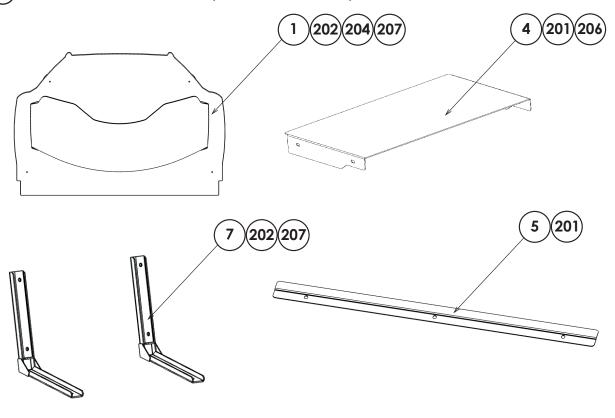


ITEM NO PART NO		DESCRIPTION	QTY
**1	DA-7800UK	ASSY BILLBOARD	1
**4	DA-7053UK	FOOTWELL LID	1
**5	DA-7054UK	SASH FOOTWELL LID	1
**6	DA-7805UK	COVER CAMERA ACCESS	1
**7	DA-7011UK	MOUNT BILLBOARD CABI	2
**101	LM1227	UK MAINS LEAD 10A WITH PLUG	1
**102	LM1246	EUROLEAD 10A EUROPEAN SOCKET	1
**103	LMI1500UK	MAINS LEAD USA/IEC H80-1205-00	1
**201	029-B00425	M4X25 SKT BH PAS	7
**202	029-B00625	M6X25 SKT BH PAS	11
**204	060-S00600	M6 WSHR SPR PAS	3
**206	068-441616	M4 WSHR 16OD FLT PAS	7
**207	068-652016	M6 WSHR 200D FLT PAS	11
**401	OS1019	SELF SEAL BAG 9X12.3/4	1

(18) ASSY BILLBOARD (DA-7800UK)

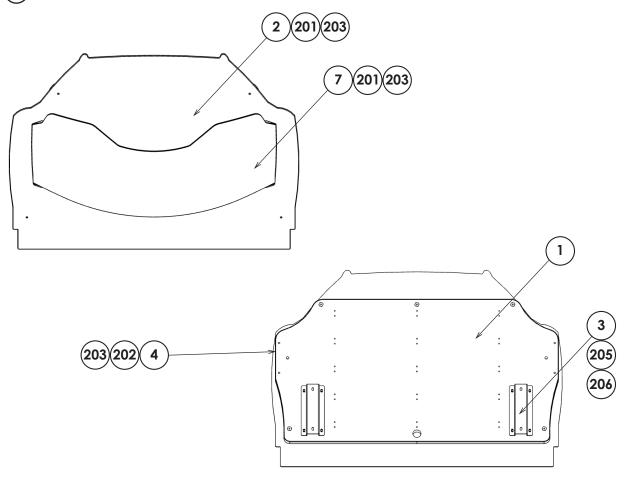

ITEM NO	PART NO	DESCRIPTION	QTY
***1	DA-7807UK	PANEL BILLBOARD	1
***2	DA-7812UK	BILLBOARD HEADER	1
***3	DA-7808UK	BRKT BILLBOARD	2
***4	DA-7811UK	BRKT ARTWORK RETAINING	2
***7	DA-7809UK	BILLBOARD BUMPER	1
***8	601-0460-150-N	CABLE TIE 150MM NATURAL	4
***101	280-L01030-OS	STANDOFF 10OD 5.2ID 30L	5
***102	601-0460	CABLE TIE NYLON 100MM	15
***201	008-B00450	M4X50 TMP BH PAS	7
***202	029-B00425	M4X25 SKT BH PAS	4
***203	068-441616	M4 WSHR 16OD FLT PAS	11
***205	029-B00625	M6X25 SKT BH PAS	8
***206	068-652016	M6 WSHR 200D FLT PAS	8
***303	DA-6008UK	ASSY BILLBOARD	5
***304	DA-60125UK	WH BILLBOARD HEADLIGHTS	1
***305	390-2505-030-AD	SLED RING 030 M3028WS2812B	2

(19) ASSY SW PLATE SZH (DA-2150UK)

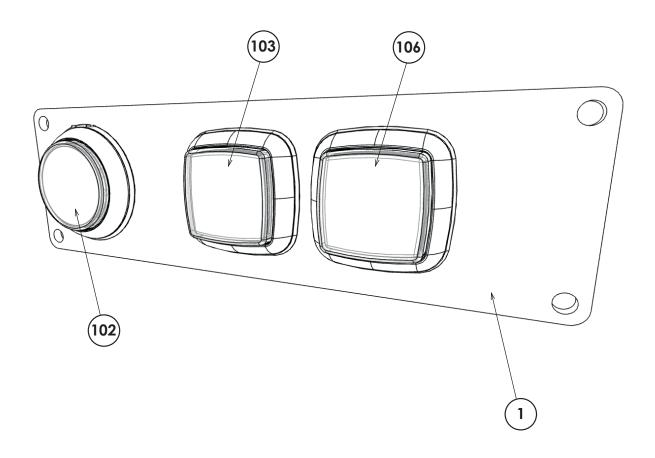

ITEM NO	PART NO	DESCRIPTION	QTY
****1	DA-2151UK	PLATE START/VIEW SZH PB	1
*****103	509-6007-6BB YY 509-6007-0BB RR 509-6007-0BB GG	PB SW W/L 12V 26-13 6BB YY PB SW W/L 12V 26-13 0BB RR PB SW W/L 12V 26-13 0BB GG	1 1 1
*****301	DA-60126UK	WH BUT PLT SUZO	1

19 WIRE COLOUR CODE TABLE

MARNING

The DC power wire color for this product is different from previous SEGA titles. Working from the previous wire colors will create a high risk of fire

The color codes for the wires used in the diagrams in the following chapter are as follows:

- A PINK
- B SKY BLUE
- C BROWN
- D PURPLE
- E LIGHT GREEN

Wires other than those of any of the above 5 single colors will be displayed by 2 alphanumeric characters:

- 1 RED
- 2 BLUE
- 3 YELLOW
- 4 GREEN
- 5 WHITE
- 7 ORANGE
- 8 BLACK
- 9 GRAY

If the right-hand side numeral of the code is 0, then the wire will be of a single color shown by the left-hand side numeral (see the above).


Note 1: If the right-hand side numeral is not 0, that particular wire has a spiral color code. The left-hand side character shows the base color and the right-hand side one (the spiral color).


<Example> 51.....WHITE/RED




Note 2: The character following the wire color code indicates the size of the wire.

U: AWG16K: AWG18L: AWG20None: AWG22

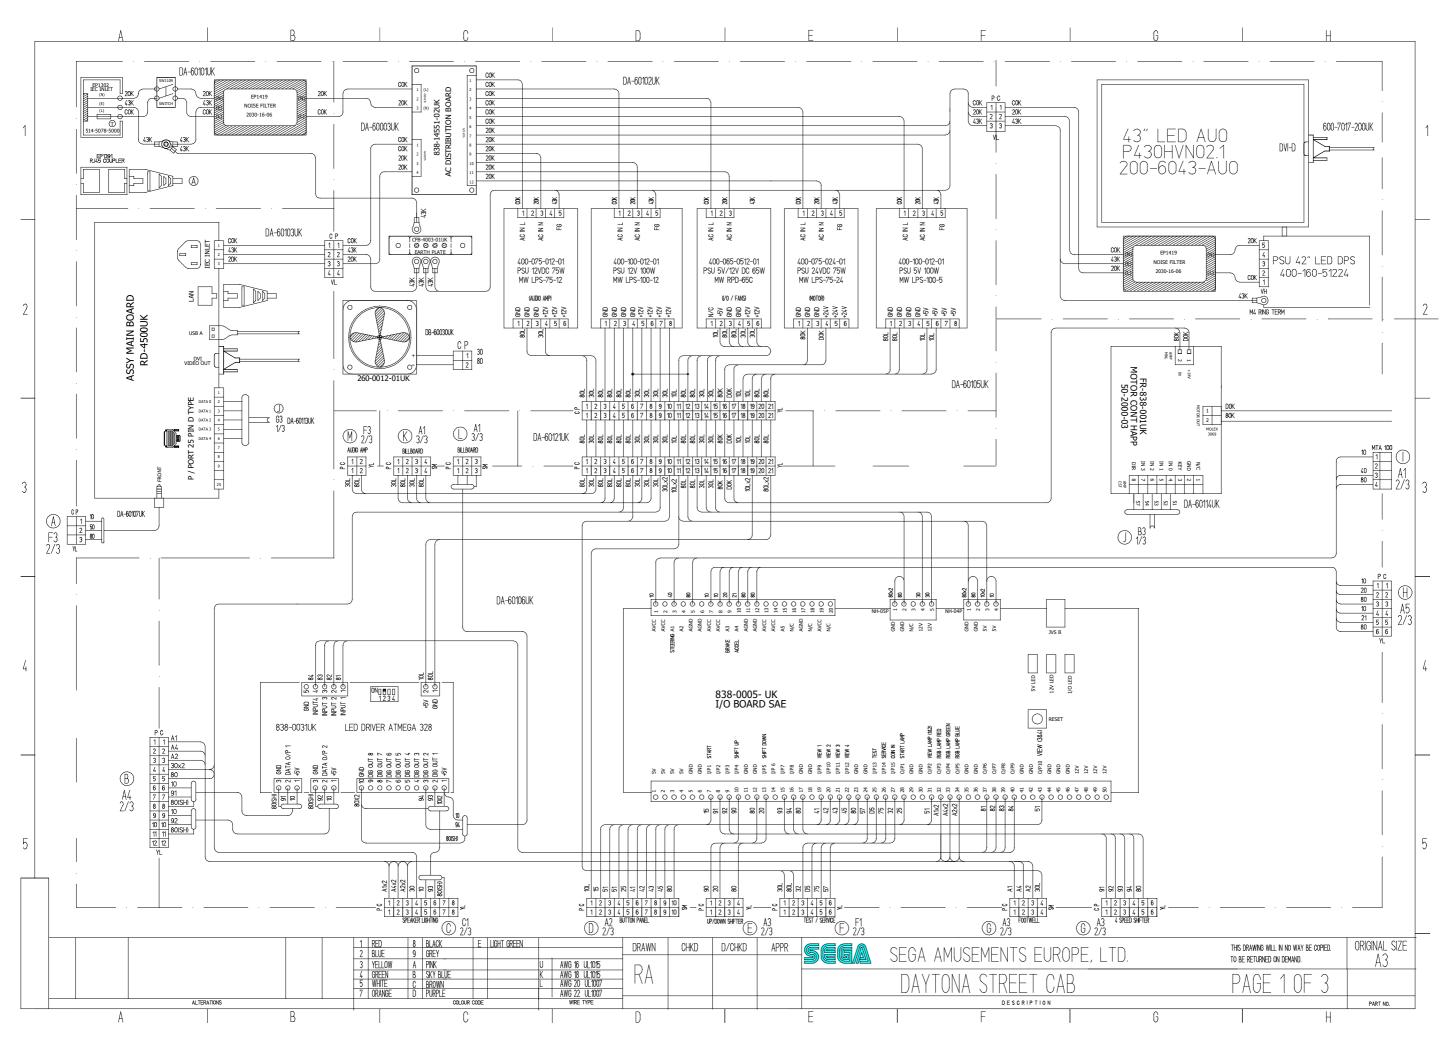

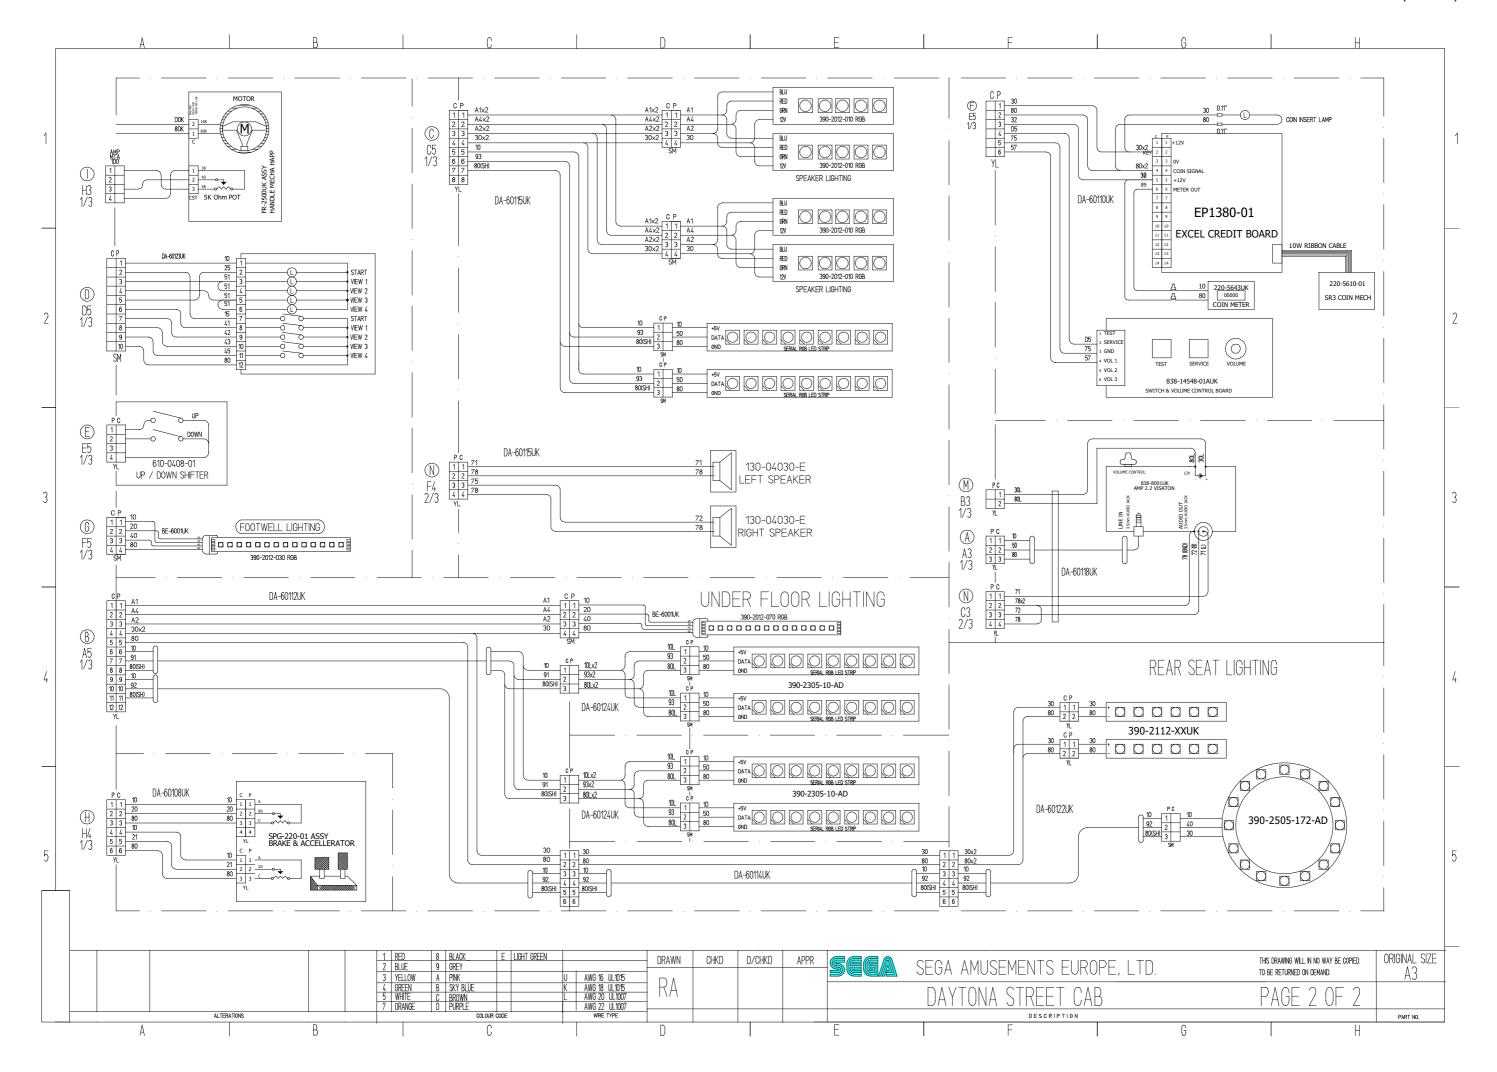

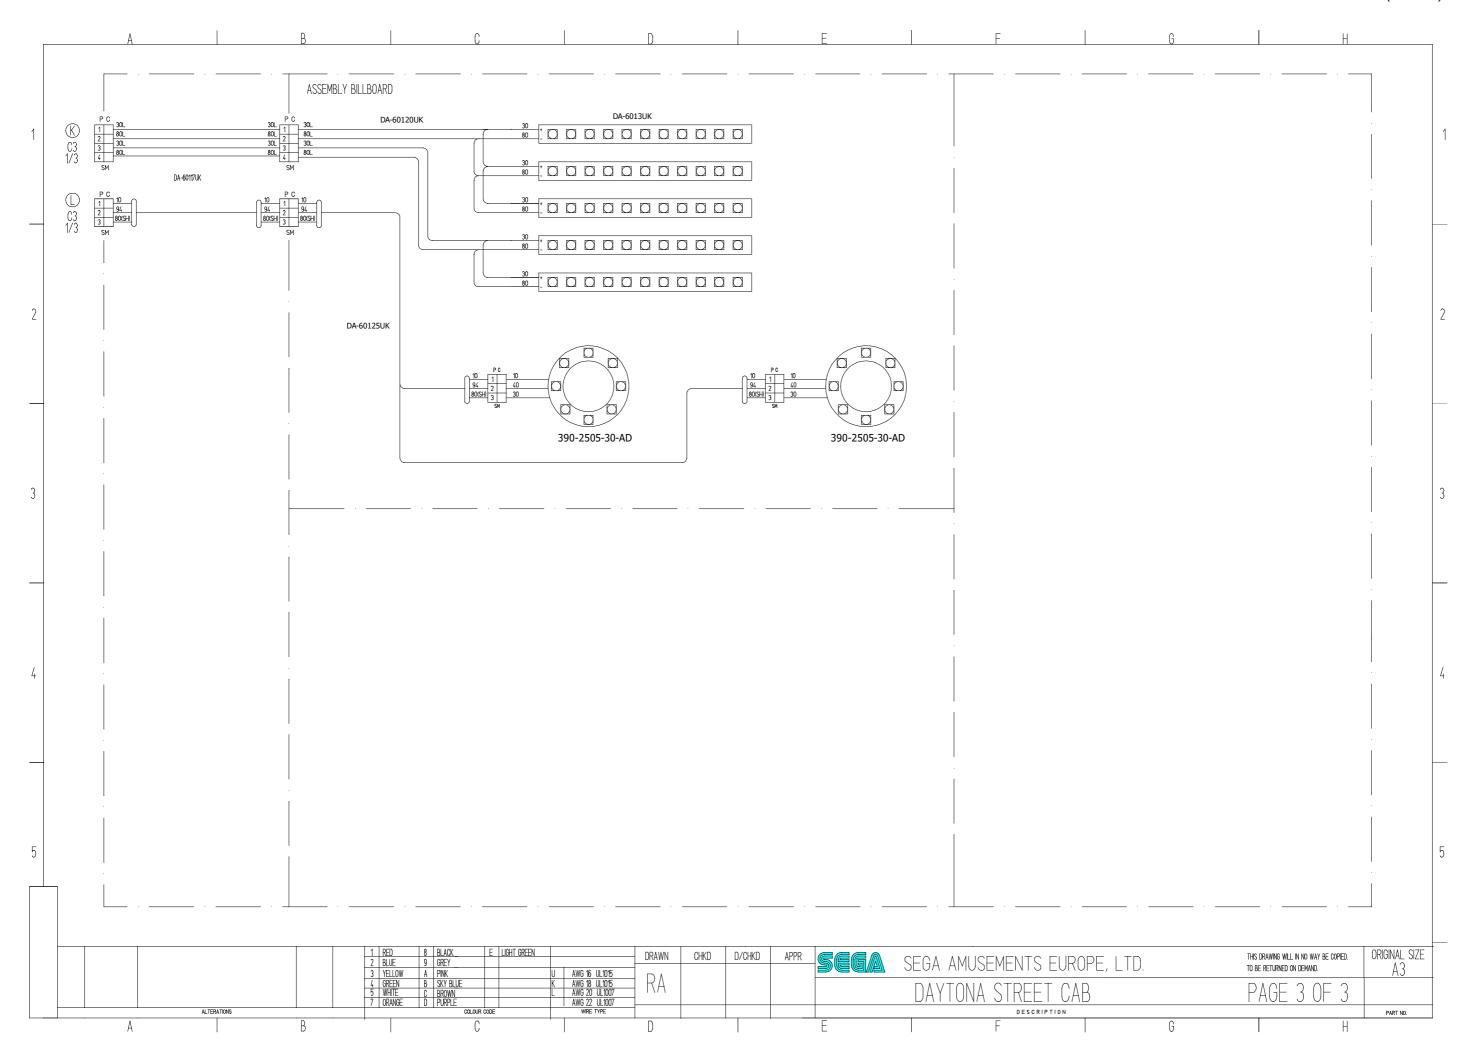

SPARES AND SERVICE CONTACT INFORMATION



- SEGA TOTAL SOLUTIONS -

42 Barwell Business Park Leatherhead Road, Chessington, Surrey, KT9 2NY United Kingdom

Parts: +44 (0) 2083918060 stssales@segaarcade.com

- TECHNICAL SUPPORT -

+44 (0) 2083918060 technical@segaarcade.com

- PLAY IT AMUSEMENTS -

870 Lively Blvd Wood Dale, IL, 602191 United States of America

Parts/Customer Service: +00 (1) 224 265 4287 Technical Support: +00 (1) 224 265 4283 PIA: support@playitamusements.com

