

Re-Waxing of front acrylic cover♪

1. Unscrew bolts from the front acrylic cover and then remove the front cover.



2. Spray poli-wax on a dry cloth.



3. Wipe the back of the front cover with the cloth.



4. Wipe the games play field and the ball rolling track



Poli-waxing prevents the ball from marking or gathering dust inside the games play field. It's Recommend that you wipe the inside of acrylic cover every 3 months.